

Lantech

T(P)WMR-5006

EN50155 Multifunction VPN Router w/1x WiFi 11ac + 1 LTE 4G + 2 serial ports + 6 Gigabit X-coded Ethernet switch (incl. 4 PoE ports)

T(P)WMR-5004

EN50155 Multifunction VPN Router w/1x WiFi 11ac + 1 LTE 4G + 2 serial ports + 4 Gigabit X-coded (PoE) Switch + 2 WAN/LAN

T(P)MR-5006

EN50155 Multifunction VPN Router up to 2 LTE 4G + 2 serial ports + 6 Gigabit X-coded Ethernet switch (incl. 4 PoE ports)

T(P)MR-5004

EN50155 Multifunction VPN Router up to 2 LTE 4G + 2 serial ports + 4 Gigabit X-coded (PoE) Switch + 2 WAN/LAN

User Manual (Hardware)



Jan. 2024

V1.10


Approval Information

Version 1.10	Name	Title	Date
Author	Greg Tsai	Marketing	2024.01.30
Verifier	Jacky Chou	HW QA	2024.01.30
Approver	Thomas Lee	RD head	2024.01.30

Version	Date	Content of Modification	Author(s)
V1.10	2024.01.30	Update the dimension drawing	Greg Tsai

Recommendation for Shielded network cables

STP cables have additional shielding material that is used to reduce external interference. The shield also reduces the emission at any point in the path of the cable. Our recommendation is to deploy an STP network cable in demanding electrical environments. Examples of demanding indoor environments are where the network cable is located in parallel with electrical mains supply cables or where large inductive loads such as motors or contactors are in close vicinity to the camera or its cable. It is also mandatory to use an STP cable where the power device (like IP camera) is used outdoors or where the network cable is routed outdoors.

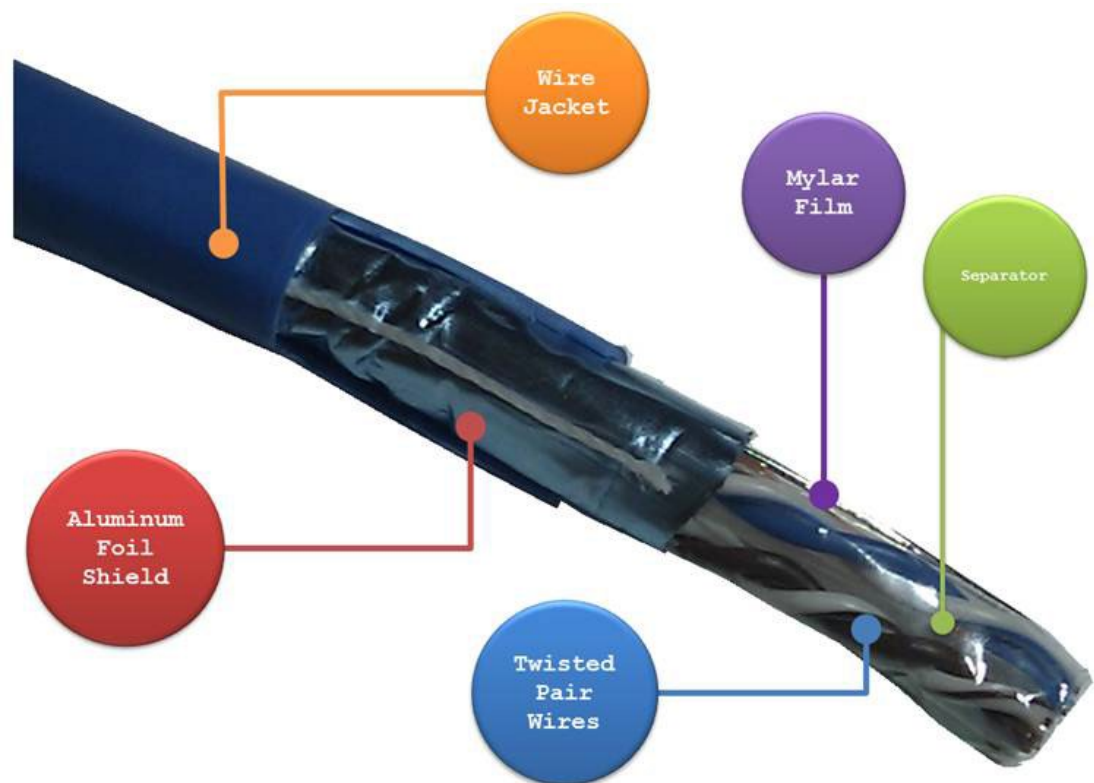

Important Notice

Lantech Communications Global, Inc. reserves the right to modify the equipment, its specification or this manual without prior notice, in the interest of improving performance, reliability, or servicing. At the time of publication all data is correct for the operation of the equipment at the voltage and/or temperature referred to. Performance *data* indicates typical values related to the particular product.

No part of this documentation or information supplied may be divulged to any third party without the express written consent of Lantech Communications Global Inc. Products offered may contain software which is proprietary to Lantech Communications Global Inc. The offer or supply of these products and services does not include or infer any transfer of ownership.

Interference Issues

This Equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a commercial or industrial installation. This equipment generates, uses, and can radiate radio frequency energy. It may cause harmful interference to radio communications if the equipment is not installed and used in accordance with the instructions.

FCC Warning

This Equipment has been tested and found to comply with the limits for a Class-A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. It may cause harmful interference to radio communications if the equipment is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CE Mark Warning

This is a Class-A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Content


Chapter 1 Hardware Description	6
1.1 Physical Dimension.....	6
1.2 Package Content:.....	9
1.3 IP Protection.....	9
1.4 LED Indicators.....	12
Chapter 2 Hardware Installation	14
2.1 Hardware installation.....	15
Chapter 3 Console Management	21
3.1. Connecting to the Console Port	21
3.2. Login in the Console Interface	21

Chapter 1 Hardware Description



In this paragraph, it will describe the Industrial router's hardware spec, port, cabling information, and wiring installation.



1.1 Physical Dimension

Aluminum case. IP-65/54,
178mm(W)x99mm(H)x103mm(D)

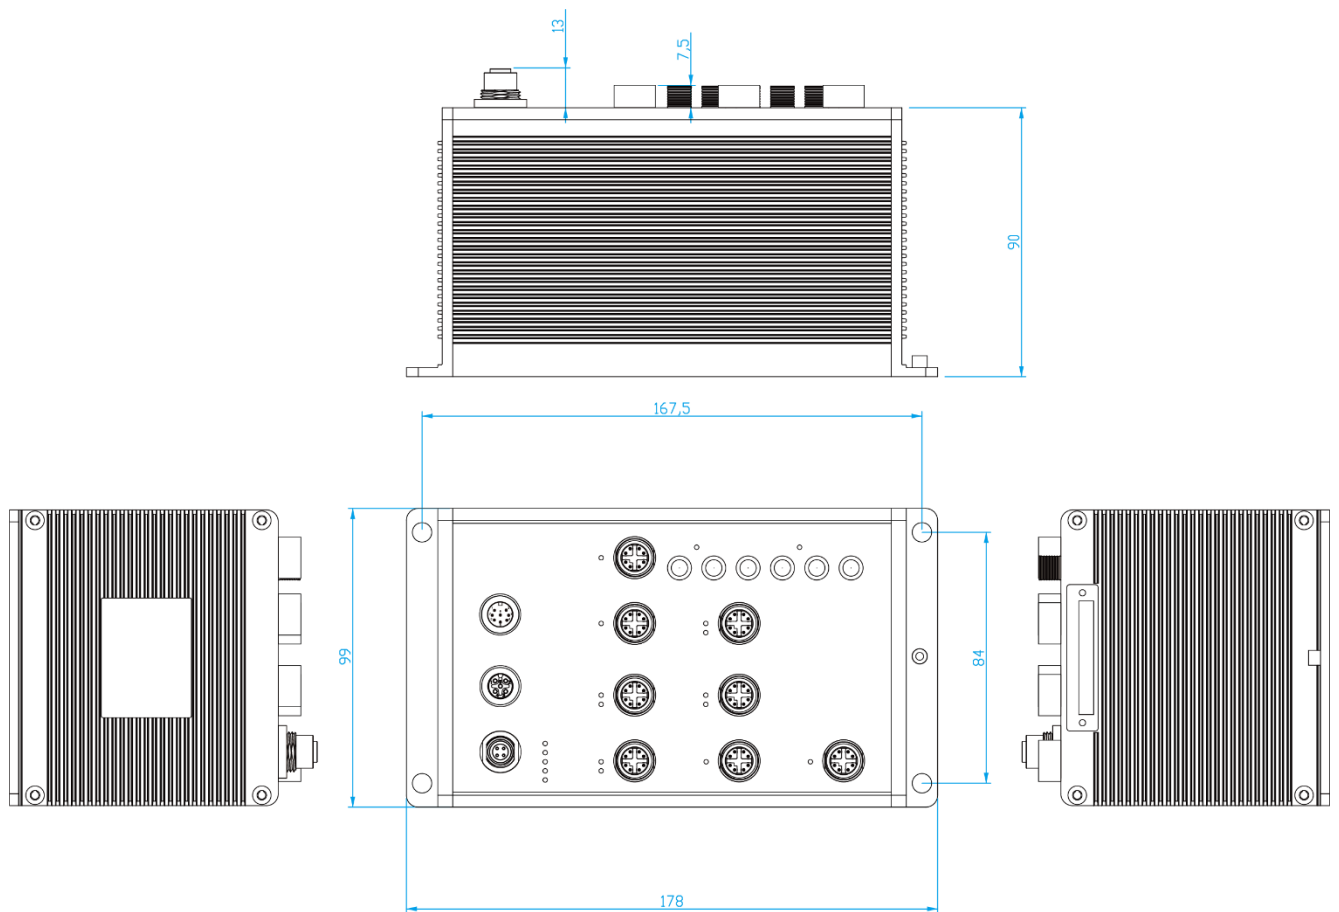

Port description of IP-65/54 series router

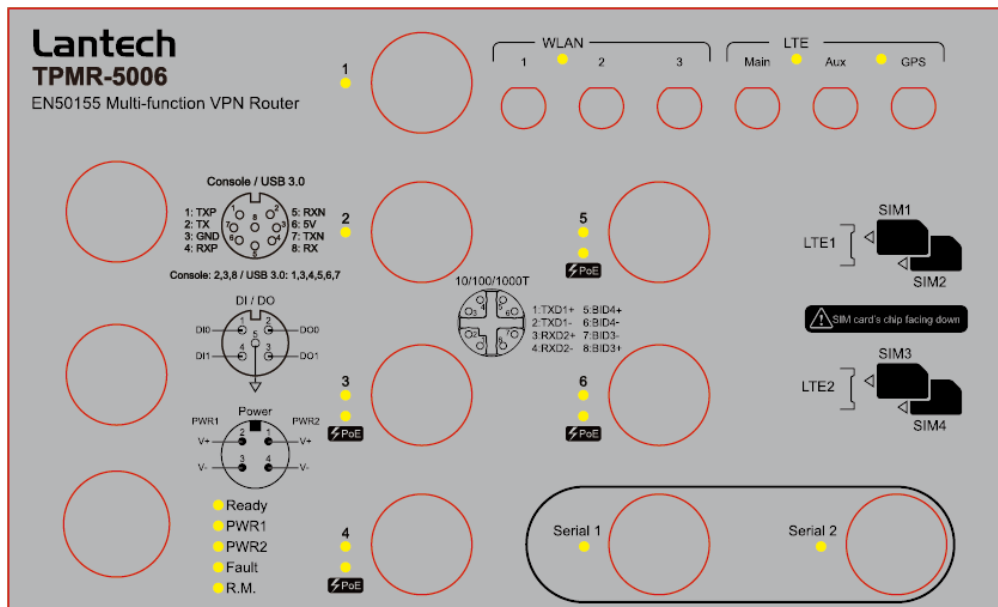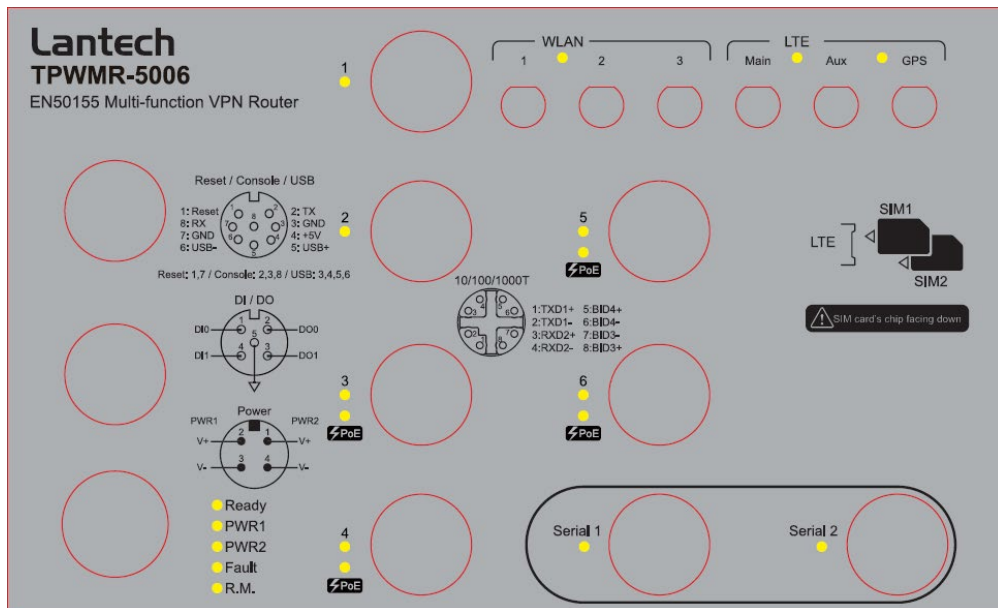

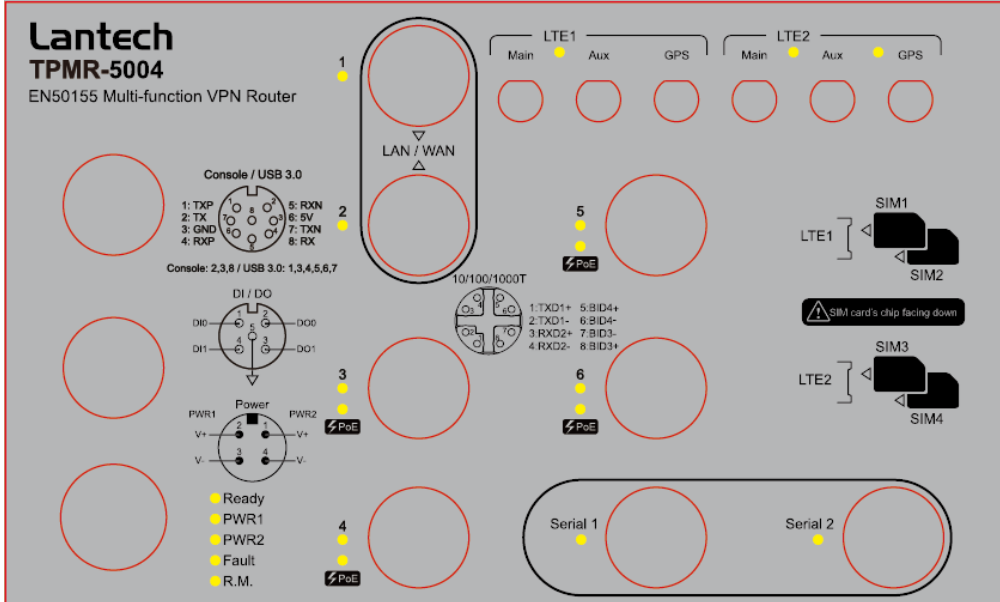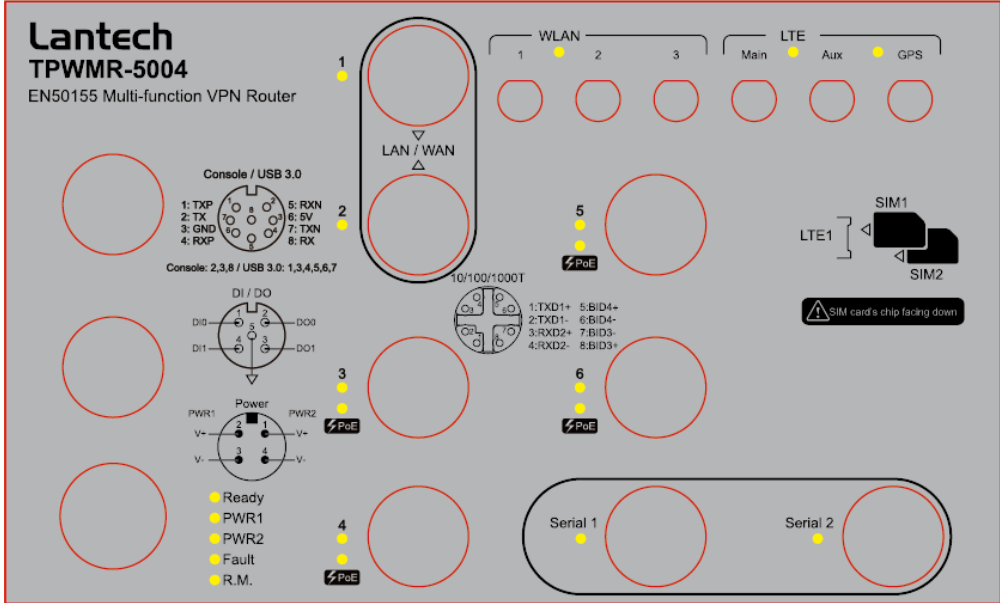

1.2 Package Content:

Industrial Router x1

Console cable x1

1.3 IP Protection

The **IP Code**, **Ingress Protection Rating**, sometimes also interpreted as **International Protection Rating**, classifies and rates the degree of protection provided against the intrusion (including body parts such as hands and fingers), dust, accidental contact, and water in *mechanical casings* and with electrical enclosures. It is published by the International Electrotechnical Commission (IEC)

Solid particle protection

The first digit indicates the level of protection that the enclosure provides against access to hazardous parts (e.g., electrical conductors, moving parts) and the ingress of solid foreign objects.

Level	Object size protected against	Effective against
0	—	No protection against contact and ingress of objects
1	>50 mm	Any large surface of the body, such as the back of a hand, but no protection against deliberate contact with a body part
2	>12.5 mm	Fingers or similar objects
3	>2.5 mm	Tools, thick wires, etc.
4	>1 mm	Most wires, screws, etc.
5	Dust protected	Ingress of dust is not entirely prevented, but it must not enter in sufficient quantity to interfere with the

		satisfactory operation of the equipment; complete protection against contact
6	Dust tight	No ingress of dust; complete protection against contact

Liquid ingress protection

The second digit indicates the level of protection that the enclosure provides against harmful ingress of water.

Level	Protected against	Testing for	Details
0	Not protected	—	—
1	Dripping water	Dripping water (vertically falling drops) shall have no harmful effect.	Test duration: 10 minutes Water equivalent to 1 mm rainfall per minute
2	Dripping water when tilted up to 15°	Vertically dripping water shall have no harmful effect when the enclosure is tilted at an angle up to 15° from its normal position.	Test duration: 10 minutes Water equivalent to 3 mm rainfall per minute
3	Spraying water	Water falling as a spray at any angle up to 60° from the vertical shall have no harmful effect.	Test duration: 5 minutes Water volume: 0.7 litres per minute Pressure: 80–100 kPa
4	Splashing of water	Water splashing against the enclosure from any direction shall have no harmful effect.	Test duration: 5 minutes Water volume: 10 litres per minute Pressure: 80–100 kPa

5	Water jets	Water projected by a nozzle (6.3 mm) against enclosure from any direction shall have no harmful effects.	Test duration: at least 15 minutes Water volume: 12.5 litres per minute Pressure: 30 kPa at distance of 3 m
6	Powerful water jets	Water projected in powerful jets (12.5 mm nozzle) against the enclosure from any direction shall have no harmful effects.	Test duration: at least 3 minutes Water volume: 100 litres per minute Pressure: 100 kPa at distance of 3 m
7	Immersion up to 1 m	Ingress of water in harmful quantity shall not be possible when the enclosure is immersed in water under defined conditions of pressure and time (up to 1 m of submersion).	Test duration: 30 minutes Immersion at depth of at least 1 m measured at bottom of device, and at least 15 cm measured at top of device
8	Immersion beyond 1 m	The equipment is suitable for continuous immersion in water under conditions which shall be specified by the manufacturer. Normally, this will mean that the equipment is hermetically sealed. However, with certain types of equipment, it can mean that water can enter but only in such a manner that	Test duration: continuous immersion in water Depth specified by manufacturer

		it produces no harmful effects.	
9	Powerful high temperature water jets	Protected against close-range high pressure, high temperature spray downs.	—

1.4 LED Indicators

The diagnostic LEDs that provide real-time information of system and optional status are located on the front panel of the industrial router. The following table provides the description of the LED status and their meanings for the router.

LED	Color	Status	Meaning
R.M	Green	On	The router unit is owner switch of ITU-Ring
		Off	The router is not owner switch
PWR1	Green	On	Power 1 is active
		Off	Power 1 is inactive
PWR2	Green	On	Power 2 is active
		Off	Power 2 is inactive
FAULT	Red	On	Power or port failure
		Off	No failure
Ready	Green	On	Power is on and functioning normally.
P1 ~ P6	Green (Link/ Act)	On	A network device is detected.
		Blinking	The port is transmitting or receiving packets from the TX device.
		Off	No device attached
PoE (Only)	Green	On	The port is operating in PoE mode.

on PoE models)		Off	The port is not operating in PoE mode.
LTE	Green	On	Normal operate
		Blinking (On 0.5, Off 0.5s)	Init LTE Module Failed
		Blinking (On 2s, Off 2s)	Searching or Signal is too weak
		Blinking (On 1, Off 1s)	PIN Code or PUK failed SIM card detection failed
GPS	Green	On	GPS is positioned
		Blinking	GPS is positioning
Serial 1 & Serial 2	Green	Blinking	The serial is transmitting or receiving data.
		Off	Serial is inactive

Chapter 2 Hardware Installation

⚠ Notice
Correctly connecting the grounding cable is crucial to lightning protection and EMI protection. To avoid damages caused by surge or EFT, using STP cable is highly suggested.
This is a Non PoE Galvanic Isolated model. Do not use units' PoE ports to uplink to another PoE switch in vehicle applications. (May Cause Damage)


For POE models: Do not use units' POE ports to uplink to another POE switch in vehicle applications. (May Cause Damage) Lantech strongly advise the installation of a Galvanic isolated DC/DC converter between the power supply and the Ethernet switch on all Non-Isolated models. Please contact the sales team for advice on which models support isolated power design.




Using a 90 degree M12 X-coded cable is NOT SUGGESTED. It may cause damage to the connector on the router. Using a 180 degree M12 cable is highly recommended.

When using a 90 degree M12 X-coded cable, please follow the installation guide as below:

Step 1. Make sure the direction of X-coded connector is correct and the connector is properly inserted.

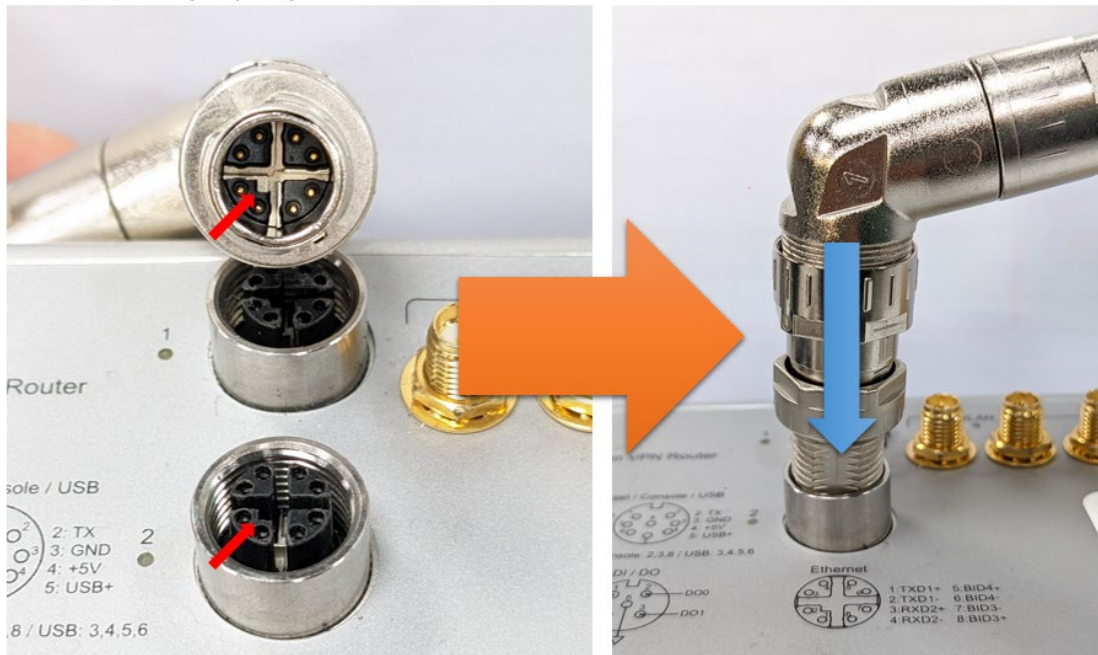

Step 2. Fasten the nut. Do not rotate the 90 degree (L-shape) part.

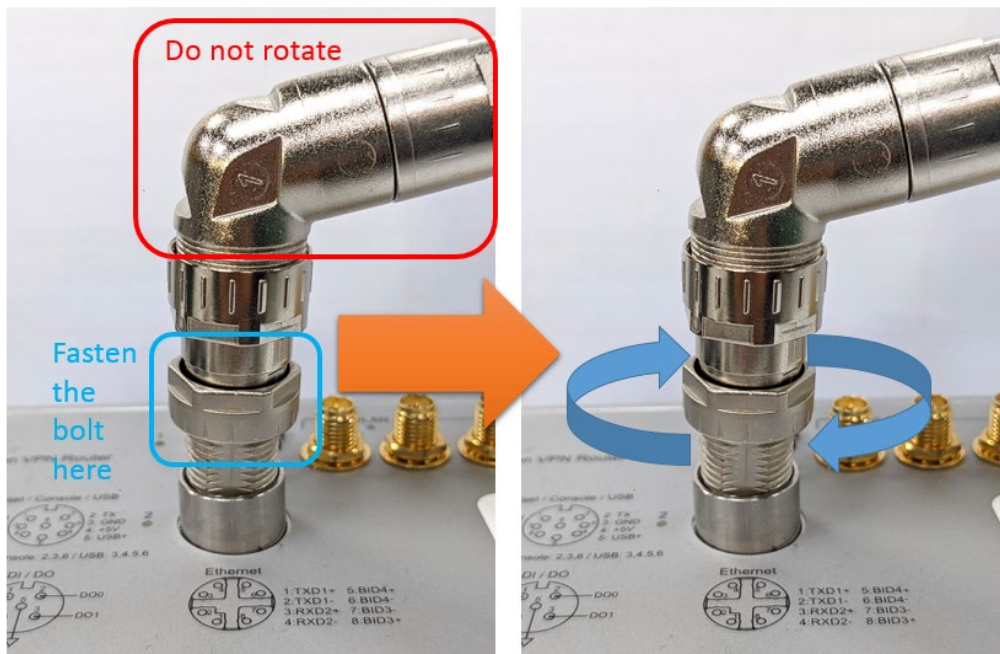

2.1 Hardware installation

2.1.1 Unpack router and check the accessory with packing content list


2.1.2 Mount the router on desired position. For the best ventilation, it is suggested to mount the router on metallic surface.

2.1.3 Connect the M12 connector of power input.

- Voltage of Power Input

WV model:
The power input voltage can be from 16.8V to 137.5VDC.


- Dual Power Input

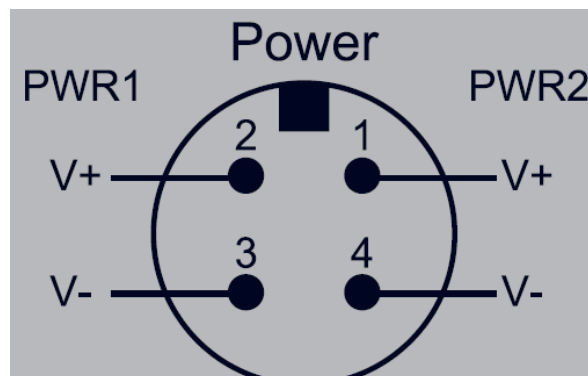

Pin assignment of Power input

The power input can be supported redundantly. The supply voltage is electrically isolated from the housing.

Note: With single power supply of the mains voltage, the device will report a power failure. You can disable this power fail event via web browser.

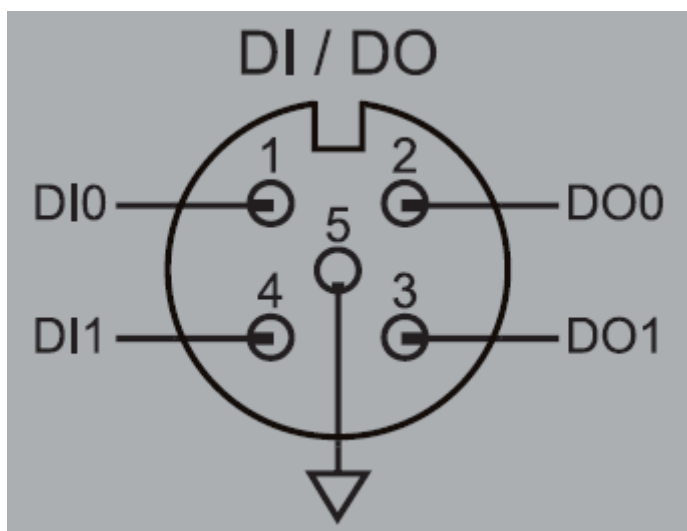

Pin assignment of DI/DO

2.1.4 Fitting the device, grounding

Install the system in a dry and clean area to protect the router to get exposed with dirt.

Plug the connector to the power supply plug then turn on the power supply.

■ **Ground**



The chassis is grounded via a separate ground nut (M3).

Use toothed locking washers for a good electrical connection.





Ground screw of router

2.1.5 Connect the M12 connector with RJ-45 data cable, ports are not used shall be capped that comes with the package to insulate the surrounding.

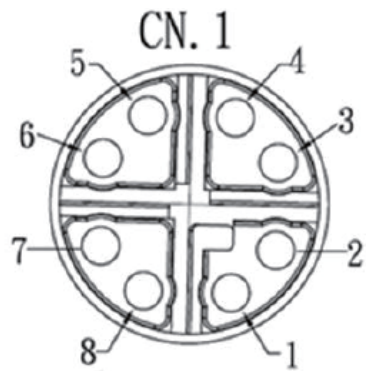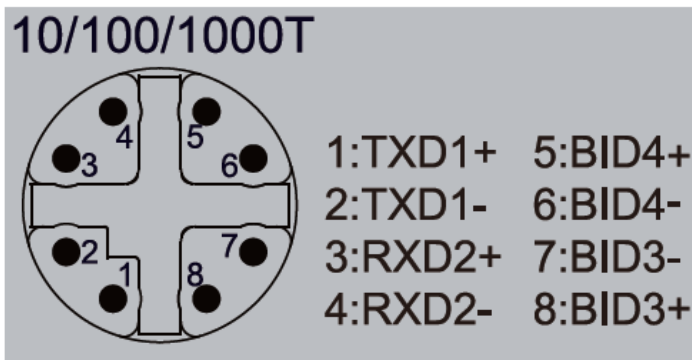


Switch connector <-----> Cable connector

Shell	Gnd	Shell	
1	Orange/ White	1	TWIST
2	Orange	2	
3	Green/ White	3	TWIST
4	Green	6	
5	Brown/ White	7	TWIST
6	Brown	8	
7	Blue/ White	5	TWIST
8	Blue	4	
CN. 1	Wire Color	CN. 2	
	PIN	OUT	

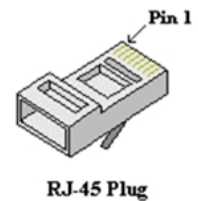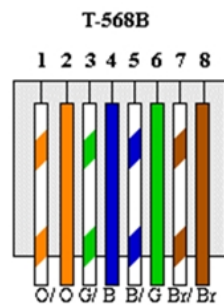

Pin assignment of M12 10/100/1000T network connector


2.1.6 Connect the M12 serial connector with RS232/RS422/RS485 cable, ports are not used shall be capped that comes with the package to insulate the surrounding.

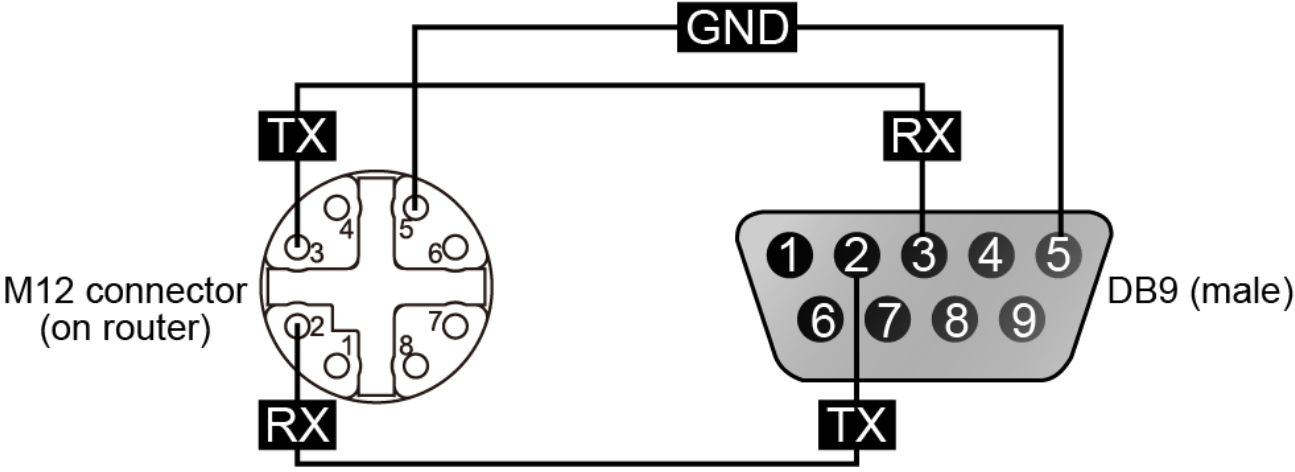

Note:

- The serial connectors are only for connecting RS232 or RS422 or RS485, depending on models. (Model name -2S: RS232; Model name -2SA: RS422; Model name -2SB: RS485) **DO NOT** connect Ethernet or PoE to serial ports. It may cause damage to the router.


2.1.7 Connect the M12 connector to USB if needed

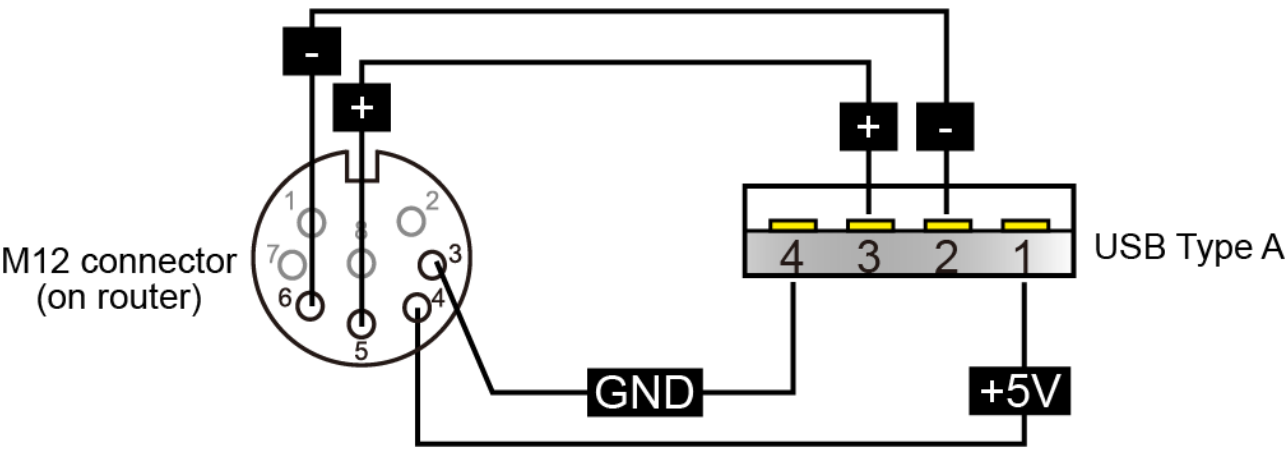

Note: The USB port is USB 2.0 speed, not USB 3.0

2.1.8 Insert the card into SIM slot in the correct orientation.

1. Turn off power of the router
2. Use a screwdriver to loosen the screws and remove the SIM card cover.
3. Insert one or two 3G/4G SIM cards into the SIM card slots located on the bottom of the SIM card slot
4. Turn on power of the router
5. Reattach the cover.

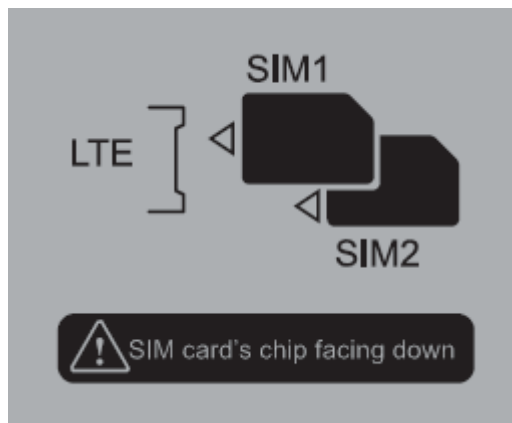


Note:

- The protection class IP65/54 is only achieved when bolted together.
- The other components attaching to the system have to meet with the IP65/54 protection class in order to reach the whole system IP65/54 protection.
- Empty ports must be sealed with the protective caps supplied.

Chapter 3 Console Management

3.1. Connecting to the Console Port

The supplied cable which one end is M12 8-pole connector and the other end is RS-232 connector. Attach the end of RS-232 connector to PC or terminal and the other end of M12 connector to the console port of the router. The connected terminal or PC must support the terminal emulation program.

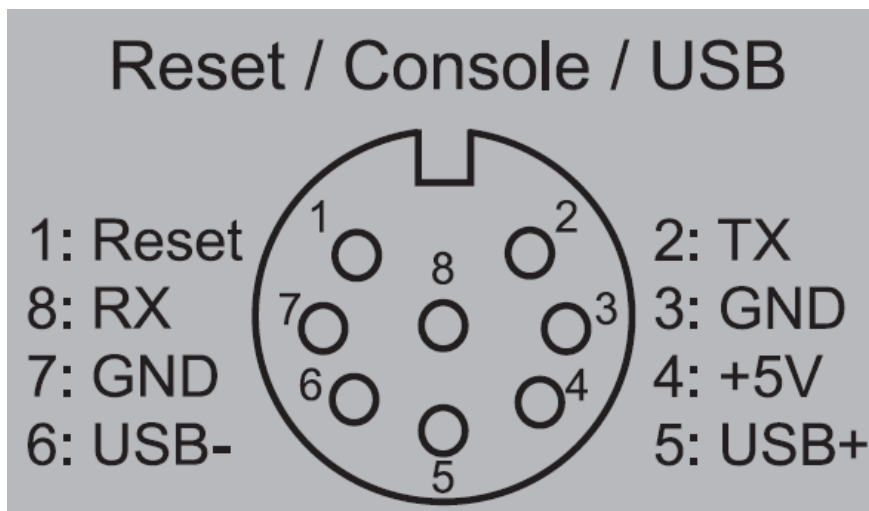

3.2. Login in the Console Interface

When the connection between Router and PC is ready, turn on the PC and run a terminal emulation program or **Hyper Terminal** and configure its **communication parameters** to match the following default characteristics of the console port:


Baud Rate: 115200 bps

Data Bits: 8

Parity: none


Stop Bit: 1

Flow control: None

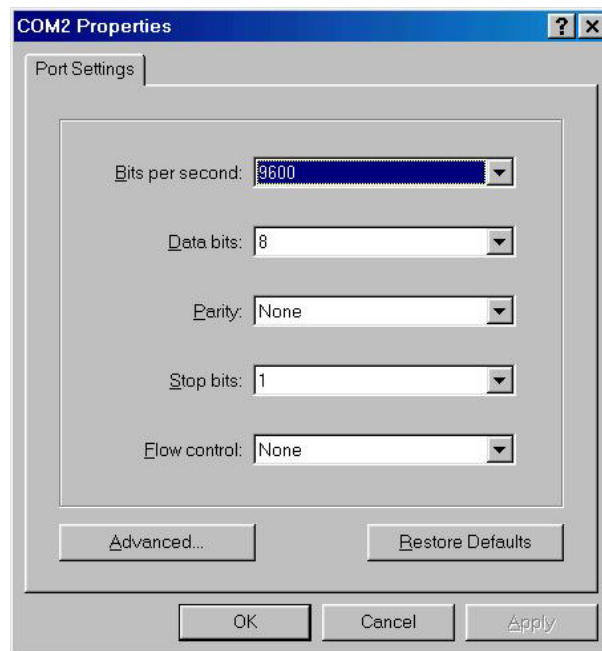

The settings of communication parameters

Having finished the parameter settings, click '**OK**'. When the blank screen shows up, press Enter key to have the login prompt appears. Key in '**admin**' (default value) for both User name and Password (use **Enter** key to router), then press Enter and the Main Menu of console management appears. Please see below figure for login screen.

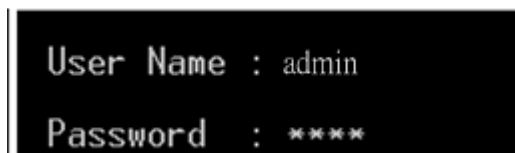

Console login interface

=====Notice=====

For web-based management, please refer to our "Software Management Manual". Please contact support@lantechcom.tw for more information.