

Lantech

I(P)GS-6416XSFP

I(P)GS-6488XSFP

I(P)GS-L6408XSFP

I(P)GS-5416MGSFP

I(P)GS-5488MGSFP

I(P)GS-L5408MGSFP

I(P)GS-5016

IP30-rated OS3 Industrial Managed Ethernet Switch

User Manual (Hardware)



V1.08

NOV. 2024

RP-001-31


Approval Information

Version 1.08	Name	Title	Date
Author	Greg Tsai	Marketing	2024.11.27
Verifier	Jacky Chou	HW QA	2024.11.27
Approver	Thomas Lee	RD head	2024.11.27


Version	Date	Content of Modification	Author(s)
V1.01	2022.03.04	Update the PoE warning	Greg Tsai
V1.02	2022.03.09	Update the PoE warning	Greg Tsai
V1.03	2022.09.12	Typo correction	Greg Tsai
V1.04	2022.10.28	Update the PoE warning	Greg Tsai
V1.05	2022.11.23	Update the battery information	Greg Tsai
V1.06	2023.10.16	Update the PoE warning	Greg Tsai
V1.07	2024.11.20	Update on PoE Budget Usage Guidelines	Greg Tsai
V1.08	2024.11.27	Update the DIN Rail installation guide	Greg Tsai

Recommendation for Shielded network cables

STP cables have additional shielding material that is used to reduce external interference. The shield also reduces the emission at any point in the path of the cable. Our recommendation is to deploy an STP network cable in demanding electrical environments. Examples of demanding indoor environments are where the network cable is located in parallel with electrical mains supply cables or where large inductive loads such as motors or contactors are in close vicinity to the camera or its cable. It is also mandatory to use an STP cable where the power device (like IP camera) is used outdoors or where the network cable is routed outdoors.

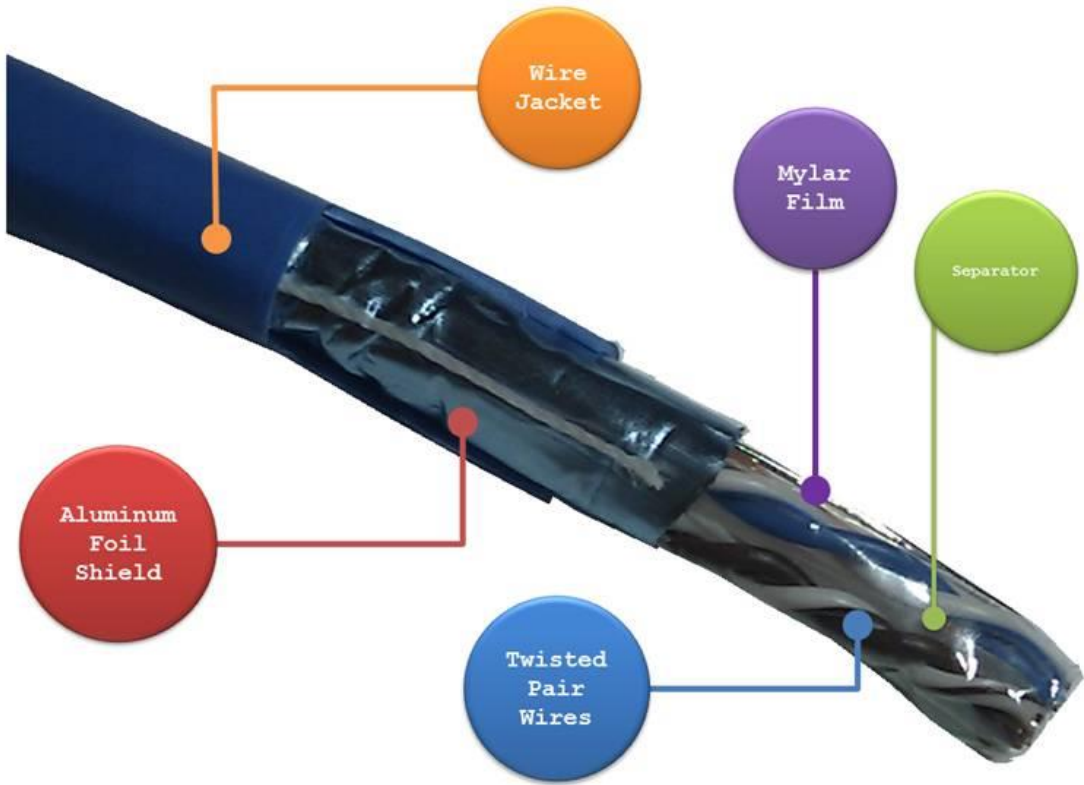

Notice – Battery Inside

 **Notice**

A battery is inside the device to maintain the RTC function with estimated battery life of 10 years. The lost of battery power will only effect the RTC function.

A battery is inside the device to maintain the RTC function with estimated battery life of 10 years. The lost of battery power will only effect the RTC function.

Important Notice

Lantech Communications Global, Inc. reserves the right to modify the equipment, its specification or this manual without prior notice, in the interest of improving performance, reliability, or servicing. At the time of publication all data is correct for the operation of the equipment at the voltage and/or temperature referred to. Performance *data* indicates typical values related to the particular product.

No part of this documentation or information supplied may be divulged to any third party without the express written consent of Lantech Communications Global Inc. Products offered may contain software which is proprietary to Lantech Communications Global Inc. The offer or supply of these products and services does not include or infer any transfer of ownership.

Interference Issues

This Equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a commercial or industrial installation. This equipment generates, uses, and can radiate radio frequency energy. It may cause harmful interference to radio communications if the equipment is not installed and used in accordance with the instructions.

FCC Warning

This Equipment has been tested and found to comply with the limits for a Class-A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy. It may cause harmful interference to radio communications if the equipment is not installed and used in accordance with the instructions. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CE Mark Warning

This is a Class-A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

Content

Chapter 1 Series Line-ups.....	1
Chapter 2 Hardware Description	3
2.1 Physical Dimension.....	3
2.2 IP Protection.....	10
2.3 Front Panel.....	14
2.4 LED Indicators.....	17
Chapter 3 Hardware Installation	19
3.1 Hardware installation	19
3.2 DIN-Rail Mounting.....	20
3.3 Wall Mount Plate Mounting	24
3.4 Wiring the Power Inputs	25
3.4.1. For 12V / 24V / 48V models	25
3.4.2. For HV models.....	26
3.5 Wiring the Fault Alarm Contact	27
3.6 Wiring the DIDO	28
3.7 Cabling	29
3.7 USB Dongle	32
Chapter 4 Console Management	33
4.1. Connecting to the Console Port	33
4.2. Login in the Console Interface	34

Chapter 1 Series Line-ups

The Lantech Ethernet switches are high performance L2+ (All Gigabit) Ethernet switches which provides L2 wire speed and advanced security function for network aggregation deployment.

Model name	Product description
IPGS-6416XSFP	16 10/100/1000T + 4 1G/2.5G/10G SFP+ w/16 PoE at/af L2+ Industrial Managed Ethernet Switch
IPGS-6488XSFP	8 10/100/1000T + 8 100M/1G SFP + 4 1G/2.5G/10G SFP+ w/8 PoE at/af L2+ Industrial Managed Ethernet Switch
IPGS-L6408XSFP	8 10/100/1000T + 4 1G/2.5G/10G SFP+ w/8 PoE at/af L2+ Industrial Managed Ethernet Switch
IGS-6416XSFP	16 10/100/1000T + 4 1G/2.5G/10G SFP+ L2+ Industrial Managed Ethernet Switch
IGS-6488XSFP	8 10/100/1000T + 8 100M/1G SFP + 4 1G/2.5G/10G SFP+ L2+ Industrial Managed Ethernet Switch
IGS-L6408XSFP	8 10/100/1000T + 4 1G/2.5G/10G SFP+ L2+ Industrial Managed Ethernet Switch
IPGS-5416MGSFP	16 10/100/1000T + 4 1G/2.5G SFP+ w/16 PoE at/af L2+ Industrial Managed Ethernet Switch
IPGS-5488MGSFP	8 10/100/1000T + 8 100M/1G SFP + 4 1G/2.5G SFP+ w/8 PoE at/af L2+ Industrial Managed Ethernet Switch
IPGS-L5408MGSFP	8 10/100/1000T + 4 1G/2.5G SFP+ w/8 PoE at/af L2+ Industrial Managed Ethernet Switch
IPGS-5016	16 10/100/1000T w/16 PoE at/af L2+ Industrial Managed Ethernet Switch
IGS-5416MGSFP	16 10/100/1000T + 4 1G/2.5G SFP+ L2+ Industrial Managed Ethernet Switch
IGS-5488MGSFP	8 10/100/1000T + 8 100M/1G SFP + 4 1G/2.5G SFP+ L2+ Industrial Managed Ethernet Switch
IGS-L5408MGSFP	8 10/100/1000T + 4 1G/2.5G SFP+ L2+ Industrial Managed Ethernet Switch

IGS-5016	16 10/100/1000T at/af L2+ Industrial Managed Ethernet Switch
----------	--

*For detail specifications, please refer to product datasheet.

**The revise authority rights of product specifications belong to Lantech Communications Global, Inc. Lantech may make changes to specification and product descriptions at anytime, without notice.


Chapter 2 Hardware Description

In this paragraph, it will describe the Industrial switch's dimension, port, cabling information, and wiring installation.

2.1 Physical Dimension


IPGS-6416XSFP

Metal case. IP-30, 95.84 (W) x 135 (D) x 152 (H) mm

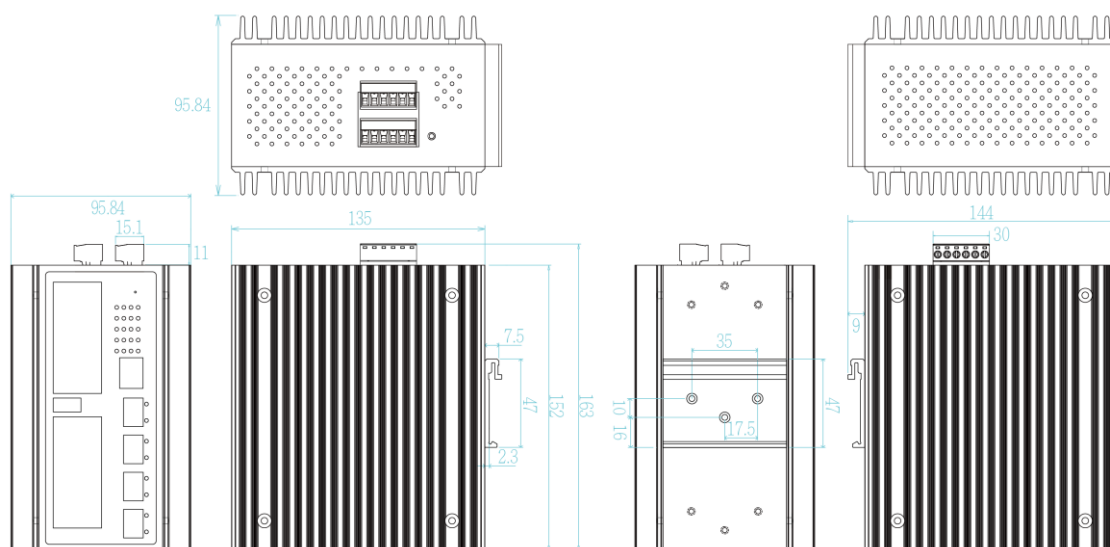


IPGS-6488XSFP

Metal case. IP-30, 95.84 (W) x 135 (D) x 152 (H) mm

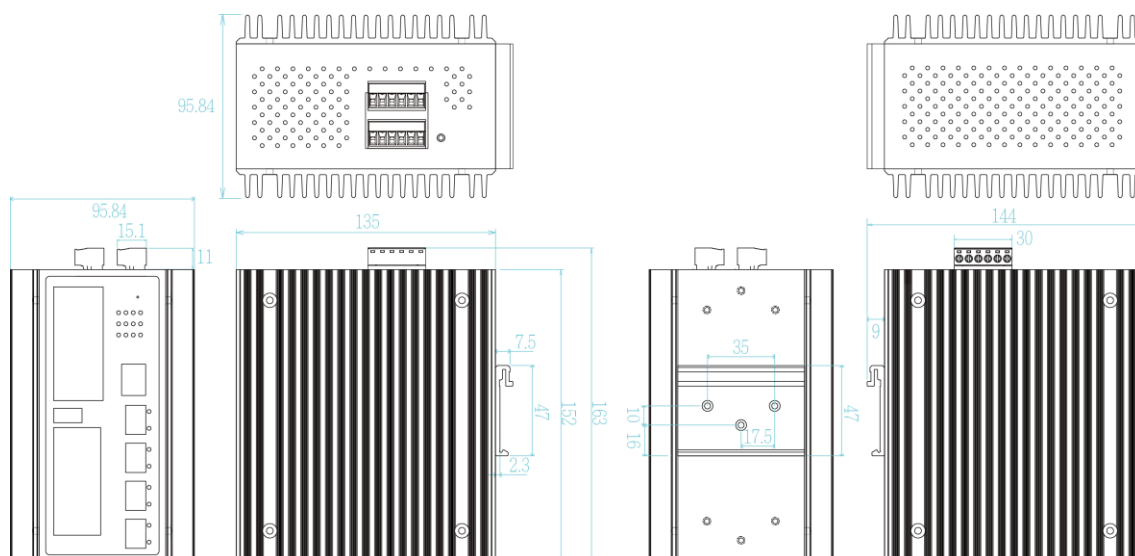


IPGS-L6408XSFP

Metal case. IP-30, 95.84 (W) x 135 (D) x 152 (H) mm

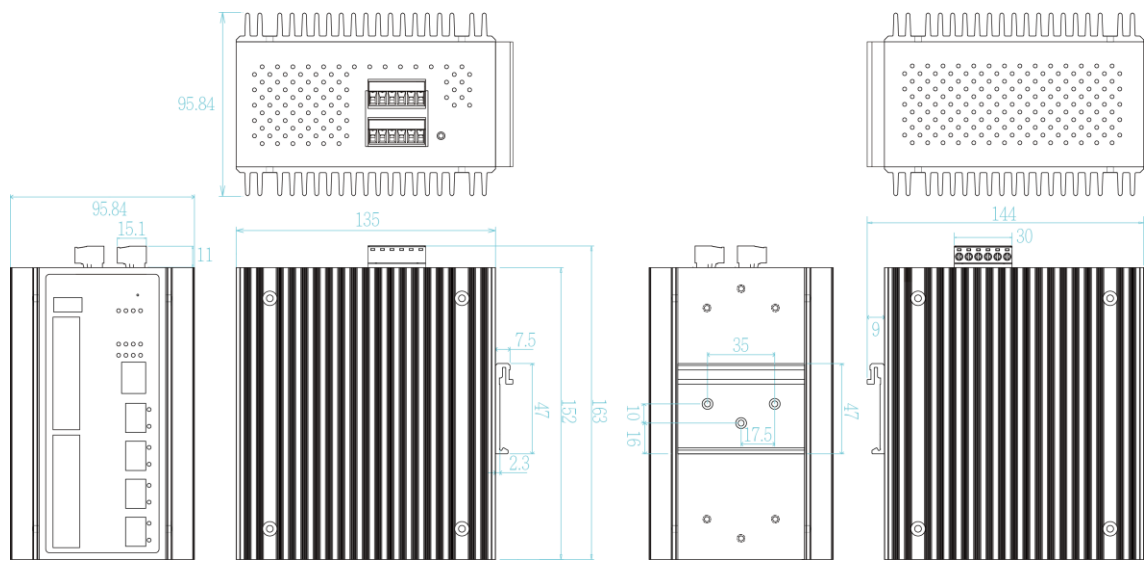


IGS-6416XSFP-24V

Metal case. IP-30, 74 (W) x 135 (D) x 152 (H) mm

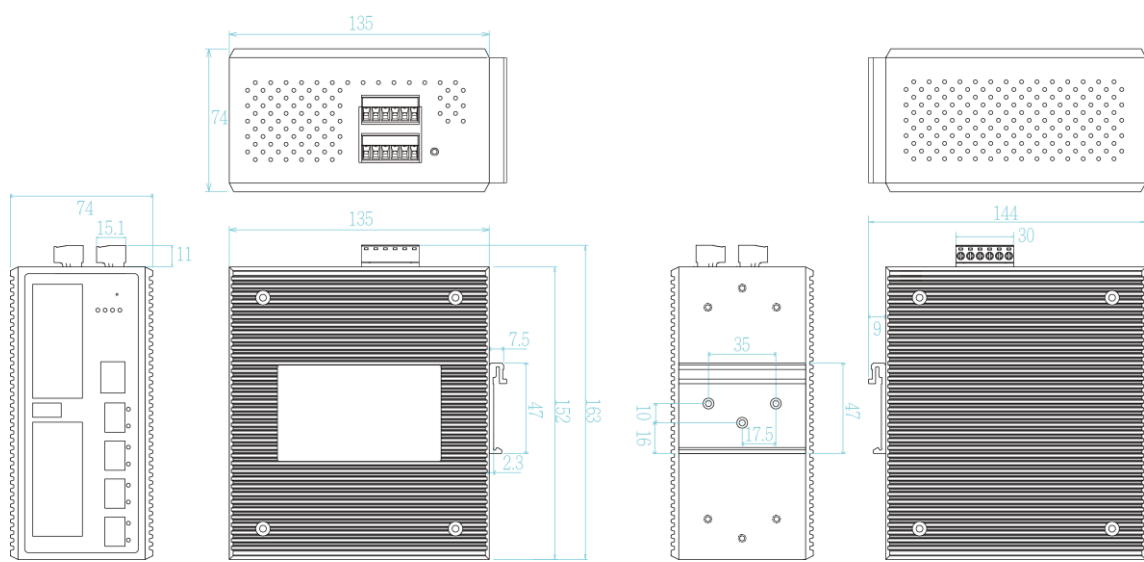


IGS-6416XSFP-HV

Metal case. IP-30, 82 (W) x 165 (D) x 152 (H) mm

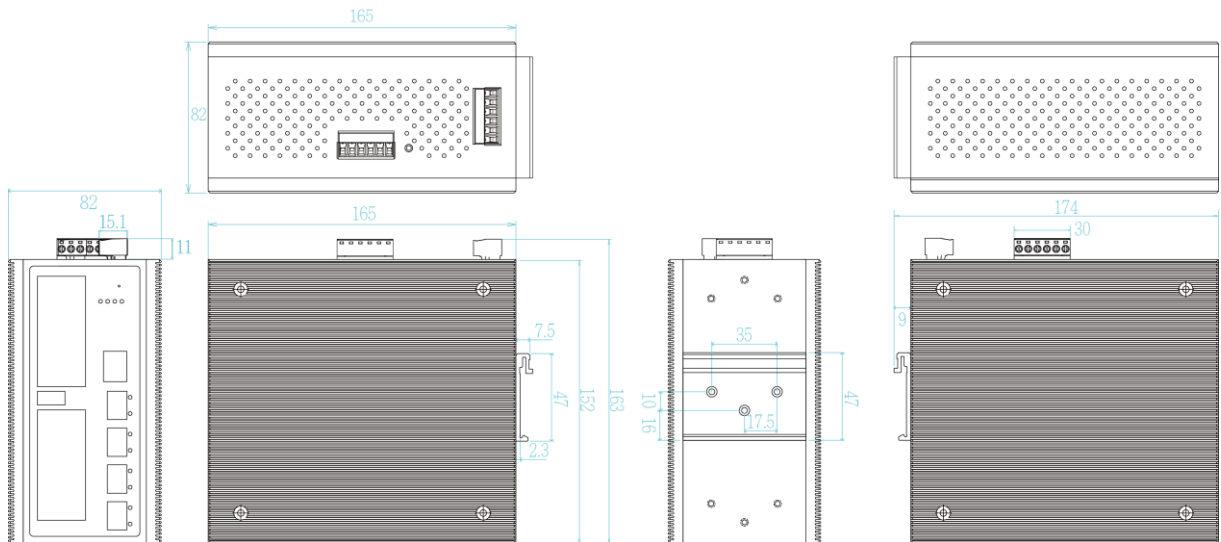


IGS-6488XSFP-24V

Metal case. IP-30, 74 (W) x 135 (D) x 152 (H) mm

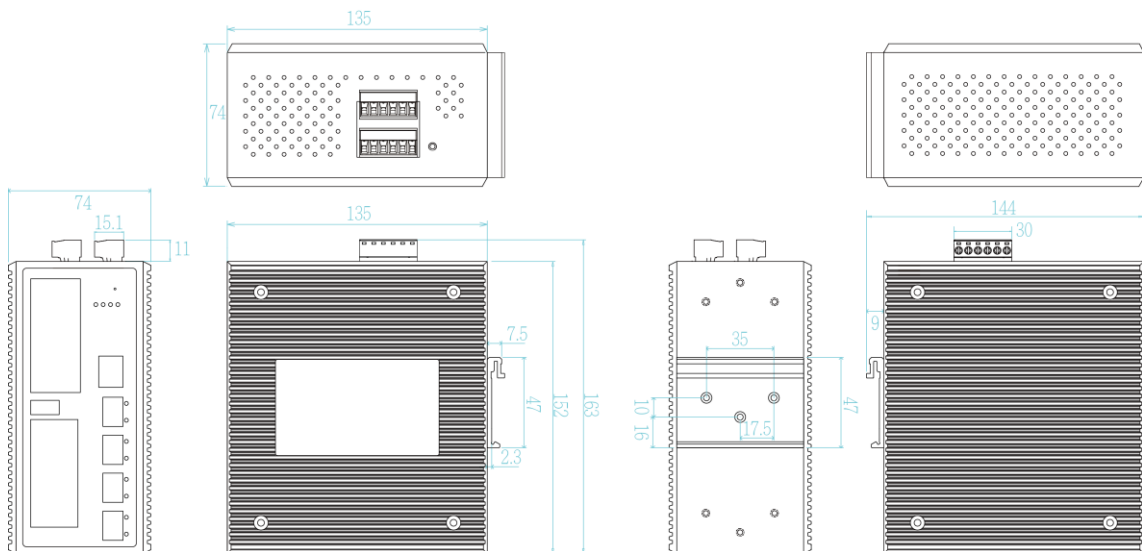


IGS-6488XSFP-HV

Metal case. IP-30, 82 (W) x 135 (D) x 152 (H) mm

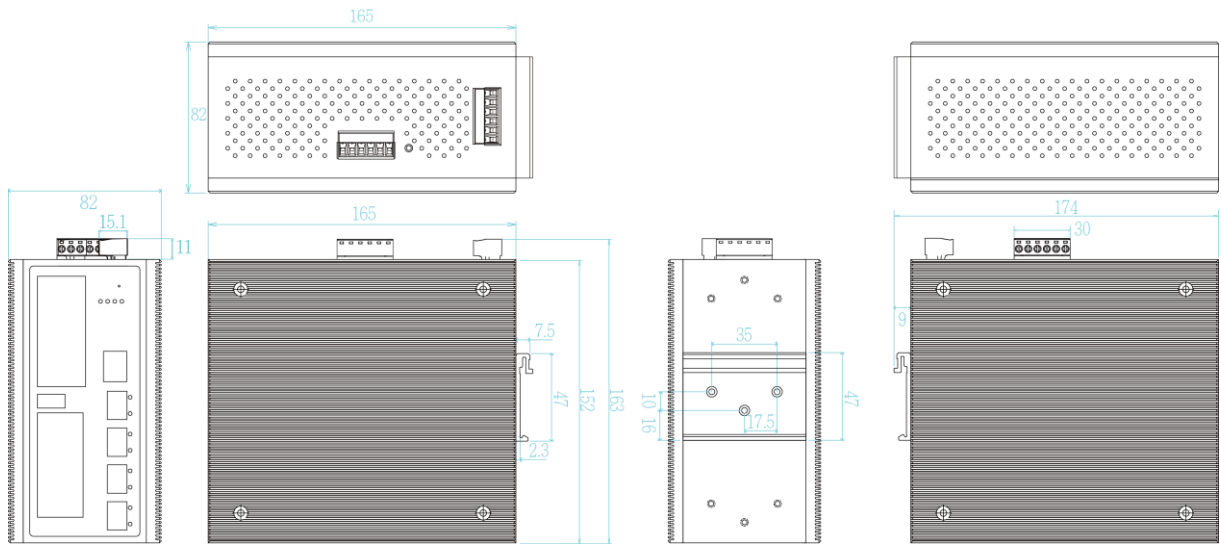


IPGS-5416MGSFP

Metal case. IP-30, 74 (W) x 135 (D) x 152 (H) mm

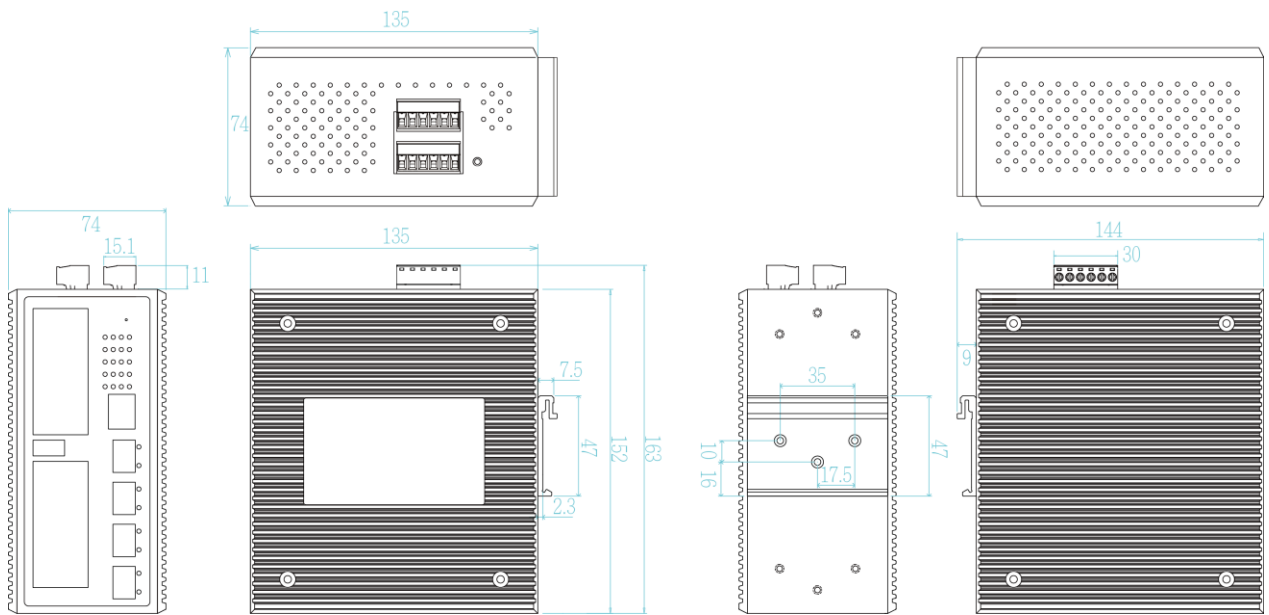


IPGS-5488MGSFP

Metal case. IP-30, 74 (W) x 135 (D) x 152 (H) mm

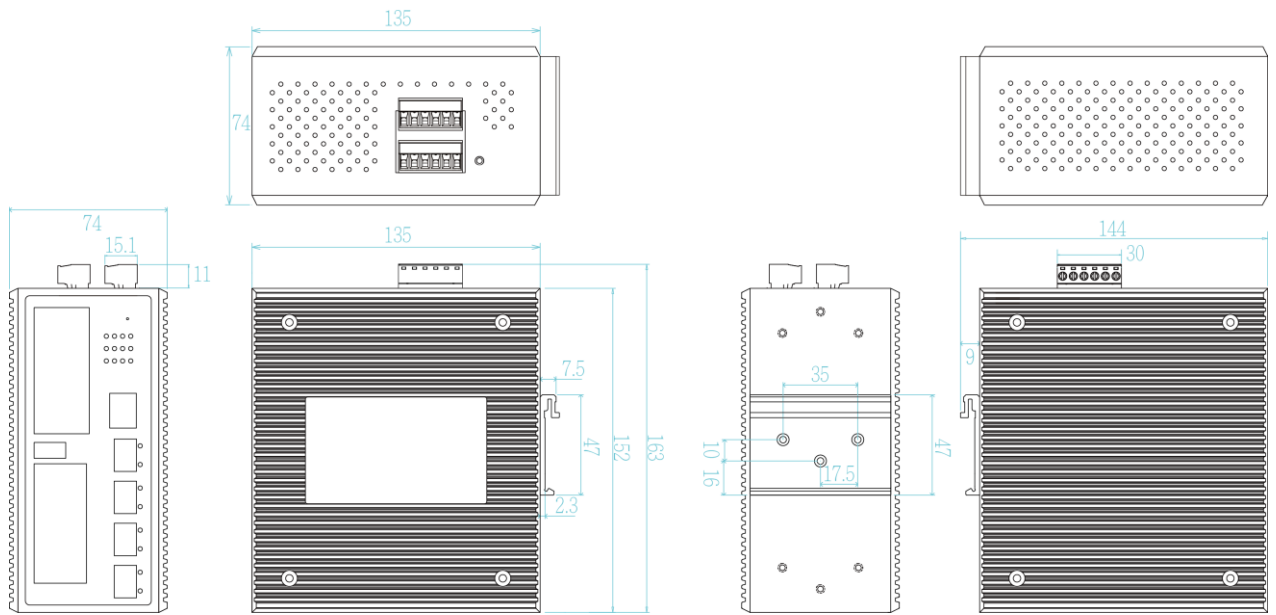


IPGS-L5408MGSFP

Metal case. IP-30, 74 (W) x 135 (D) x 152 (H) mm

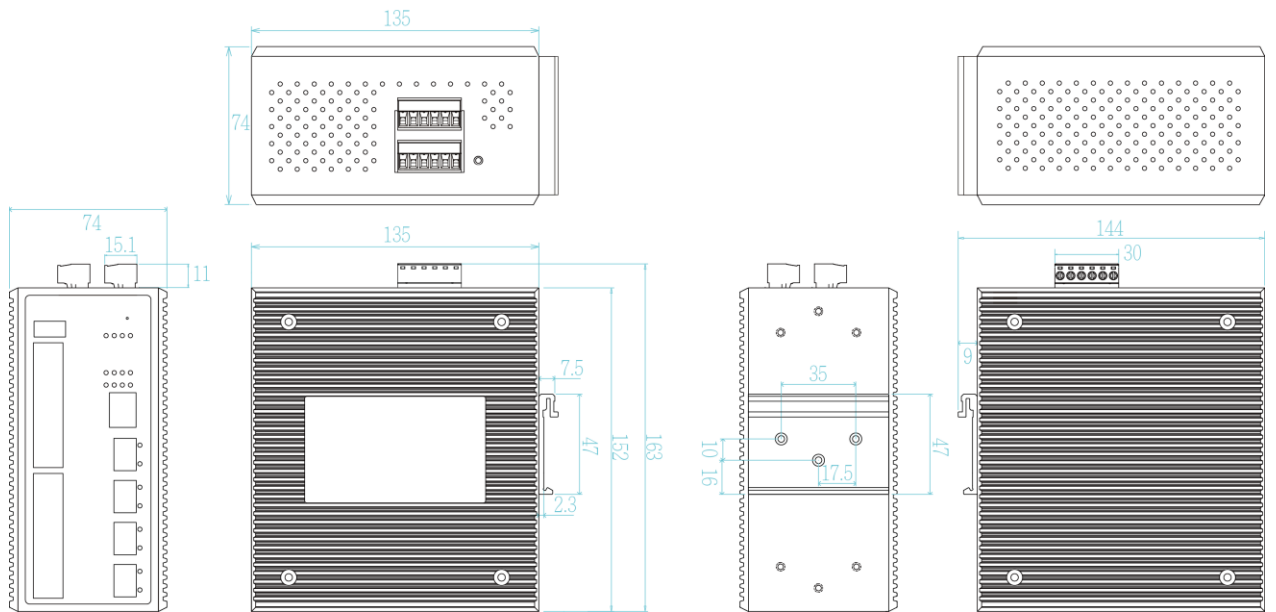


IPGS-5016

Metal case. IP-30, 74 (W) x 135 (D) x 152 (H) mm

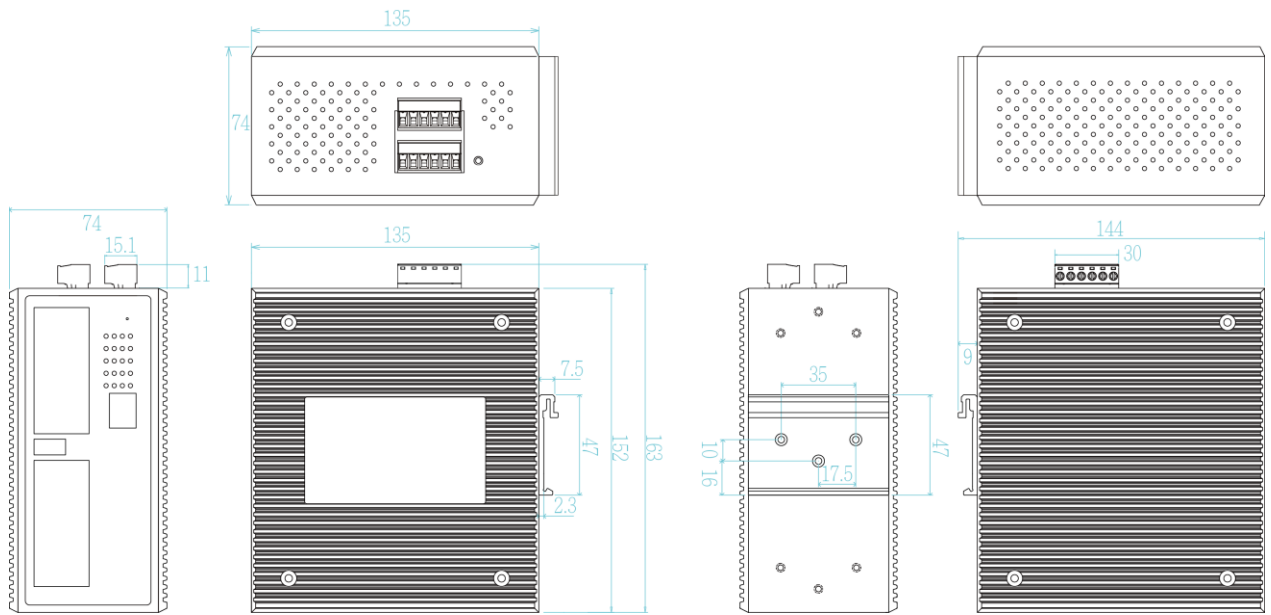


IGS-5416MGSFP-24V

Metal case. IP-30, 74 (W) x 135 (D) x 152 (H) mm

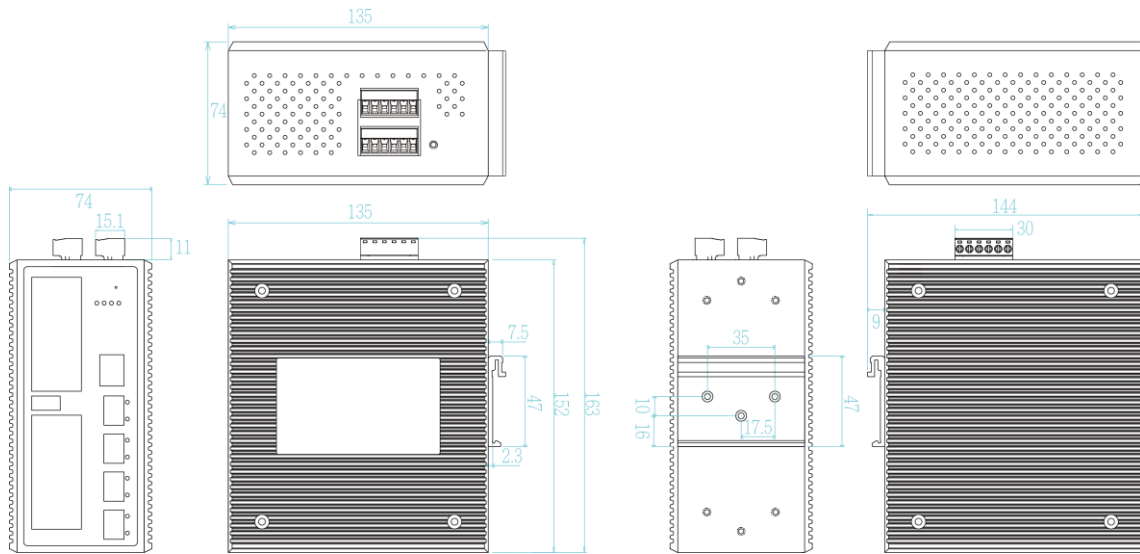


IGS-5416MGSFP-HV

Metal case. IP-30, 82 (W) x 165 (D) x 152 (H) mm

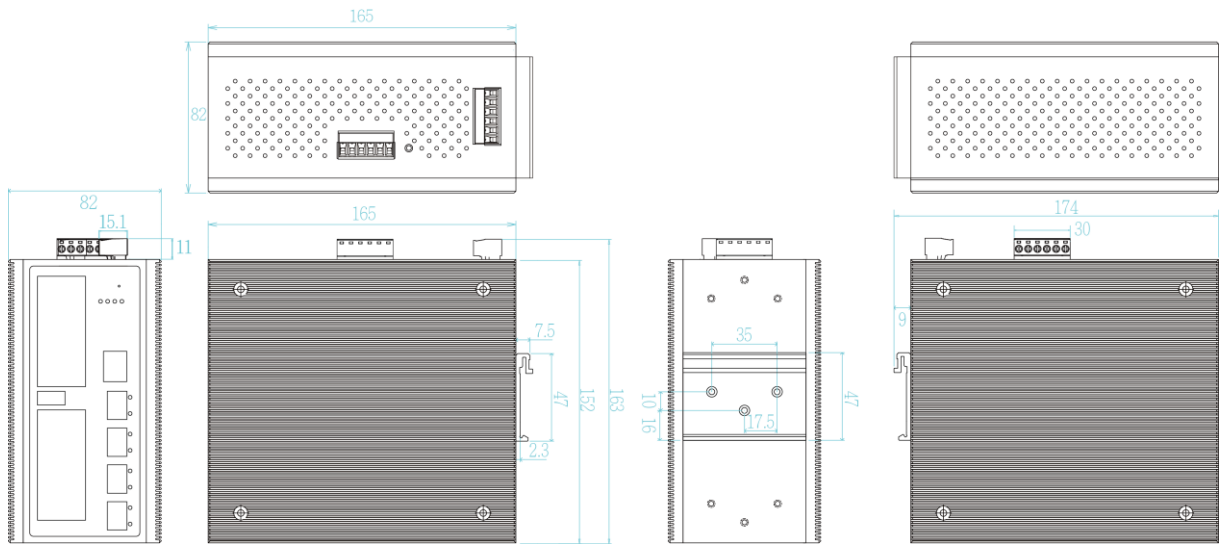


IGS-5488MGSFP-24V

Metal case. IP-30, 74 (W) x 135 (D) x 152 (H) mm

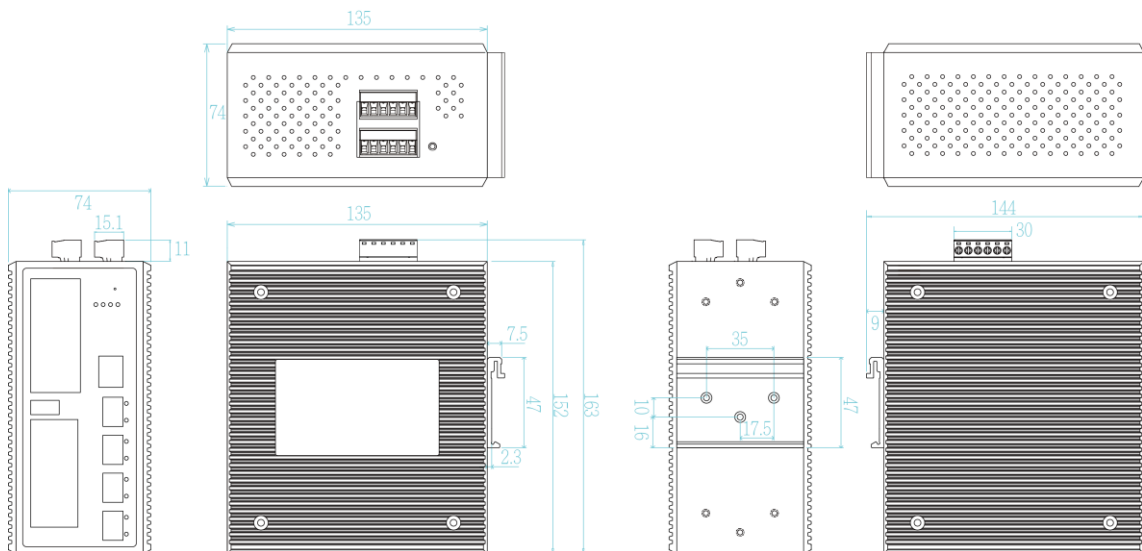


IGS-5488MGSFP-HV

Metal case. IP-30, 82 (W) x 135 (D) x 152 (H) mm

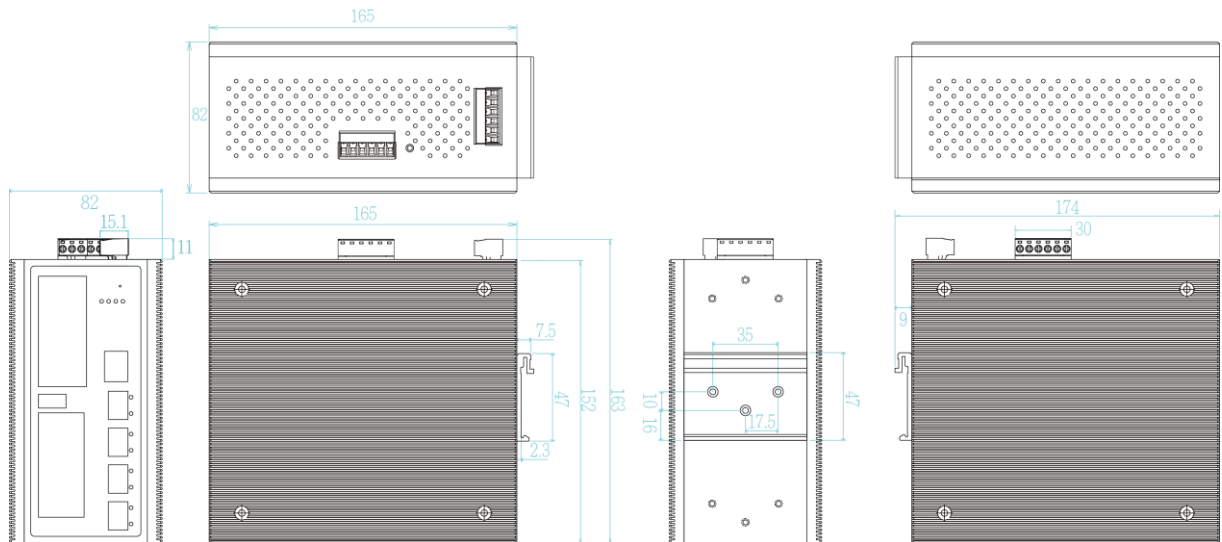

IGS-5016

Metal case. IP-30, 74 (W) x 135 (D) x 152 (H) mm

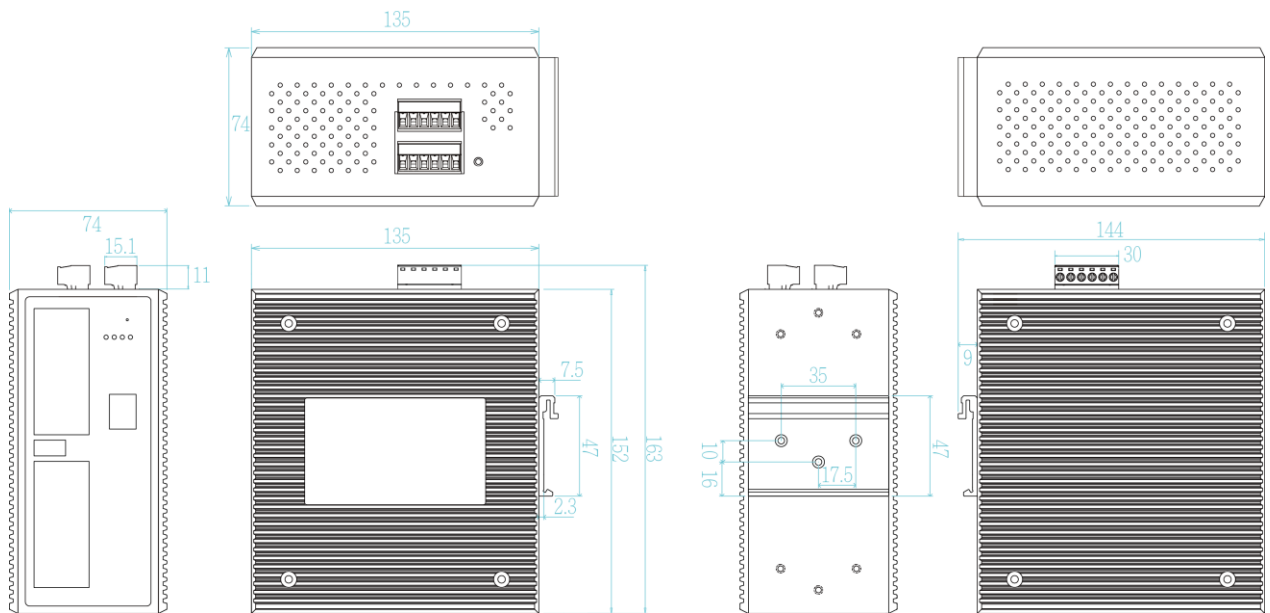

2.2 IP Protection

The **IP Code**, **Ingress Protection Rating**, sometimes also interpreted as **International Protection Rating**, classifies and rates the degree of protection provided against the intrusion (including body parts such as hands and fingers), dust, accidental contact, and water in *mechanical casings* and with electrical enclosures. It is published by the International Electrotechnical Commission (IEC)

Solid particle protection

The first digit indicates the level of protection that the enclosure provides against access to hazardous parts (e.g., electrical conductors, moving parts) and the ingress of solid foreign objects.

Level	Object size protected against	Effective against
0	—	No protection against contact and ingress of objects
1	>50 mm	Any large surface of the body, such as the back of a hand, but no protection against deliberate contact with a body part
2	>12.5 mm	Fingers or similar objects
3	>2.5 mm	Tools, thick wires, etc.
4	>1 mm	Most wires, screws, etc.
5	Dust protected	Ingress of dust is not entirely prevented, but it must not enter in sufficient quantity to interfere with the satisfactory operation of the equipment; complete protection against contact
6	Dust tight	No ingress of dust; complete protection against contact

Liquid ingress protection

The second digit indicates the level of protection that the enclosure provides against harmful ingress of water.


Level	Protected against	Testing for	Details
0	Not protected	—	—

1	Dripping water	Dripping water (vertically falling drops) shall have no harmful effect.	Test duration: 10 minutes Water equivalent to 1 mm rainfall per minute
2	Dripping water when tilted up to 15°	Vertically dripping water shall have no harmful effect when the enclosure is tilted at an angle up to 15° from its normal position.	Test duration: 10 minutes Water equivalent to 3 mm rainfall per minute
3	Spraying water	Water falling as a spray at any angle up to 60° from the vertical shall have no harmful effect.	Test duration: 5 minutes Water volume: 0.7 litres per minute Pressure: 80–100 kPa
4	Splashing of water	Water splashing against the enclosure from any direction shall have no harmful effect.	Test duration: 5 minutes Water volume: 10 litres per minute Pressure: 80–100 kPa
5	Water jets	Water projected by a nozzle (6.3 mm) against enclosure from any direction shall have no harmful effects.	Test duration: at least 15 minutes Water volume: 12.5 litres per minute Pressure: 30 kPa at distance of 3 m
6	Powerful water jets	Water projected in powerful jets (12.5 mm nozzle) against the enclosure from any direction shall have no harmful effects.	Test duration: at least 3 minutes Water volume: 100 litres per minute Pressure: 100 kPa at distance of 3 m
7	Immersion up to 1 m	Ingress of water in harmful quantity shall not be possible when the enclosure is immersed in	Test duration: 30 minutes Immersion at depth of at least 1 m measured at bottom of device, and at least


		water under defined conditions of pressure and time (up to 1 m of submersion).	15 cm measured at top of device
8	Immersion beyond 1 m	<p>The equipment is suitable for continuous immersion in water under conditions which shall be specified by the manufacturer.</p> <p>Normally, this will mean that the equipment is hermetically sealed.</p> <p>However, with certain types of equipment, it can mean that water can enter but only in such a manner that it produces no harmful effects.</p>	<p>Test duration: continuous immersion in water</p> <p>Depth specified by manufacturer</p>
9	Powerful high temperature water jets	Protected against close-range high pressure, high temperature spray downs.	—

2.3 Front Panel


IPGS-6416XSFP

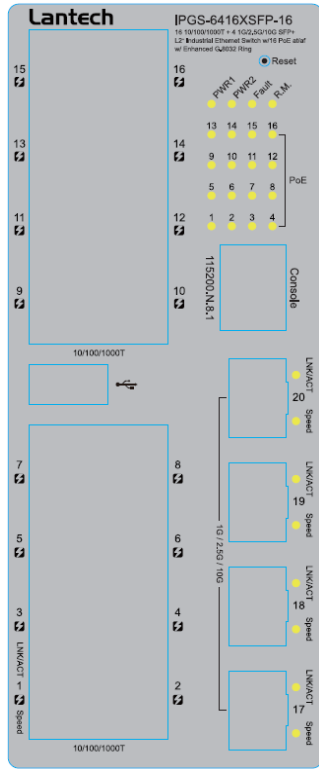


IPGS-6488XSFP

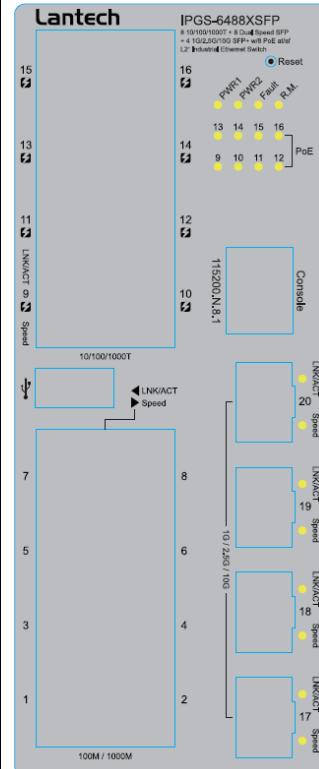


IPGS-L6408XSFP

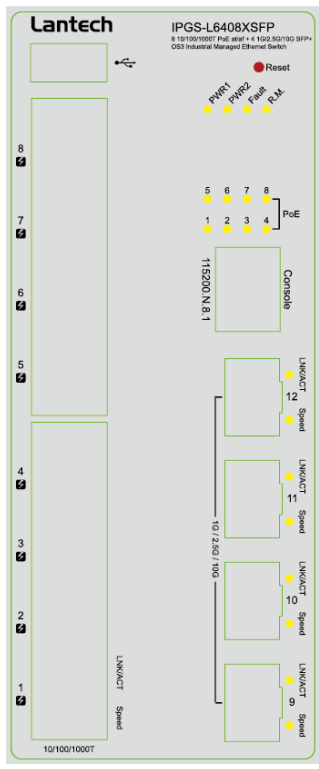


IPGS-L5408MGSFP

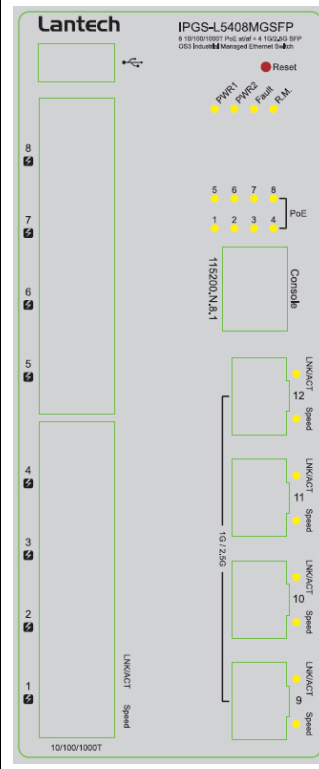


IGS-6416XSFP

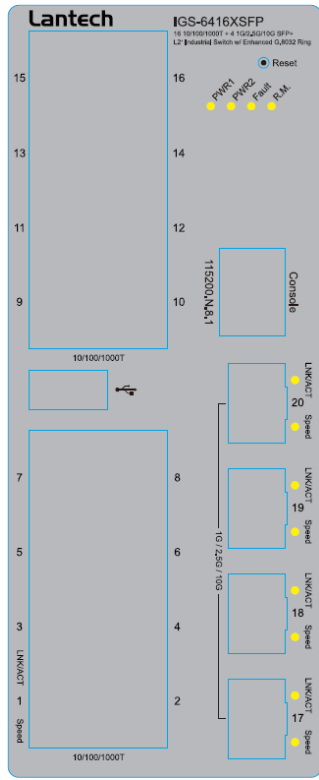


IGS-6488XSFP

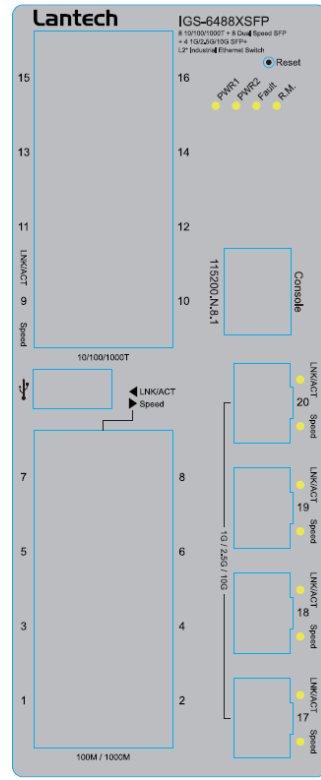


IPGS-5416MGSFP

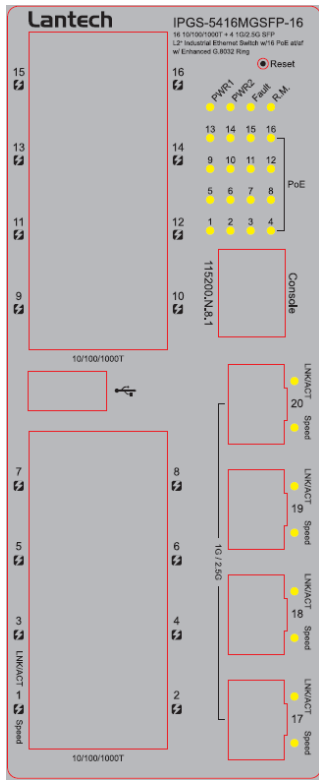


IPGS-5488MGSFP

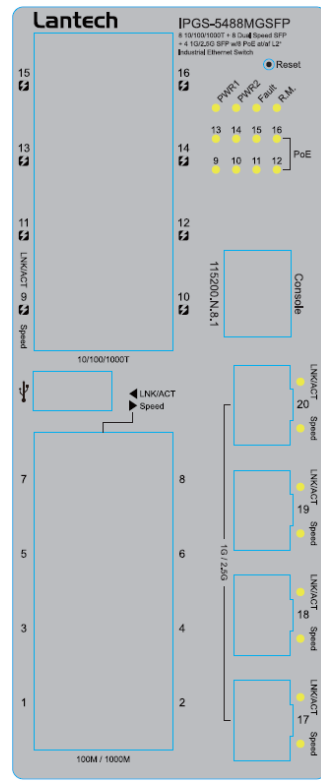


IGS-5416MGSFP

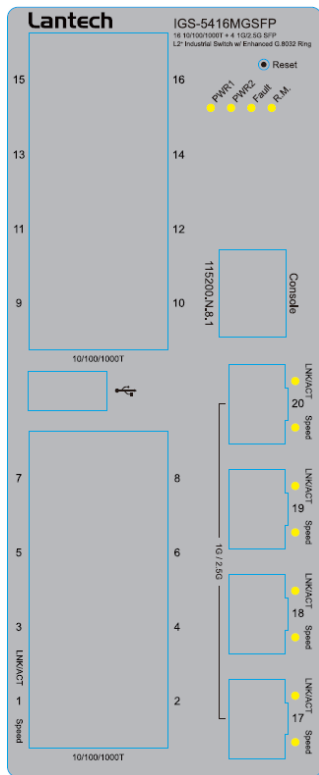


IGS-5488MGSFP

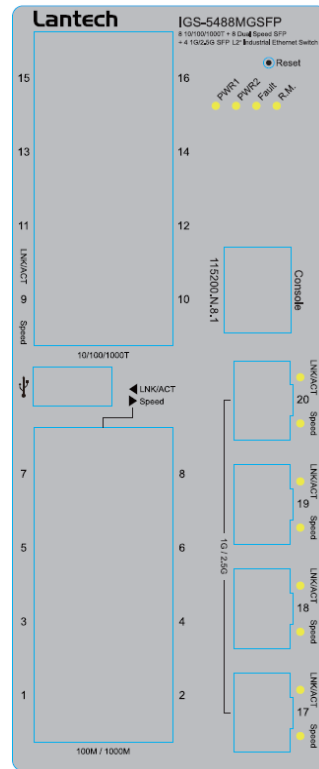

IPGS-5016

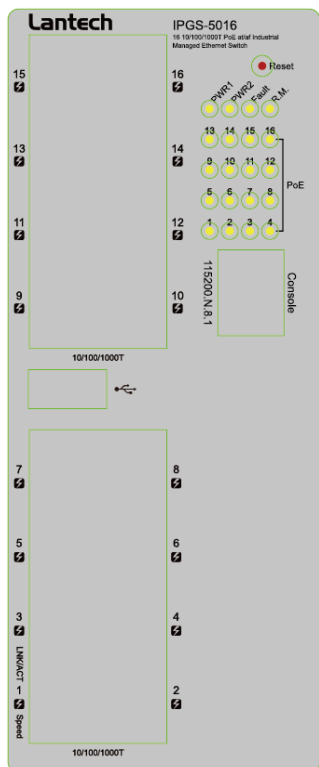

IGS-5016

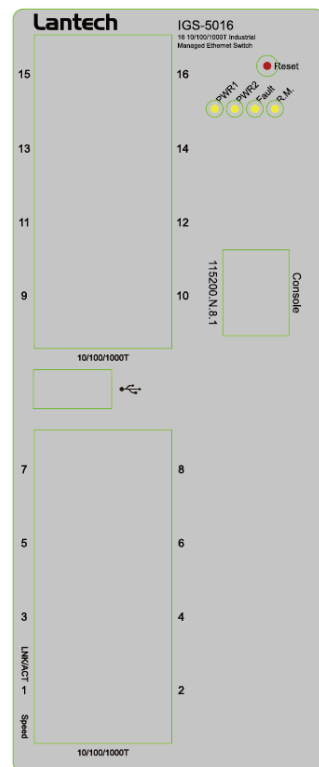


2.4 LED Indicators

The diagnostic LEDs that provide real-time information of system and optional status are located on the front panel of the industrial switch. The following table provides the description of the LED status and their meanings for the switch.

LED	Color	Status	Meaning
R.M	Green	On	The switch unit is owner switch of ITU-Ring
		Off	The switch is not owner switch
PWR1	Green	On	Power 1 is active
		Off	Power 1 is inactive
PWR2	Green	On	Power 2 is active
		Off	Power 2 is inactive
*For HV models, the PWR2 LED will not be on since HV models are only equipped with single power input.			
FAULT	Red	On	Power or port failure
		Off	No failure
RJ45 Port LED	LNK/ACT	On	A network device is detected.
		Blinking	The port is transmitting or receiving packets from the TX device.
		Off	No device attached
	Speed 1000M	On	The port is operating in 1000T mode.
	PoE FWD (For PoE model)	Off	The port is not operating in PoE mode.
On		The port is operating in PoE mode.	
SFP Port	LNK/ACT	On	A network device is detected.

LED		Blinking	The port is transmitting or receiving packets from the TX device.
		Off	No device attached.
	Speed	On (Orange)	The port is operating in 10G mode
		On (Yellow)	The port is operating in 2.5G mode
		Off	The port is operating in 1G mode

Chapter 3 Hardware Installation

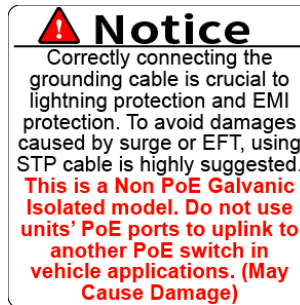

For POE models: Do not use units' POE ports to uplink to another POE switch in vehicle applications. (May Cause Damage) Lantech strongly advise the installation of a Galvanic isolated DC/DC converter between the power supply and the Ethernet switch on all Non-Isolated models. Please contact the sales team for advice on which models support isolated power design.

Alert! PoE Budget for Managed POE Switch Model

For managed PoE models, the factory-default PoE budget is 12W per port; however, users can customize the PoE budget for each port based on their requirements. Managed switches have a safety feature where, if the total PoE budget is exceeded, the last connected port will automatically be disabled to prevent overloading.

Please be mindful of the total PoE budget limit. To prevent ports from shutting down due to insufficient budget, set the desired PoE budget for each used port and set the PoE budget for idle ports or ports that do not require PoE to "0". Once the preceding ports consume the entire PoE budget, the subsequent ports will not provide power for devices.

3.1 Hardware installation

1. Unpack the Industrial switch
2. Check if the DIN-Rail is screwed on the Industrial switch or not. If the DIN-Rail is not screwed on the Industrial switch, please refer to **DIN-Rail Mounting** section for DIN-Rail installation. If users want to wall mount the Industrial switch, please refer to **Wall Mount Plate Mounting** section for wall mount plate installation. **NOTE: Wall mount kits are optional accessories.**

3. To hang the Industrial switch on the DIN-Rail track or wall.
4. Power on the Industrial switch. Please refer to the **Wiring the Power Inputs** section for knowing the information about how to wire the power. The power LED on the Industrial switch will light up. Please refer to the **LED Indicators** section for indication of LED lights.

Note: Please check the power connector has been connected to the switch correctly before you turn on the power resource.

5. Prepare the twisted-pair, straight through Category 5 cable for Ethernet connection.
6. Insert one side of RJ-45 cable (category 5) into the Industrial switch Ethernet port (RJ-45 port) and another side of RJ-45 cable (category 5) to the network device's Ethernet port (RJ-45 port), ex: Switch PC or Server. The UTP port (RJ-45) LED on the Industrial switch will light up when the cable is connected with the network device. Please refer to the **LED Indicators** section for LED light indication.


[NOTE] Make sure that the connected network devices support MDI/MDI-X. If it does not support, use the crossover category-5 cable.

7. When all connections are set and LED lights all show in normal, the installation is complete.

3.2 DIN-Rail Mounting

The DIN-Rail is screwed on the industrial switch when out of factory. If the DIN-Rail is not screwed on the industrial switch, please see the following pictures to screw the DIN-Rail on the switch. Follow the steps below to hang the industrial switch.

Rear Side

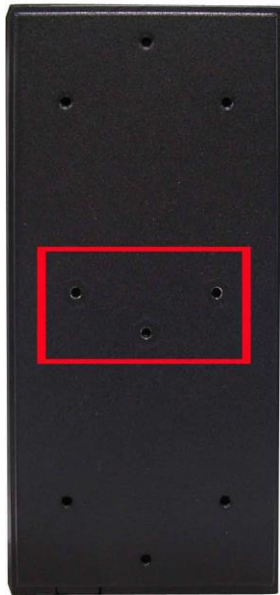

DIN-Rail




Follow the steps below to mount the industrial switch on the DIN rail:


1. Position the switch so that the upper edge and spring of the DIN clip, which is located within the top of the DIN rail bracket, engage with the top section of the DIN rail. Push down to compress the spring.

Note: Ensure a secure installation by verifying that the DIN clip's spring firmly locks into the rail groove

2. Rotate the switch to align the bottom hook of the DIN clip with the bottom section of the DIN rail and clamp it in place (refer to the image).

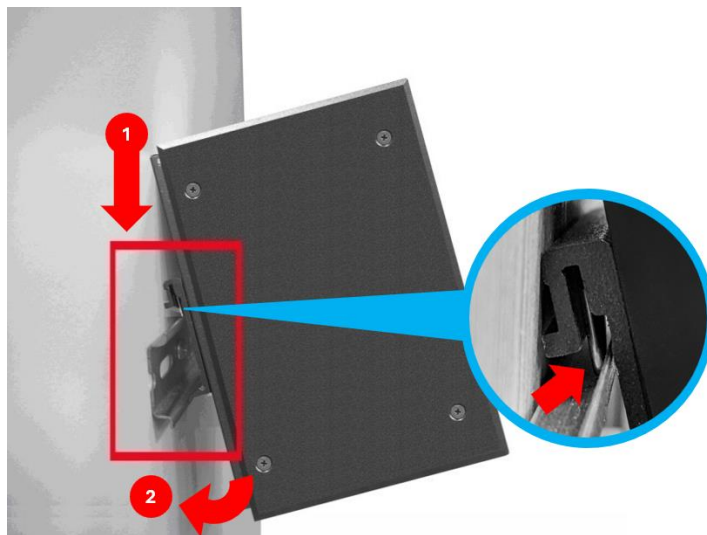


3. Verify that the DIN rail clip is securely attached to the DIN rail.

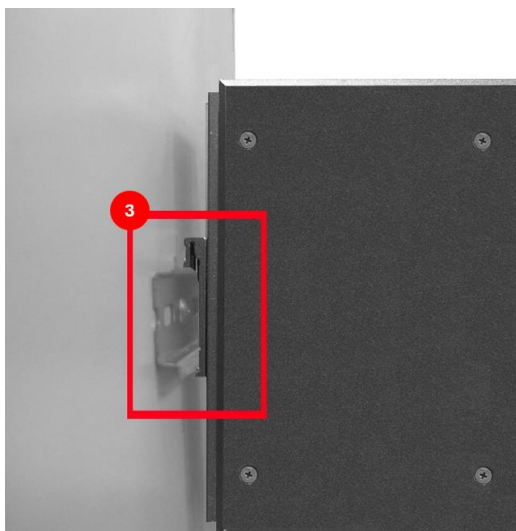

4. To remove the industrial switch, press down to compress the DIN clip spring.


5. Grasp the lower part of the switch and rotate it away from the DIN rail (refer to the image).

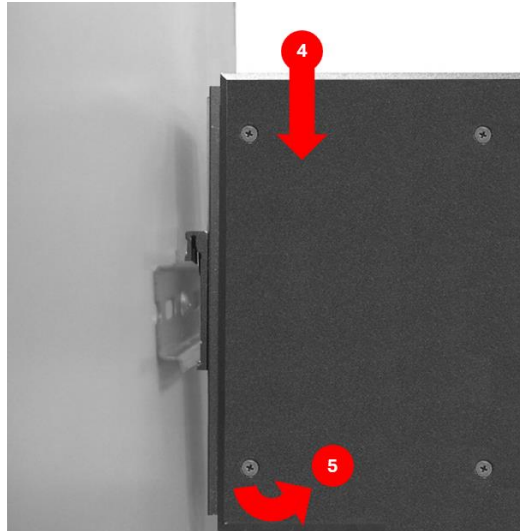


3.3 Wall Mount Plate Mounting

Follow the steps below to mount the industrial switch with wall mount plate.

1. Remove the DIN-Rail from the industrial switch; loose the screws to remove the DIN-Rail.
2. Place the wall mount plate on the rear panel of the industrial switch.
3. Use the screws to screw the wall mount plate on the industrial switch.
4. Use the hook holes at the corners of the wall mount plate to hang the industrial switch on the wall.
5. To remove the wall mount plate, reverse the above steps.

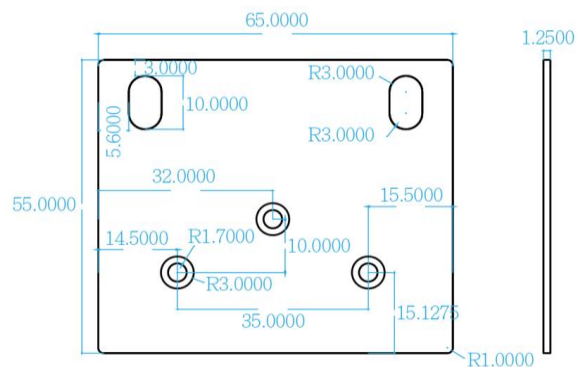

NOTE : Wall mount kits are optional accessories

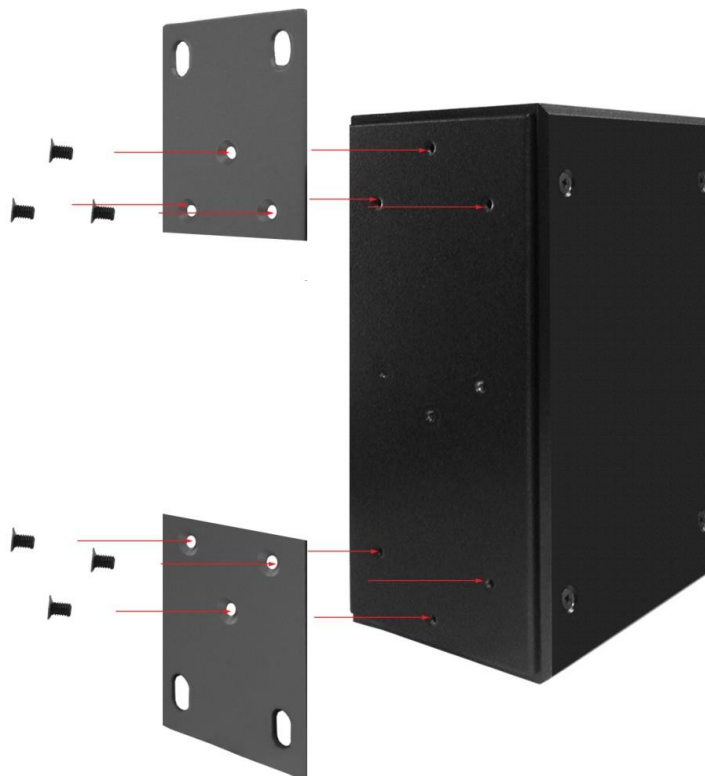


3.4 Wiring the Power Inputs


Note: Please check the power connector has been connected to the switch correctly before you turn on the power resource.

3.4.1. For 12V / 24V / 48V models

Please follow the steps below to insert the power wire.

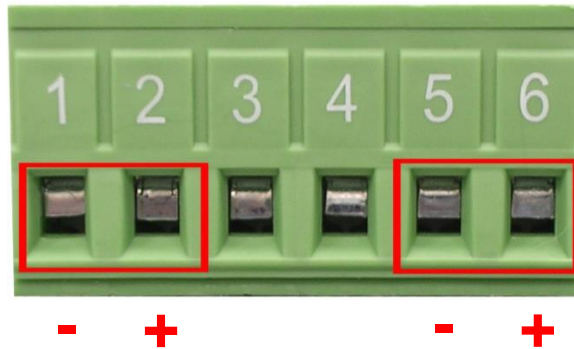

1. Insert DC power wires into the contacts 1 and 5 with negative electrode of power and, 2 and 6 with positive electrode of power, contacts 1 and 2 are defined as power input 1 and contacts 5 and 6 are defined as power input 2, you can connect both power input for redundancy but also can connect with single power input to power on switch.

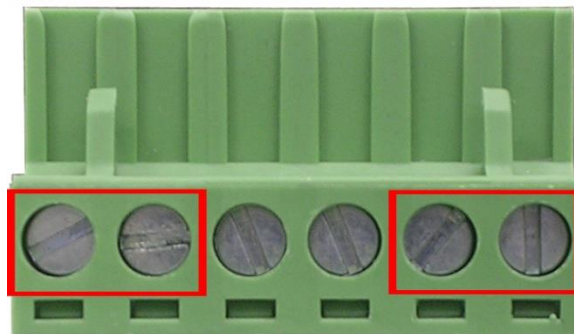

2. Tighten the wire-clamp screws for preventing the wires from loosing.

[NOTE] The wire gauge for the terminal block should be in the range between 12 ~ 24 AWG.

50-57VDC input is recommended for 802.3at 30W applications.


3.4.2. For HV models

Using DC power

Insert DC power wires into the contacts 5 with negative electrode of power and, 6 with positive electrode of power, the HV models are single power design. Tighten the wire-clamp screws for preventing the wires from loosening.

Using AC power

AC power resource has no polarity so the power input of switch can be connected with the wires either way round.

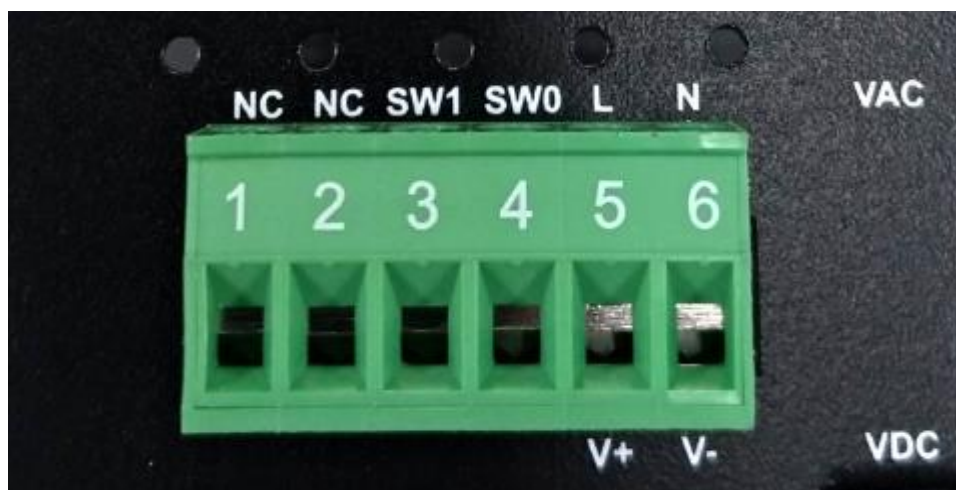

*For HV models, the PWR2 LED will not be on since HV models are only equipped with single power input.


3.5 Wiring the Fault Alarm Contact

The fault alarm contacts are in the middle of the terminal block connector as the picture shows below. Inserting the wires, the switch will detect the fault status of the power failure, or port link failure (available for managed model) and then forms an open circuit. The following illustration shows an application example for wiring the fault alarm contacts.




Insert the wires into the fault alarm contacts

[NOTE] The wire gauge for the terminal block should be in the range between 12 ~ 24 AWG.

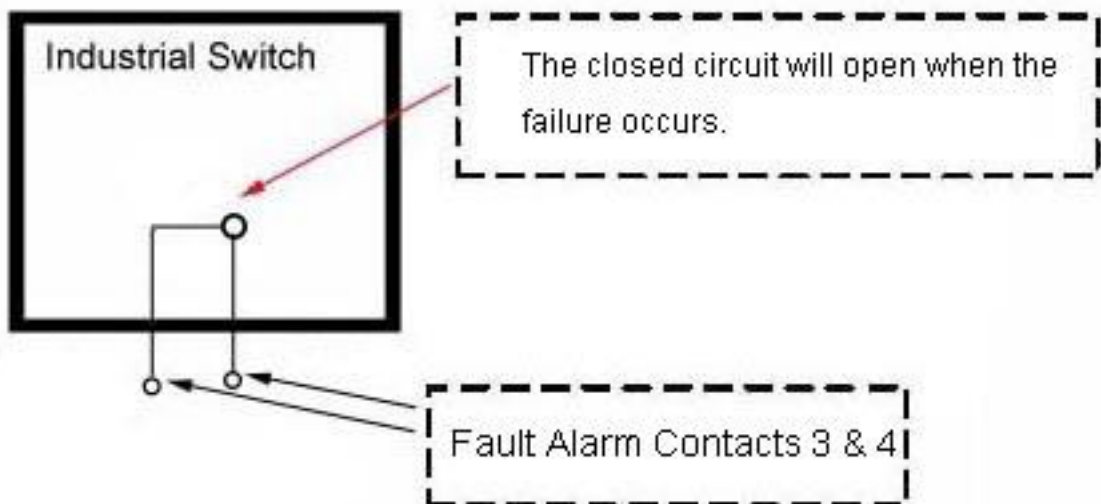


3.6 Wiring the DIDO

In case of event, the switch being able to send an email to pre-defined addresses as well as SNMP Traps out immediately. It provides 2DI and 2DO (DI=Digital input / DO=Digital output). When disconnection of the specific port was detected; DO will activate the signal LED to alarm. DI can integrate the sensors for events and DO will trigger the alarm while sending alert information to IP network with email and traps.

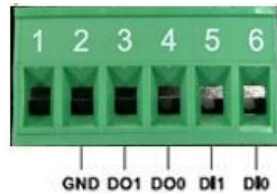


To connect with device in field, please check below diagram:

Digital Input

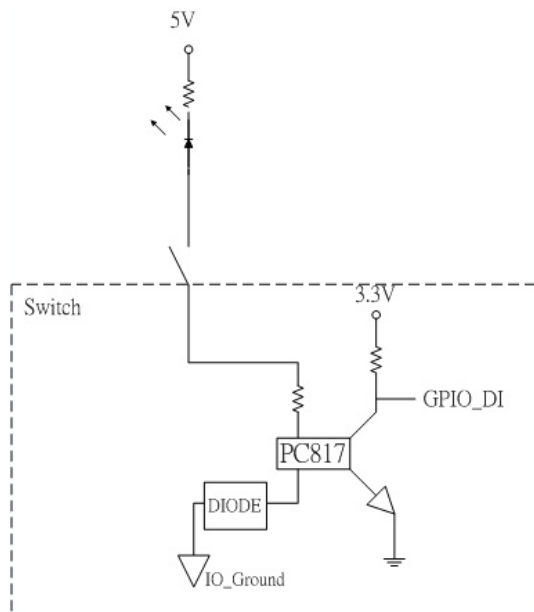

Digital Output

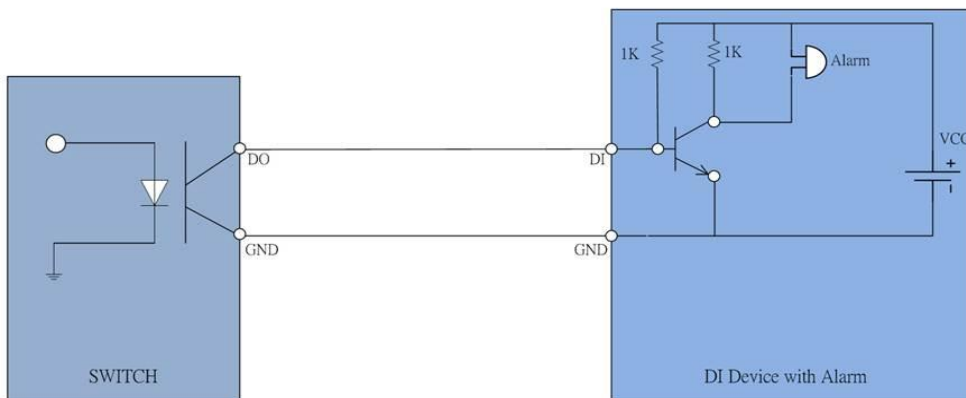


3.7 Cabling

- Use four twisted-pair, Category 5e or above cabling for RJ-45 port connection. The cable between the switch and the link partner (switch, hub, workstation, etc.) must be less than 100 meters (328 ft.) long.
- Fiber segment using **single-mode** connector type must use 9/125 μm single-mode fiber cable. User can connect two devices in the distance up to **30km**.
- Fiber segment using **multi-mode** connector type must use 50 or 62.5/125 μm multi-mode fiber cable. User can connect two devices up to **2km** distances.
- **Gigabit SFP (mini-GBIC) port:**

The small form-factor pluggable (SFP) is a compact optical transceiver used in optical communications for both telecommunication and data communications. The SFP slots supporting Gigabit speed up to 1000Mbps. They are used for connecting to the network segment with single or multi-mode fiber. You can choose the appropriate SFP transceiver to plug into the slots. Then use proper multi-mode or single-mode fiber according to the transceiver. With fiber optic, it transmits at speed up to 1000 Mbps and you can prevent noise interference from the system.

To connect the transceiver and LC cable, please follow the steps shown below:

First, insert the transceiver into the SFP module. Notice that the triangle mark is the bottom of the module.

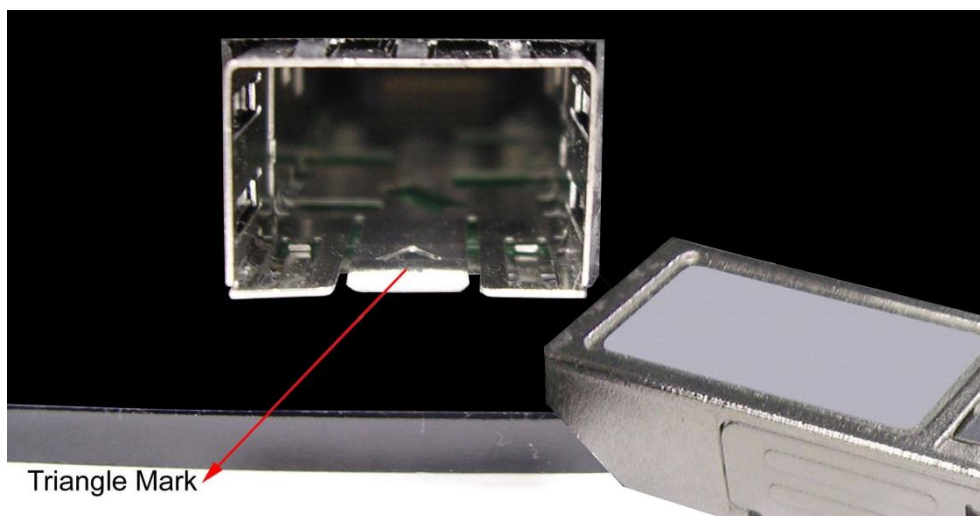


Transceiver to the SFP module



Transceiver Inserted


Second, insert the fiber cable of LC connector into the transceiver.

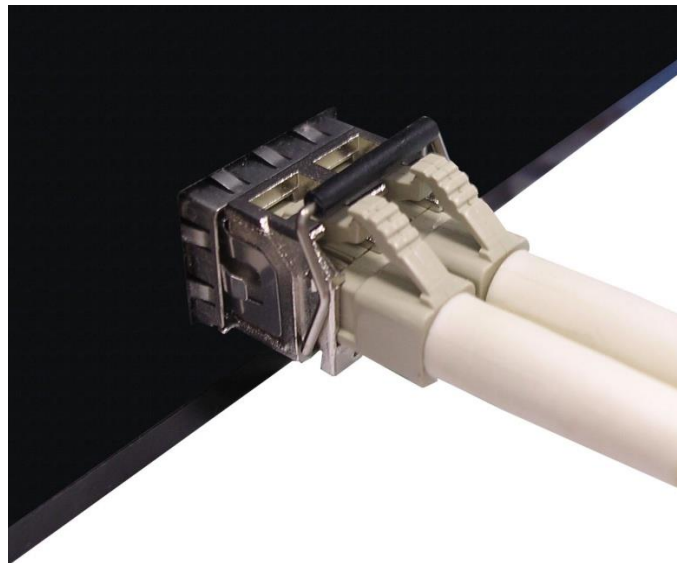

LC connector to the transceiver


To remove the LC connector from the transceiver, please follow the steps shown below:

First, press the upper side of the LC connector to release from the transceiver and pull it out.

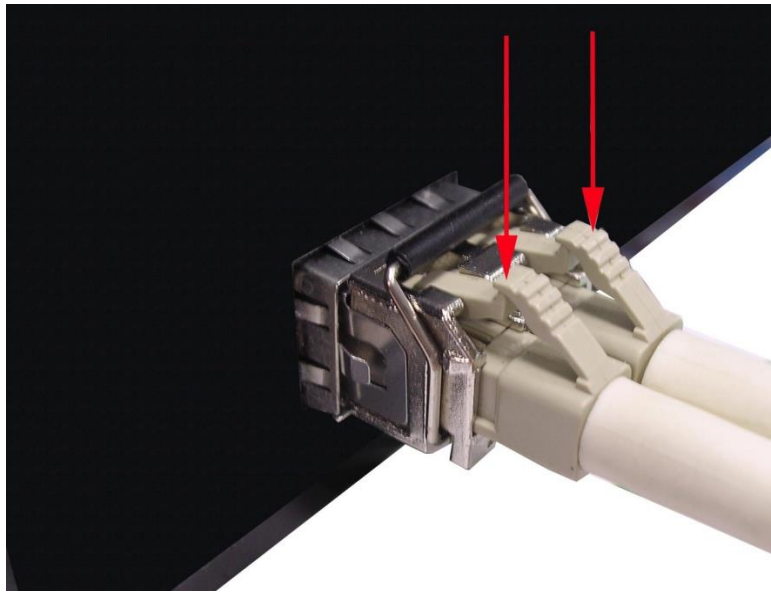

Remove LC connector

Second, push down the metal loop and pull the transceiver out by the plastic handle.

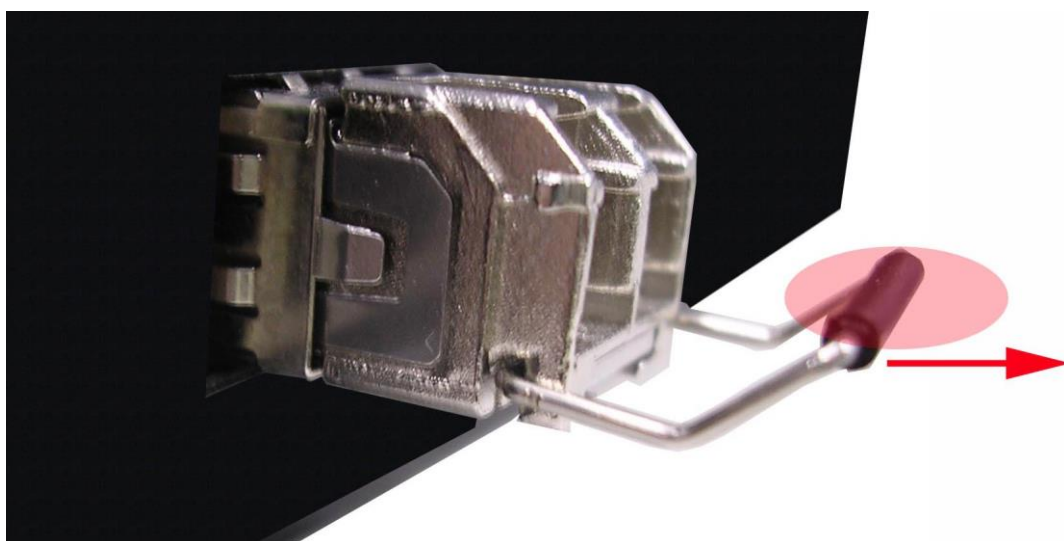

Pull out from the transceiver

3.7 USB Dongle



The USB slot is to backup and restore the setting of switch automatically by any USB dongle. It doesn't need any configuration from web browser or other user interface. When you plug USB dongle in switch, the switch will backup its configuration file automatically, the backup file will be named `cfgexport_(switch MAC).yml`, if you want to restore the backup file, just rename the configuration file as `cfgimport_(switch MAC).yml` then plug the USB dongle again.



Chapter 4 Console Management

4.1. Connecting to the Console Port

The supplied cable which one end is RS-232 connector and the other end is RJ-45 connector. Attach the end of RS-232 connector to PC or terminal and the other end of RJ-45 connector to the console port of the switch. The connected terminal or PC must support the terminal emulation program.

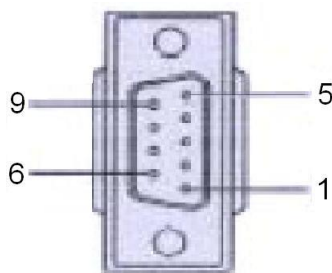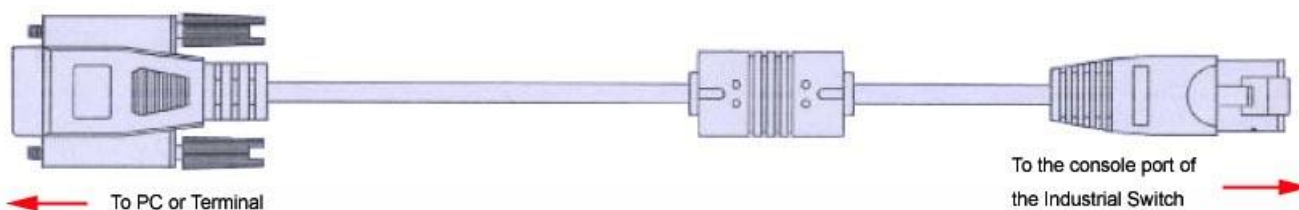

DB 9-pin Female

DB9 Connector	RJ-45 Connector
NC	1 Orange/White
2	2 Orange
3	3 Green/White
NC	4 Blue
5	5 Blue/White
NC	6 Green
NC	7 Brown/White
NC	8 Brown

Pin assignment

4.2. Login in the Console Interface

When the connection between Switch and PC is ready, turn on the PC and run a terminal emulation program or **Hyper Terminal** and configure its **communication parameters** to match the following default characteristics of the console port:


Baud Rate: 115200 bps

Data Bits: 8

Parity: none

Stop Bit: 1

Flow control: None

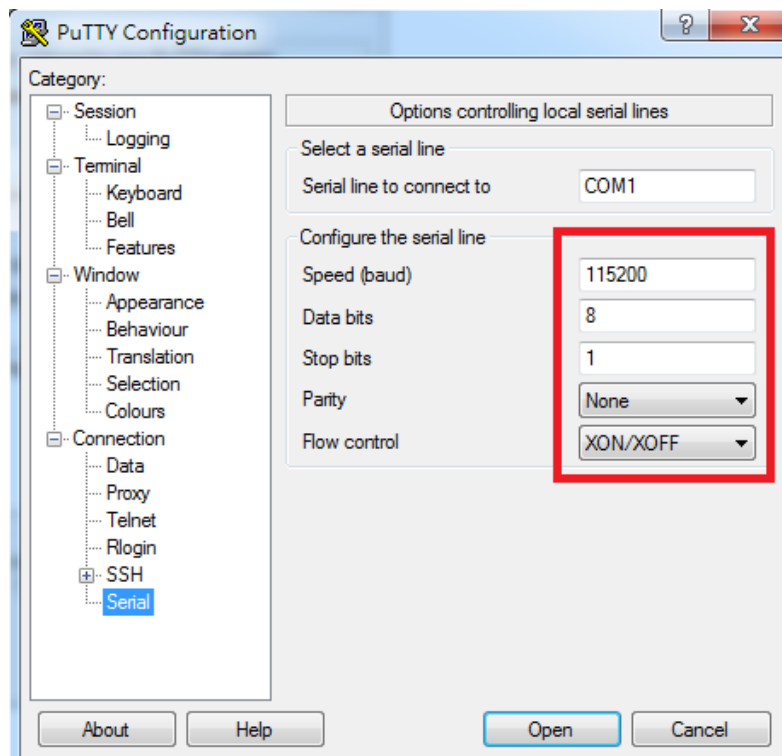

The settings of communication parameters

Having finished the parameter settings, click **OK**. When the blank screen shows up, press Enter key to have the login prompt appears. Key in **admin** (default value) for both User name and Password (use **Enter** key to switch), then press Enter and the Main Menu of console management appears. Please see below figure for login screen.


```
User Name : admin
Password  : ****
```

Console login interface

=====Notice=====

For web-based management, please refer to our “Software Management Manual”.
Please contact support@lantechcom.tw for more information.