


# MIO108 Quick Installation Guide

## Checklist

- ✓ MIO108 board x1
- ✓ Screw x2
- ✓ Quick installation guide x1

**Note:** Please contact your local vendors if any damaged or missing items. DO NOT apply power to the board if there is any damaged component.

## Dimension and Fixing Holes

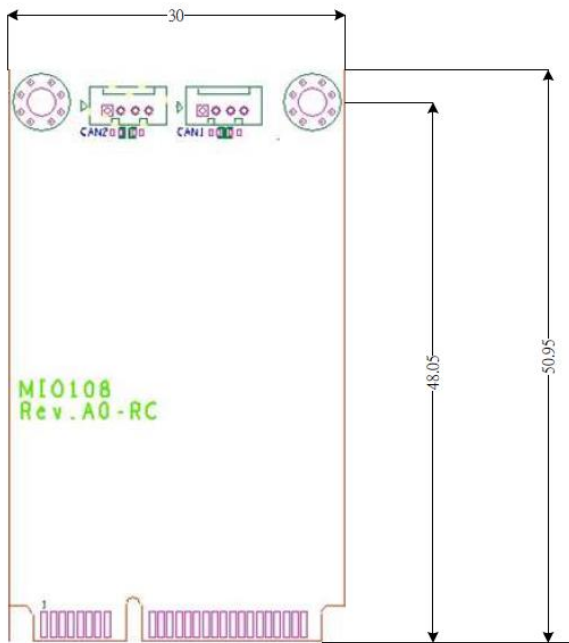

Top View


## Connectors

Connector	Description
CN1	CAN Bus Connector
CN2	CAN Bus Connector

### CAN Bus Connector (CN1)

This is a MOLEX 53047-0410 4-pin connector for CAN bus interface.


Pin	Signal
1	GND
2	CAN_H
3	CAN_L
4	GND



### CAN Bus Connector (CN2)

This is a MOLEX 53047-0410 4-pin connector for CAN bus interface.

Pin	Signal
1	GND
2	CAN_H
3	CAN_L
4	GND



### CAN Cable

The MIO108 recommends using a cable with a 9-pin D-Sub connector on one end. The pin assignment complies with the CiA® 102 specification.

Pin	Signal
1	N.C.
2	CAN_L
3	GND
4	N.C.
5	N.C.
6	GND
7	CAN_H
8	N.C.
9	N.C.

