

USER'S MANUAL

GOT710A-ELK

**Railway 10.4" XGA TFT LCD
PANEL PC**

User's Manual



www.axiomtek.com

Disclaimers

This manual has been carefully checked and believed to contain accurate information. Axiomtek Co., Ltd. assumes no responsibility for any infringements of patents or any third party's rights, and any liability arising from such use.

Axiomtek does not warrant or assume any legal liability or responsibility for the accuracy, completeness or usefulness of any information in this document. Axiomtek does not make any commitment to update the information in this manual.

Axiomtek reserves the right to change or revise this document and/or product at any time without notice.

No part of this document may be reproduced, stored in a retrieval system, or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of Axiomtek Co., Ltd.

CAUTION

If you replace the wrong batteries, it causes the danger of explosion. It is recommended by the manufacturer that you follow the manufacturer's instructions to only replace the same or equivalent type of battery and dispose of used ones.

©Copyright 2025 Axiomtek Co., Ltd.

All Rights Reserved

Jan. 2025, Version A2

Printed in Taiwan

Safety Precautions

Before getting started, read the following important cautions.

1. Be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and place all electronic components in any static-shielded devices. Most electronic components are sensitive to static electrical charge.
2. Disconnect the power cords from the GOT710A Series before making any installation. Be sure both the system and the external devices are turned OFF. Sudden surge of power could ruin sensitive components. Make sure the GOT710A Series is properly grounded.
3. Do not open the system's top cover. If opening the cover for maintenance is a must, only a trained technician is allowed to do so. Integrated circuits on computer boards are sensitive to static electricity. To avoid damaging chips from electrostatic discharge, observe the following precautions:
 - Before handling a board or integrated circuit, touch an unpainted portion of the system unit chassis for a few seconds. This will help to discharge any static electricity on your body.
 - When handling boards and components, wear a wrist-grounding strap, available from most electronic component stores.

Trademarks Acknowledgments

Axiomtek is a trademark of Axiomtek Co., Ltd.

Windows[®] is a trademark of Microsoft Corporation.

IBM, PC/AT, PS/2, VGA are trademarks of International Business Machines Corporation.

Intel[®] and Pentium[®] are trademarks of Intel Corporation.

AMI is trademark of American Megatrend Inc.

Other brand names and trademarks are the properties and registered brands of their respective owners.

Table of Contents

Disclaimers.....	i
Safety Precautions.....	iii
Section 1 Introduction.....	1
1.1 General Description	1
1.2 Specifications	2
1.3 Dimensions and Outlines	4
1.4 I/O Outlets	6
1.5 Packing List.....	7
Section 2 Hardware and Installation	8
2.1 Installing the M.2 & Mini PCIe Card	9
2.2 Serial Ports Interface	14
2.3 USB Ports	15
2.4 Ethernet.....	15
2.5 DIO.....	16
2.6 Audio	19
2.7 CAN Bus Connector.....	20
2.8 DC Power Connector	20
2.9 Hard keys on front bezel (Optional).....	21
2.10 LED Indicators.....	22
Section 3 AMI BIOS Setup Utility	23
3.1 Entering Setup.....	23
3.2 Main Menu.....	23
3.3 Advanced Menu.....	24
3.4 Chipset Menu.....	38
3.5 Security Menu.....	39
3.6 Boot Menu.....	41
3.7 Save & Exit Menu	42
Appendix A	44
Appendix B	45

This page is intentionally left blank.

Section 1

Introduction

This chapter contains general information and detailed specifications of GOT710A-ELK. Section 1 includes the following sub-sections:



- General Descriptions
- Specifications
- Dimensions
- I/O Outlets
- Package List

1.1 General Descriptions

GOT710A-ELK is used to keep the train driver informed about the status of the train's functions.

Its rugged design allows deployment in environment with an extended temperature (-40° to 70 °C) and it also complies with the EMC, shock and vibration test requirements of European standard EN50155 for railway applications.

GOT710A-ELK is equipped with 10.4" TFT ruggedized touch panel computer and all lockable connectors are perfect choice for Human Machine Interface (HMI) in railway environments.

The 10.4" railway touch panel PC includes a comprehensive feature set with one CAN Bus, DIO, audio, two Ethernet ports, USB ports and RS-232/422/485.

Railway Application- EN50155 Class S3 Certification

The railway power module design supports a 20ms power interruption.

MI EN5022 Class A filter and overcurrent/short current protection are included for reliable operation in railway applications.

Sunlight Readable Design

With sunlight-readable technology and an LED-backlit 500-nit color display, the screen remains legible even under strong sunlight

Powerful Computing with Intel® Atom Elkhart Lake Processors

GOT710A-ELK is powered by Intel® Atom processors, offering reliable and stable performance, even in rugged environments.

1.2 Specifications

Main CPU Board

- **CPU**
 - Intel® Atom® quad core x6425E 2.0GHz processor onboard
- **System Memory**
 - 1 x DDR4 SO-DIMM slot supports up to 32GB memory capacity.
The system includes 4GB DDR4 SO-DIMM memory.
- **BIOS**
 - American Megatrends Inc. UEFI (Unified Extensible Firmware Interface) BIOS.
 - 256Mbit SPI Flash, DMI, Plug and Play.
 - PXE Ethernet Boot ROM.

I/O System

- **Standard I/O**
 - 2 x RS-232/422/485 (M12, A-coded)
 - 2 x 2.5GbE LAN (M12, X-coded)
 - 2 x USB 2.0 (M12, A-coded)
 - 1 x DIO (6 input/2 output, Phoenix type)
 - 1 x CAN bus (M12, A-coded)
- **Audio**
 - 1 x Audio: Line-out & Mic-in (M12, A-coded)
- **Expansion**
 - 2 x PCIe Mini Card slots
- **Storage**
 - 1 x M.2 2242 SATA interface (System includes 64GB M.2 2242 storage).
 - 1 x mSATA
- **Power connector**
 - 1 x DC for power input with isolation (M12, A-coded)

System Specification


- **Display**
 - 10.4" XGA (1024 X 768) LCD
- **Touch Screen**
 - Projected Capacitive Touch
- **Protection**
 - IP65, NEMA 4 rugged protection for the aluminum front bezel; rest area of the enclosure is rated IP40.
- **Net Weight**
 - 2.69 kg (5.93 lb)
- **Dimension (Main Body Size)**
 - 310 mm (12.20") (W) x 55 mm (2.17") (D) x 214 mm (8.43") (H)
- **Operation Temperature**
 - -40°C to 70°C
- **Relative Humidity**
 - 10% to 90% @ 40°C, Non-Condensing
- **Power Input**
 - 24V to 110VDC, with 20ms interruption hold-up time (EN 50155 Class S3)




Note: All specifications and images are subject to change without notice.

1.3 Dimensions and Outlines


The following diagrams illustrate the dimensions and outlines of the GOT710A-ELK.

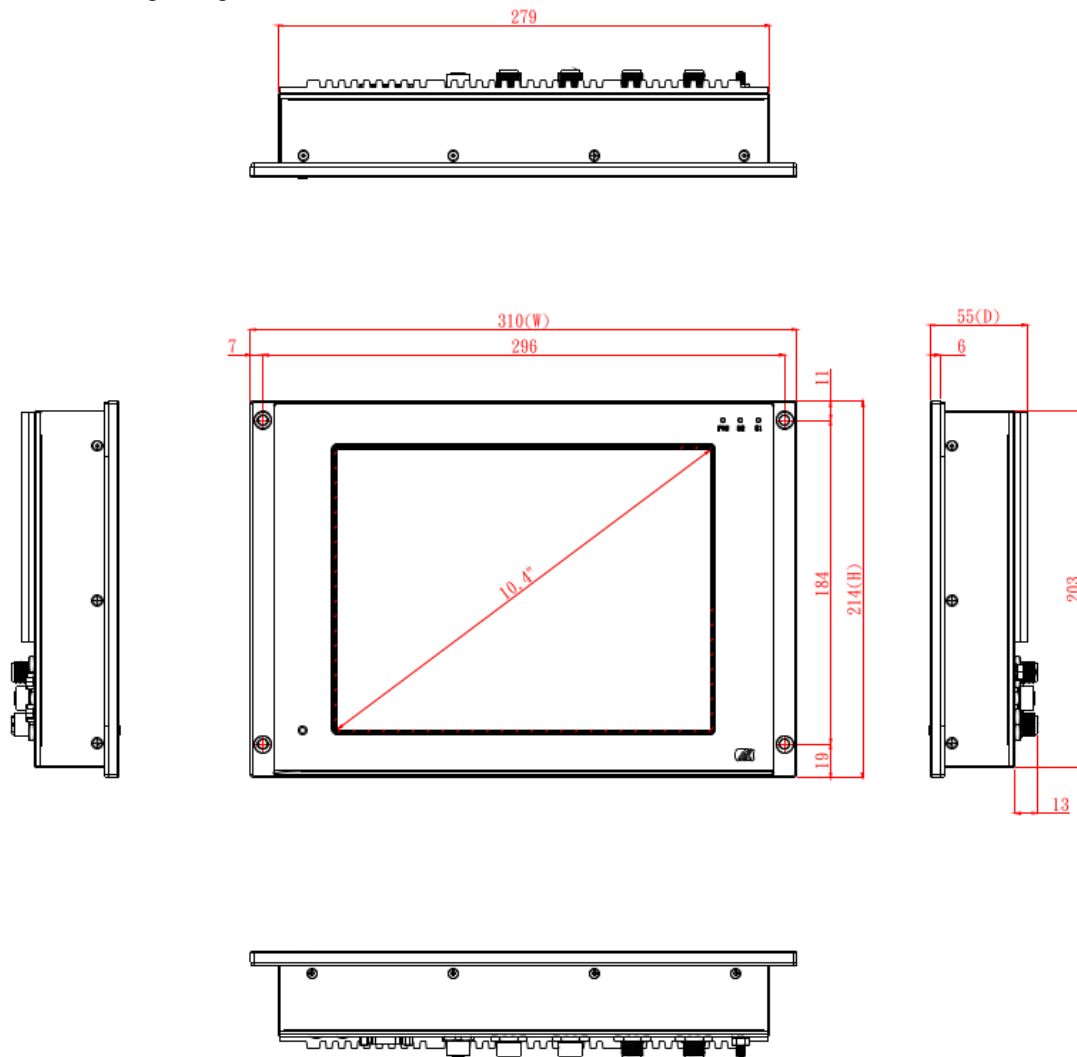

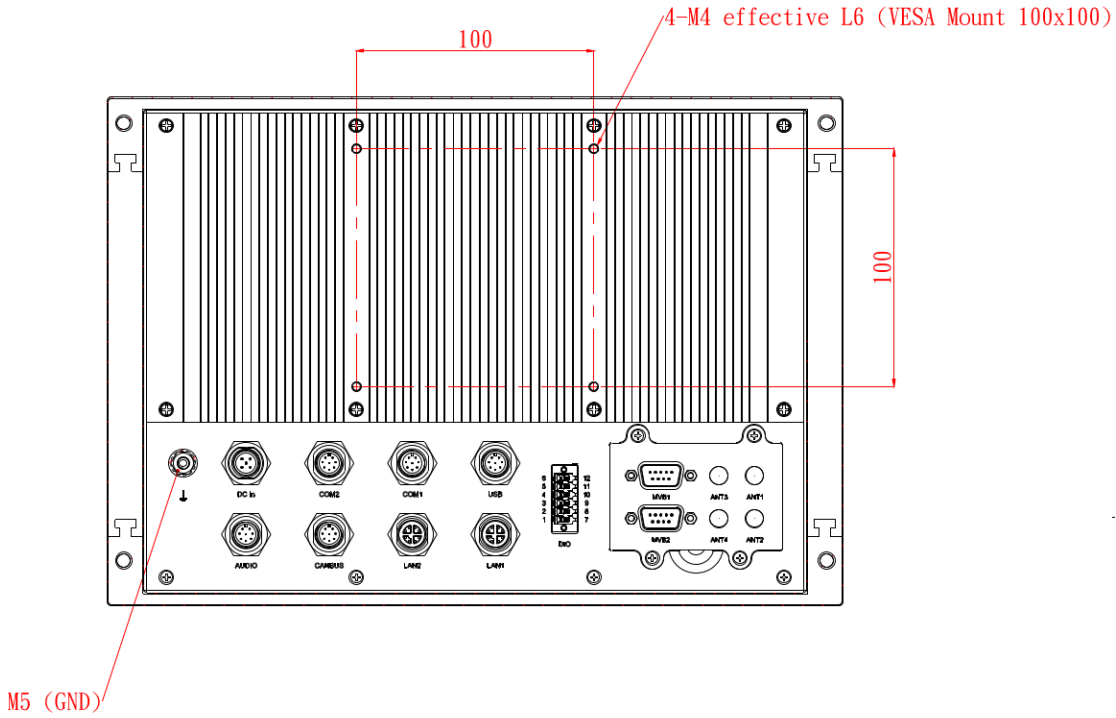

1.4 I/O Outlets

Please refer to the following illustration for the I/O locations of the GOT710A-ELK.

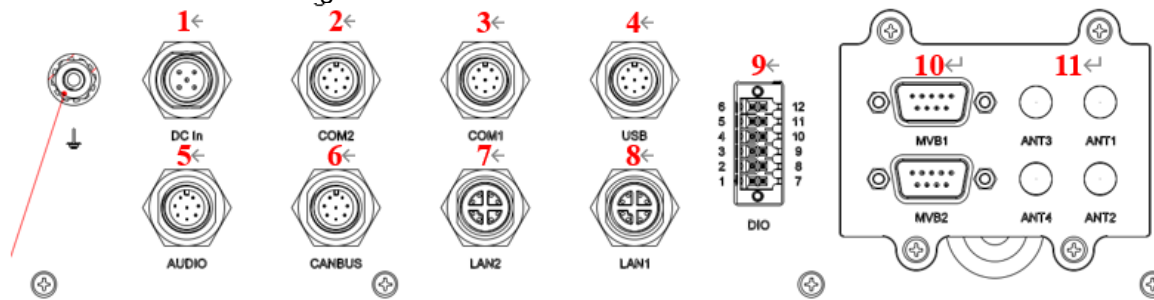

No	Function
1	DC for power input with isolated
2	COM2 (RS-232/422/485)
3	COM1 (RS-232/422/485)
4	USB 2.0 x 2
5	Audio (Line out / Mic in)
6	CAN Bus with isolated
7	LAN 2 (100/1000/2500 with isolated)
8	LAN 1 (100/1000/2500 with isolated)
9	DIO (6 input / 2 output with isolated)
10	MVB (option function)
11	Antenna Opening x 4

1.5 Packing List

When you receive the GOT710A-ELK, the package should include the following items:

- **GOT710A-ELK unit x 1**
- **Phoenix Connector x 1**
- **M.2 Slot screw (M3*4L) x 2**
- **Mini PCIe slot screw (M3*5L) x 2**

Please contact an Axiomtek distributor immediately if any of the item above is missed.

Section 2

Hardware and Installation

The GOT710A-ELK provides rich I/O ports and flexible expansions for you to meet different demands. Section 2 will guide you through the hardware installation process, which includes:

- Open the back cover
- Serial ports interface
- USB Ports
- Ethernet
- DIO
- Audio
- CAN bus connector
- DC power connector
- Mini card Installation
- Hard keys on the front bezel
- LED Indicators
- Auto-dimming

2.1 Installing the M.2 & Mini PCIe Card


The GOT710A-ELK provides two Mini card slots for users to install 4G LTE, Wi-Fi, mSATA, or GPS cards.

This section explains how to install M.2 and Mini PCIe Card. Please follow the steps below.

Step 1 Unscrew the 8 screws on the back heatsink. Please refer to the photo below.



Step 2 Open the back heatsink and locate the M.2 and Mini card slot on main board.

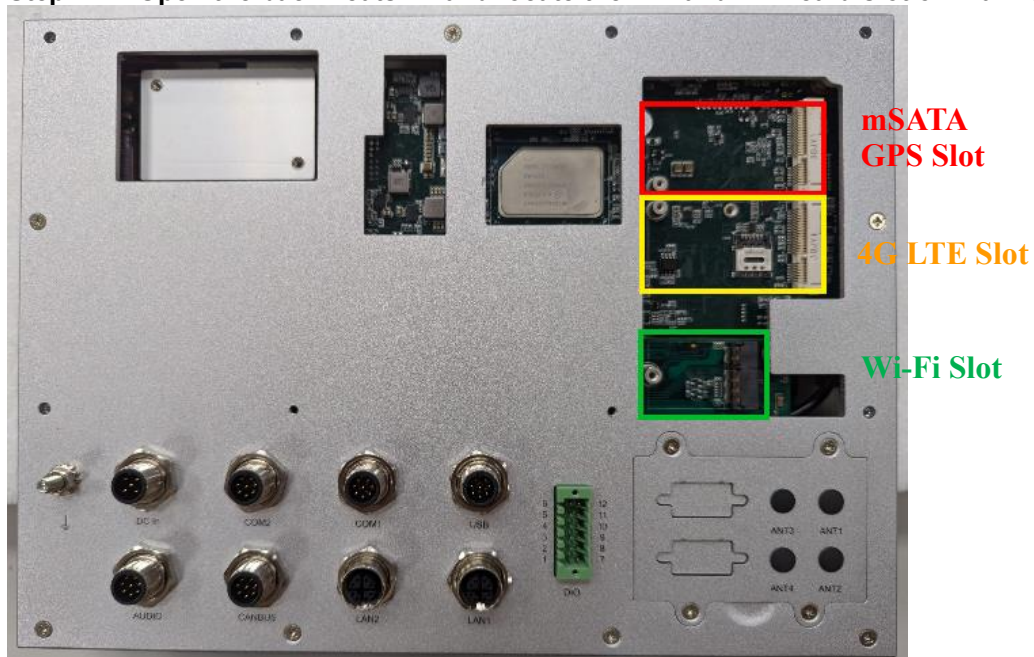

Installing the mSATA


Install the mSATA into the slot and tighten the screws.




Note: The BIOS default setting is PCIe. To use mSATA, refer to Section 3.6 to make the switch.

Installing the 4G LTE MINI PCIe Card

Step 1: Push the top cover up to access the SIM Card slot.

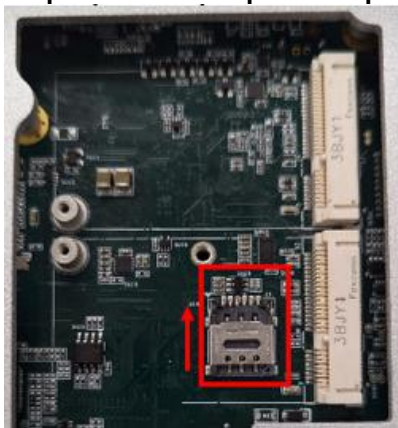


Step 2: Insert the SIM Card into the socket.

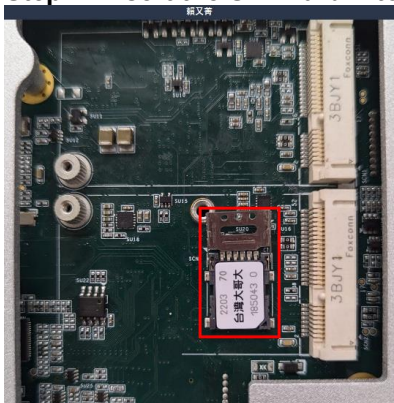

Step 3: Close the top cover and push it down to secure the SIM Card.




Note: Use only Nano-size SIM cards, as shown in the illustration below:

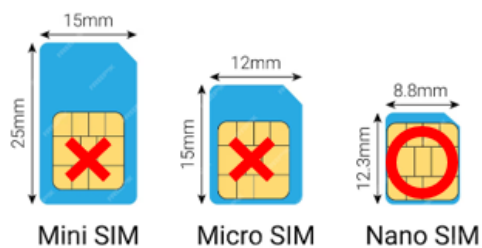

Step 4: Install the 4G LTE module into the slot and tighten the screws.



Step 5: Unscrew the 4 screws on the back maintenance window cover, and remove the antenna plug from one of the antenna holes on the system chassis.

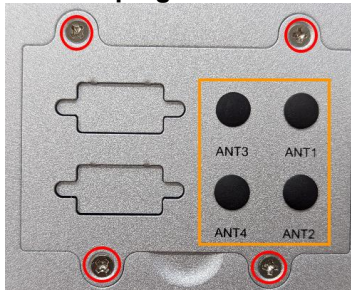

Step 6: Thread the antenna cable's gold connector through the antenna hole on the system chassis. Secure it tightly using the antenna nut and gasket, then reattach the back maintenance window cover by tightening the 4 screws.



Step 7: Connect the other end of the cable to the connector on the 4G LTE module.




Installing the M.2 E Key 2230 WiFi Card

Step 1: Install the M.2 LAN card into the slot and tighten the screws.



Step 2: Unscrew the 4 screws on the back maintenance window cover and remove the antenna plug from one of the antenna holes on the system chassis.

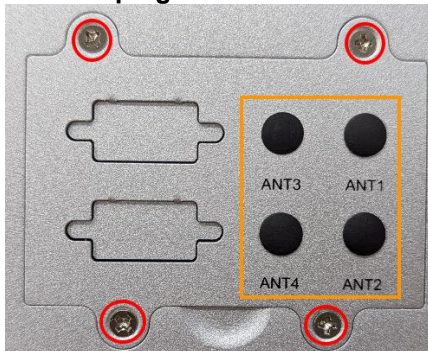

Step 3: Thread the antenna cable's gold connector through the antenna hole on the system chassis. Secure it tightly using the antenna nut and gasket, then reattach the back maintenance window cover by tightening the 4 screws.



Step 4: Connect the other end of the cable to the connector on the wireless module.




2.2 Serial Ports Interface

This system supports RS-232/422/485 on COM1~COM2 ports.

The pin assignments are listed in the table below.

If you need to configure these COM ports to work as RS-232, RS-422, or RS-485, please refer to the BIOS settings in Section 3.5.


Pin	RS-232	RS-422	RS-485
1	NDCD	TX-	Data-
2	NRX	TX+	Data+
3	NTX	RX+	No use
4	NDTR	RX-	No use
5	NDSR	No use	No use
6	NRTS	No use	No use
7	NCTS	No use	No use
8	ISO_GND	ISO_GND	ISO_GND

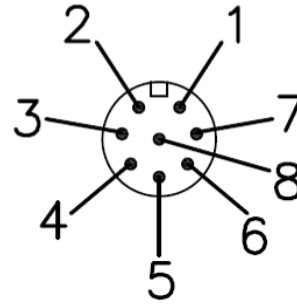

2.3 USB Ports

This system supports two USB ports, and the pin assignments are listed in the table below."

Pin	Definition
1	USB1_PWR
2	USB_DN1
3	USB_DP1
4	GND
5	USB2_PWR
6	USB_DN2
7	USB_DP2
8	GND

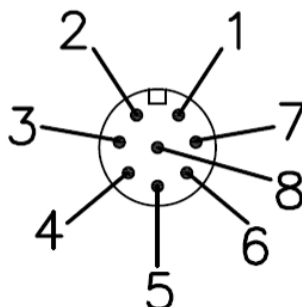

2.4 Ethernet

The GOT710A-ELK is equipped with two high-performance plug-and-play Ethernet interfaces with X-coded connectors. A connection can be established by plugging one end of the Ethernet cable into this M12 X-Code connector and the other end into a 2.5GbE hub with isolation.

Pin	Definition
1	MDI 0+
2	MDI 0-
3	MDI 1+
4	MDI 1-
5	MDI 3+
6	MDI 3-
7	MDI 2-
8	MDI 2+



2.5 DIO

2.5.1 Digital I/O Specification

This system supports one DIO (6 input and 2 output) with isolation.
The pin assignments are listed in the table below.

Digital Input:

Input channels: 6, sink/source type

Input voltage: 0 to 30VDC at 25Hz

Input level for dry contacts:

Logic level 0: close to ground

Logic level 1: open

Input level for wet contacts:

Logic level 1: +/-3VDC max.

Logic level 0: +/- 10VDC min. to +/-30VDC max. (source to digital input)

Digital output:


Output channels: 2, sink type

Output current: 200mA max. per channel

On-state voltage: 12~ 24VDC nominal

Max. voltage on COM+: 30VDC

Pin	Definition
1	Common PWR+
2	DI4
3	DI5
4	DO0
5	DO1
6	Common PWR-
7	EXT_POWER
8	DI0
9	DI1
10	DI2
11	DI3
12	Isolation GND

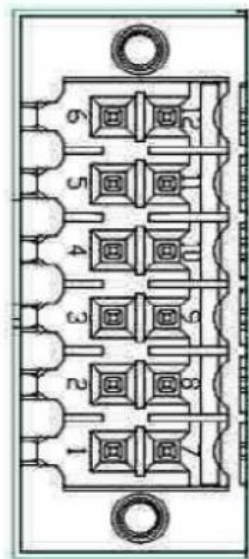

2.5.2 Digital I/O Software Programming

- I2C to GPIO PCA9554PW GPIO Group0[5:0] is Input, Group0[7:6] is Output.
- I2C address: 0b0100100x.
- Registers:

Register 0: Input Group0 register.

Table 4. Register 0 - Input Port register bit description

Bit	Symbol	Access	Value	Description
7	I7	read only	X	determined by externally applied logic level
6	I6	read only	X	
5	I5	read only	X	
4	I4	read only	X	
3	I3	read only	X	
2	I2	read only	X	
1	I1	read only	X	
0	I0	read only	X	

Register 2: Output Group0 register.

Table 5. Register 1 - Output Port register bit description

*Legend: * default value.*


Bit	Symbol	Access	Value	Description
7	O7	R	1*	reflects outgoing logic levels of pins defined as outputs by Register 3
6	O6	R	1*	
5	O5	R	1*	
4	O4	R	1*	
3	O3	R	1*	
2	O2	R	1*	
1	O1	R	1*	
0	O0	R	1*	

2.5.3 Digital Input Wiring

DRY contact

Logic level 0: close to ground


Logic level 1: open

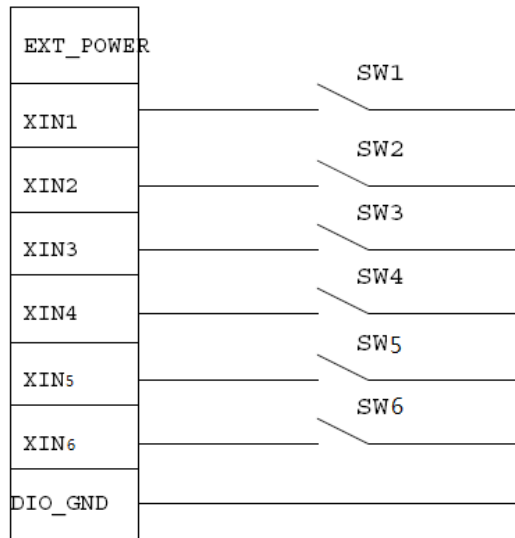


WET contact

Logic level 1: $\pm 3\text{VDC}$ max.

Logic level 0: $\pm 10\text{VDC}$ min. to $\pm 30\text{VDC}$ max

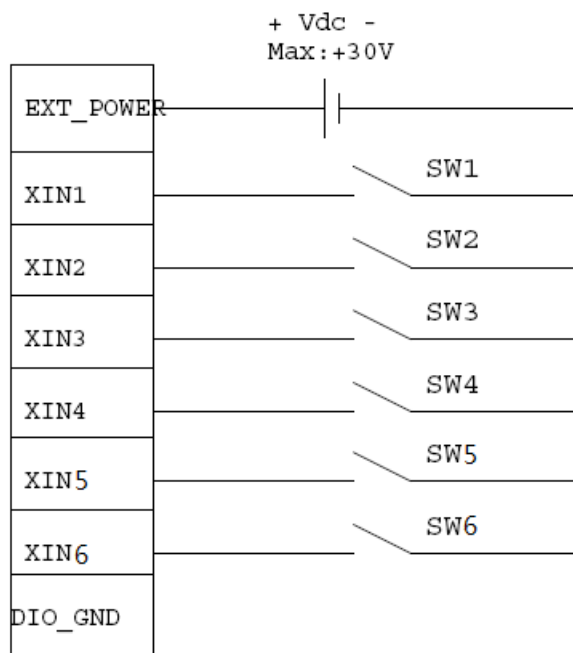


2.5.4 Digital Output Wiring

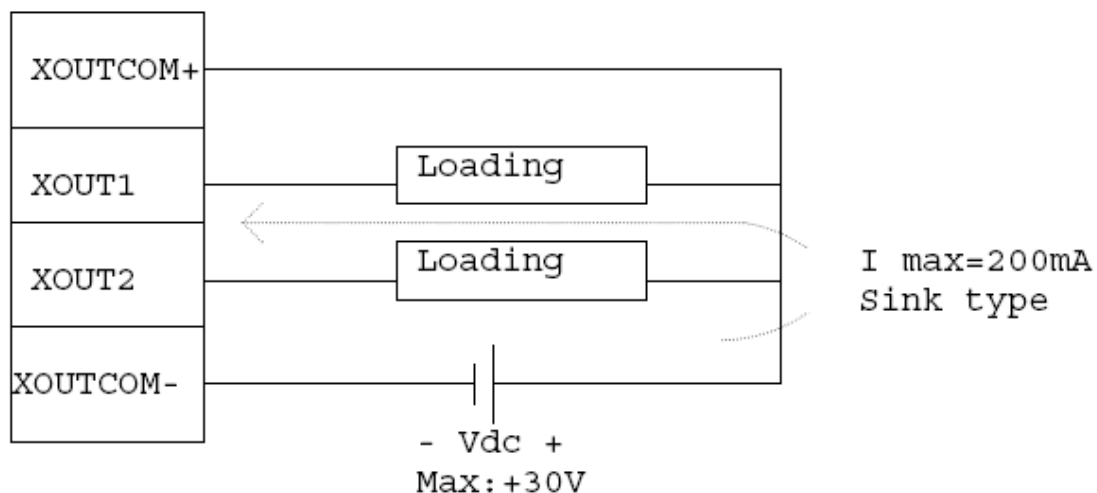

2.6 Audio

This system supports one Audio (Line-out / Mic-in). The pin assignments are listed in the table below.

Pin	Definition
1	MIC-IN-JD
2	MIC-IN
3	AUDIO_OUT_L
4	AUDIO_OUT_R
5	FRONT-JD
6	NA
7	NA
8	AUDIO_GND

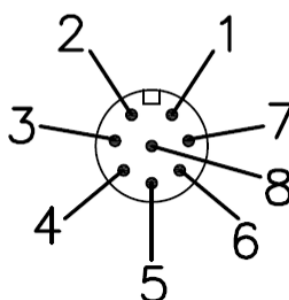


Note: pin# 5 is connected and detects the signal of line-out. The signal is switched to line-out.

2.7 CAN Bus Connector

This system supports one CAN Bus. The pin assignments are listed in the table below.

Pin	Definition
1	CAN_HO
2	NA
3	NA
4	NA
5	NA
6	CAN_GND
7	CAN_LO
8	NA

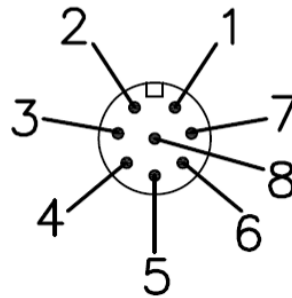

2.8 DC Power Connector

The system supports one DC for power input with isolation. The pin assignments are listed in the table below.

Pin	Definition
1	PWR_V+
2	PWR_V+
3	PWR_V-
4	PWR_V-
5	IGN




















Note : Note: The default IGN trigger is disabled. Please refer to Smart Ignition Management for more details.

2.9 Hard keys on Front Bezel (Optional)

Hard Keys on the Front Bezel:

- UIC 612-01 compliant
- Keys for pre-defined functions
- Key backlighting: dimmable

SYMBOL	FUNCTION
	Press for windows power button setting
	short press for 1 second (backlight on/off)
	Long press for 3 seconds (Auto dimming on/off)
	Customer programming
	Customer programming
	Customer programming
	Volume Up
	Volume Down
	Brightness Up
	Brightness Down
	Customer programming
	backspace
	Cursor Left
	Cursor Right
	Cursor Up
	Cursor Down
	Enter
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
F1	F1
F2	F2
F3	F3
F4	F4
F5	F5
F6	F6

Front panel hotkeys define



Note: By pressing and holding a button for 0.8 seconds, the function will be triggered repeatedly at a rate of 4 times per second.

2.10 LED Indicators

The LED lights ensure that the MCU is working properly and assist in debugging during the research and development phase. It is not necessarily part of the actual system to have LED lights mounted.

The following table summarizes the LED indications of the device:

Status	PWR (Green)	S2 (Yellow)	S1 (Red)
Power up	ON	ON	ON
Device working properly	ON	OFF	OFF
High-temperature reminder	ON	Flash	OFF
High-temperature warning	ON	Flash	Flash
Key pressed	Flash	X	X



Note:

S2 setting: The LED light flashes when the internal temperature of the system reaches 85-95℃.

S1 setting: The LED light flashes when the internal temperature of the system reaches 95-100℃.

Section 3

AMI BIOS Setup Utility

The AMI UEFI BIOS provides users with a built-in Setup program to modify basic system configuration. All configured parameters are stored in a flash backup to save the Setup information whenever the power is turned off.

3.1 Entering Setup

To enter the setup screens, follow the steps below:
Turn on the computer and press the key immediately.
After you press the key, the main BIOS setup menu displays. You can access the other setup screens from the main BIOS setup menu, such as the Advanced and Chipset menu.

3.2 Main Menu

When you first enter the setup utility, you will enter the Main setup screen. You can always return to the Main setup screen by selecting the Main tab. System Time/Date can be set up as described below. The Main BIOS setup screen is shown below.



BIOS Information

Display the auto-detected BIOS information.

System Date/Time

Use this option to change the system time and date. Highlight System Time or System Date using the <Arrow> keys. Enter new values through the keyboard. Press the <Tab> key or the <Arrow> keys to move between fields. The date must be entered in MM/DD/YY format. The

time is entered in HH:MM:SS format.

3.3 Advanced Menu

The Advanced menu also allows users to set configuration of the CPU and other system devices. You can select any of the items in the left frame of the screen to go to the sub menus:

- F81216 Super IO Configuration
- Hardware Monitor
- Smart Ignition Management
- Trusted Computing
- CPU Configuration
- Storage Configuration
- Memory Configuration
- USB Configuration
- Device Configuration



For items marked with “▶”, please press <Enter> for more options.

● **F81216 Super IO Configuration**

Use this screen to select options for the Super IO Configuration and change the value of the selected option.



Serial Port 1-2 configuration

1. Serial port:

This option is used to enable or disable the serial port.

2. Device Setting:


This item specifies the base I/O port address and Interrupt Request address of serial port.

The port 1 Optimal setting is 3F8/IRQ4.

The port 2 Optimal setting is 2F8/IRQ3


3. Serial type:

This option used to select RS232/422/485 function.

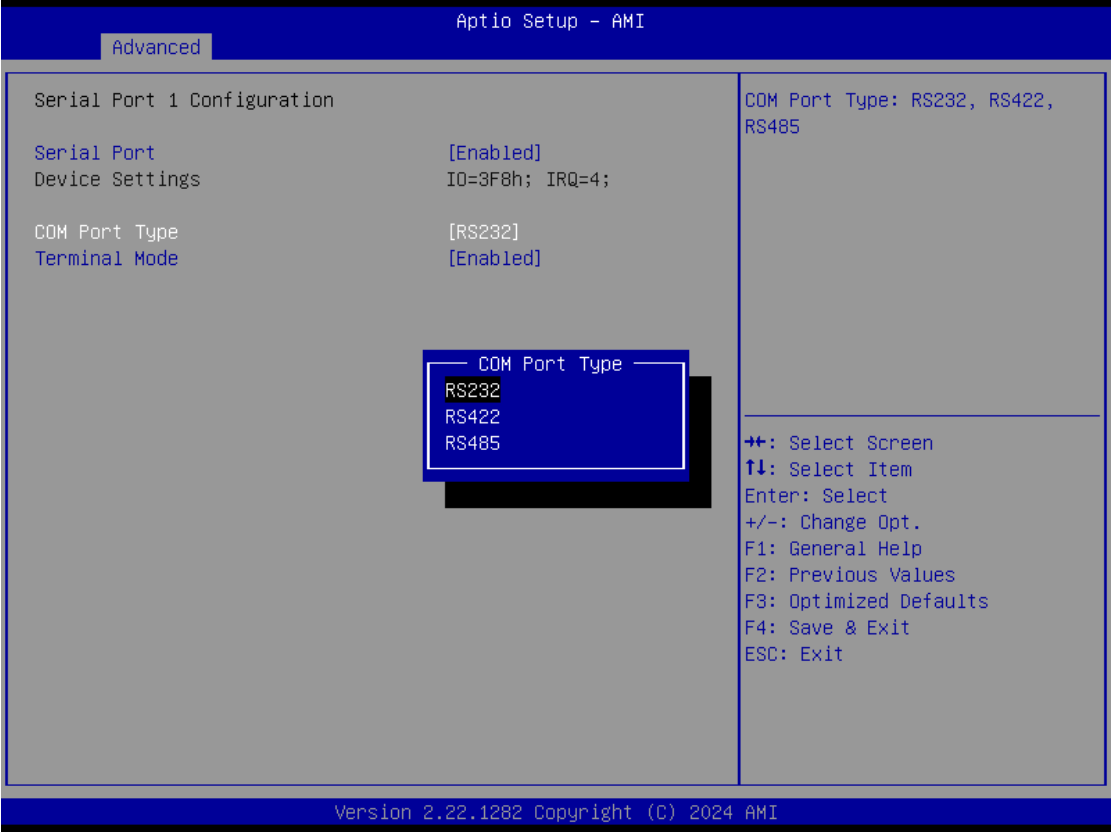

● **Hardware Monitor**

This screen shows the Hardware Health Configuration.

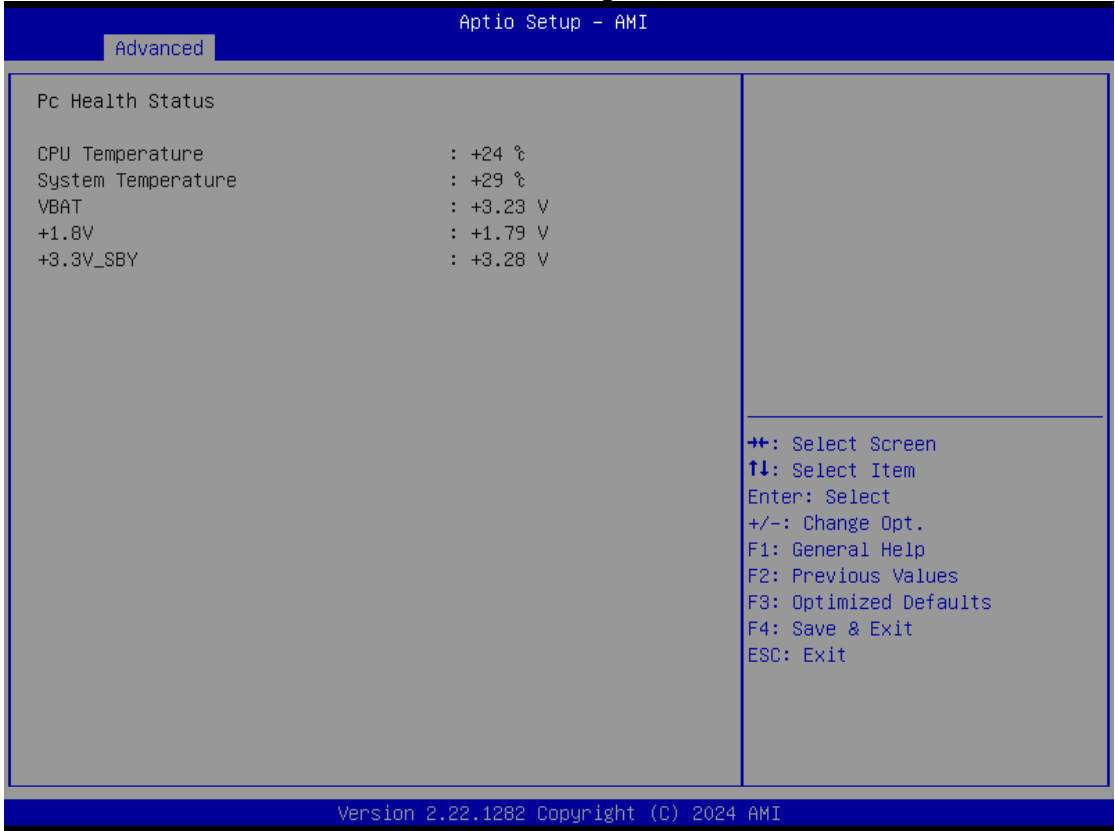

- **Smart Ignition Configuration**

Press Enter to access the sub-menu. Calculated based on the 24-hour military-time clock.

Aptio Setup - AMI		
Advanced		
Smart Ignition Management		Change power mode Enabled : In-Vehicle Disabled : AT/Railway *PSU and system would reset after save setting
Manufacturer	Axiomtek	
Model	MI0307	
Firmware Version	V101	
PSU State	System On	
Power Mode	AT Mode	
Vin Voltage(V)	23.3	
IGN Signal	Off	
Shutdown Delay Timer (IGN Off)	00:00:02	
Shutdown Delay Timer (Low Voltage)	00:03:00	
Ignition Management	[Disabled]	⇐: Select Screen ⇕: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Auto Power On	[Enabled]	
▶ Advance Setting		
▶ Save Settings		
▶ Restore Factory Settings		
Version 2.22.1282 Copyright (C) 2024 AMI		

BIOS menu item	Description
Ignition Management	Enabled Switch to In-Vehicle mode *Note: IGN signal will only be triggered when M12 pin5 IGN is connected to VCC, ignition power or ignition control signal. Disabled Switch to AT/Railway mode *Note: System will be reset after the Ignition Management setting has been changed and saved. If you want to use IGN signal, please go to the advance setting menu to enable the IGN Trigger option and go back to the previous menu and select save settings to save the changes.
Auto Power On	Enabled The system will turn on automatically under the following conditions. - Manually disconnect and reconnect system power - Power interruption: Resume power after power failure Disabled The system will not turn on automatically when power is connected or when power resumes from a power failure.
Advance Setting	Set system on/off timing and voltage threshold levels
Save Settings	Save the current settings
Restore Factory Settings	Restores factory defaults to remove any incorrect or corrupt settings that might have prevented the system from properly powering on/off.

Aptio Setup - AMI		
Advanced		
<pre> ===== Voltage ===== Activate Voltage Trigger(V) 16 Low Voltage Trigger(V) 14 Shutdown Delay Timer (Low Voltage) Minuim Timer 00:01:00 Maximum Timer 03:00:00 Hour 0 Minute 3 Second 0 ===== IGN Function ===== IGN Trigger [Disabled] </pre>		<p>The counter will be activated once power source voltage is smaller than the value of [Low Voltage Trigger], then, system will be forced to turn off when time's up</p>
		<pre> **+: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit </pre>
Version 2.22.1282 Copyright (C) 2024 AMI		

Aptio Setup - AMI		
Advanced		
<pre> ===== Voltage ===== Activate Voltage Trigger(V) 16 Low Voltage Trigger(V) 14 Shutdown Delay Timer (Low Voltage) Minulium Timer 00:01:00 Maximum Timer 03:00:00 Hour 0 Minute 3 Second 0 ===== IGN Function ===== IGN Trigger [Enabled] System Turn On Delay Timer(IGN On) Minulium Timer 00:00:02 Maximum Timer 00:30:00 Hour 0 Minute 0 Second 2 Shutdown Delay Timer (IGN Off) Minulium Timer 00:00:01 Maximum Timer 06:00:00 Hour 0 Minute 0 Second 2 </pre>		<p>Enable : IGN signal would trigger [System Turn On Delay] and [Shutdown Delay] Disable: IGN signal would not affect any power managment</p>
		<pre> **+: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit </pre>
Version 2.22.1288 Copyright (C) 2023 AMI		

BIOS menu item	Description
Activate Voltage Trigger	The system turns on when the voltage delivered by the power source is higher than the value you set here.
Low Voltage Trigger	The system will begin the countdown once voltage drops below the value you set here. If the power source voltage does not return to the value higher than [Activate Voltage Trigger] within the time you set for [Shutdown Delay Time (Low Voltage)], the system will shut down and remain off.
Shutdown Delay Timer (Low Voltage)	The timer will be activated once power source voltage drops below the value defined in [Low Voltage Trigger]. The system will be forced to turn off once the timer completes countdown.
IGN Trigger	Enable [System Turn On Delay] and [Shutdown Delay] will be triggered by IGN. Disable IGN signal will not affect any power management.
System Turn On Delay Timer (IGN On)	When receiving the IGN signal, the system will be turned on after setup time is counted down. The counter will be reset if IGN is off and on during the system countdown time.
Shutdown Delay Timer (IGN Off)	When IGN goes off while the system is normally operating, the system will be shut down after the shutdown timer has been counted completely which has been set by the user. Additionally, if power source voltage is lower than the setup value it will cause the system to turn off as well.



Note: Please refer to **APPENDIX B** for setting the motion in OS application.

- **Trusted Computing**

This sub-menu will allow you to enable/disable Trusted Platform Module (TPM) support and to configure the TPM State. Select Trusted Computing and press Enter to access the sub-menu.

Select the Security Device Support item to enable the TPM device.



● CPU Configuration

This screen shows the CPU configuration, and you can change the value of the selected option.

Aptio Setup - AMI		
Advanced		
CPU Configuration		When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.
Type	Intel Atom(R) x6425E Processor @ 2.00GHz	
ID	0x90661	
Speed	2000 MHz	
L1 Data Cache	32 KB x 4	
L1 Instruction Cache	32 KB x 4	
L2 Cache	1536 KB x 4	
L3 Cache	4 MB	
L4 Cache	N/A	
VMX	Supported	
SMX/TXT	Not Supported	++: Select Screen ↑↓: Select Item Enter: Select +/-: Change Opt. F1: General Help F2: Previous Values F3: Optimized Defaults F4: Save & Exit ESC: Exit
Package C State Limit	[Auto]	
Intel (VMX) Virtualization Technology	[Enabled]	
Intel(R) SpeedStep(tm)	[Enabled]	
Turbo Mode	[Enabled]	
Configurable TDP Boot Mode	[Nominal]	
Disable Turbo GT frequency	[Disabled]	
Boot performance mode	[Max Non-Turbo Performance]	

Version 2.22.1282 Copyright (C) 2024 AMI

Intel Virtualization Technology

Enable or disable Intel Virtualization Technology. When enabled, a VMM (Virtual Machine Mode) can utilize the additional hardware capabilities.

It allows a platform to run multiple operating systems and applications independently, hence enabling a computer system to work as several virtual systems.

Intel(R) Speed Shift Technology

Enable or disable Intel Speed Shift Technology support.


Enabling will expose the CPPC v2 interface to allow for hardware-controlled P-states.

Turbo Mode

Enable or disable processor Turbo Mode.

● **Storage Configuration**

During the system boots up, the BIOS automatically detects the presence of SATA devices. In the SATA Configuration menu, you can see all the hardware currently installed in SATA ports.

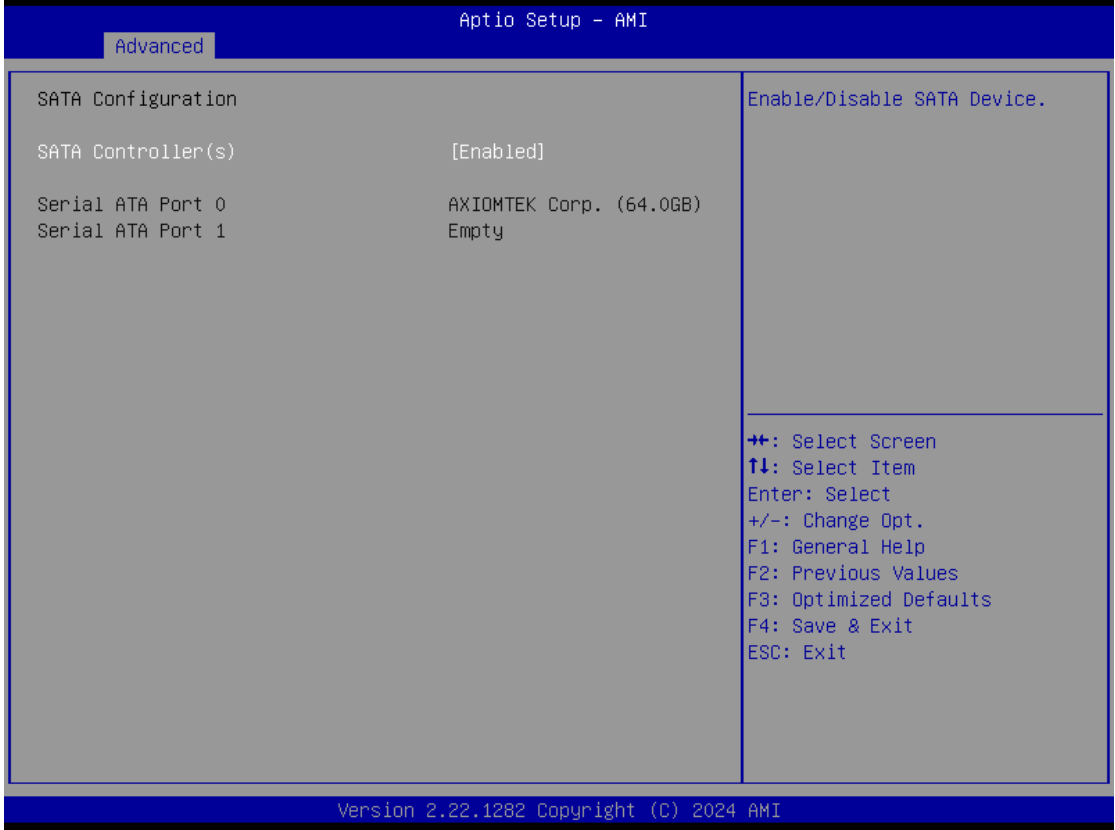


➤ **SATA Controller(s)**

Enable or disable the SATA Controller feature. The default is Enabled.


● **Memory Configuration**

Display memory information with the system.

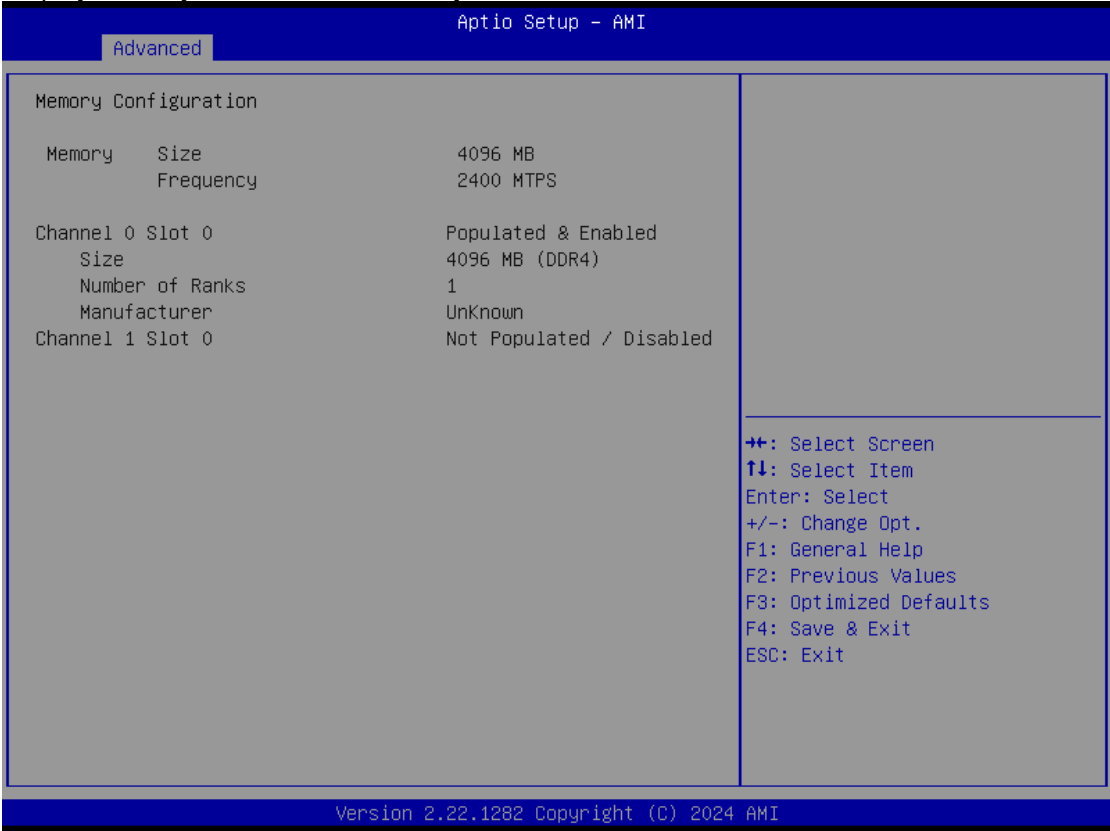


● **USB Configuration**

Display all detected USB devices.

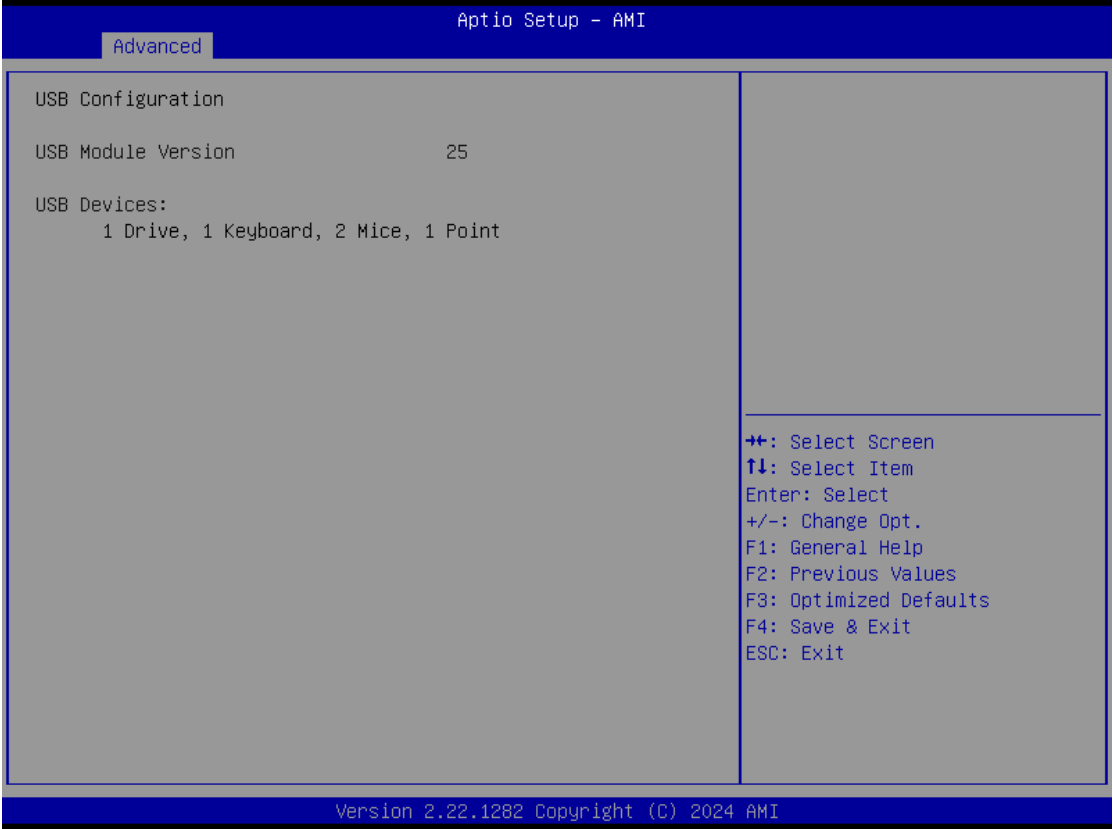


● **Device Configuration**

You can use this screen to select options for the 8-bit Digital I/O Configuration. A description of the selected item appears on the right side of the screen. For items marked with “▶”, please press for more options.

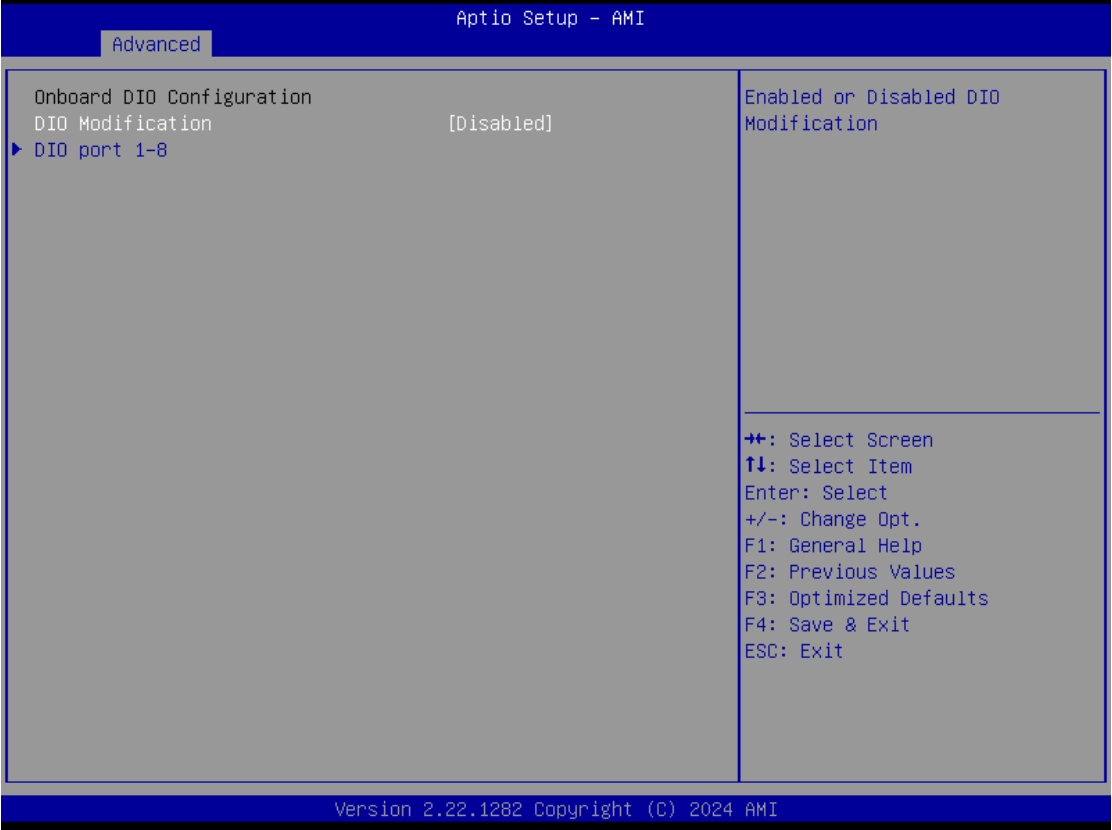

DIO Modification

Enable or disable digital I/O modification. If modification is disabled, the DIO status sub screen is as follows:

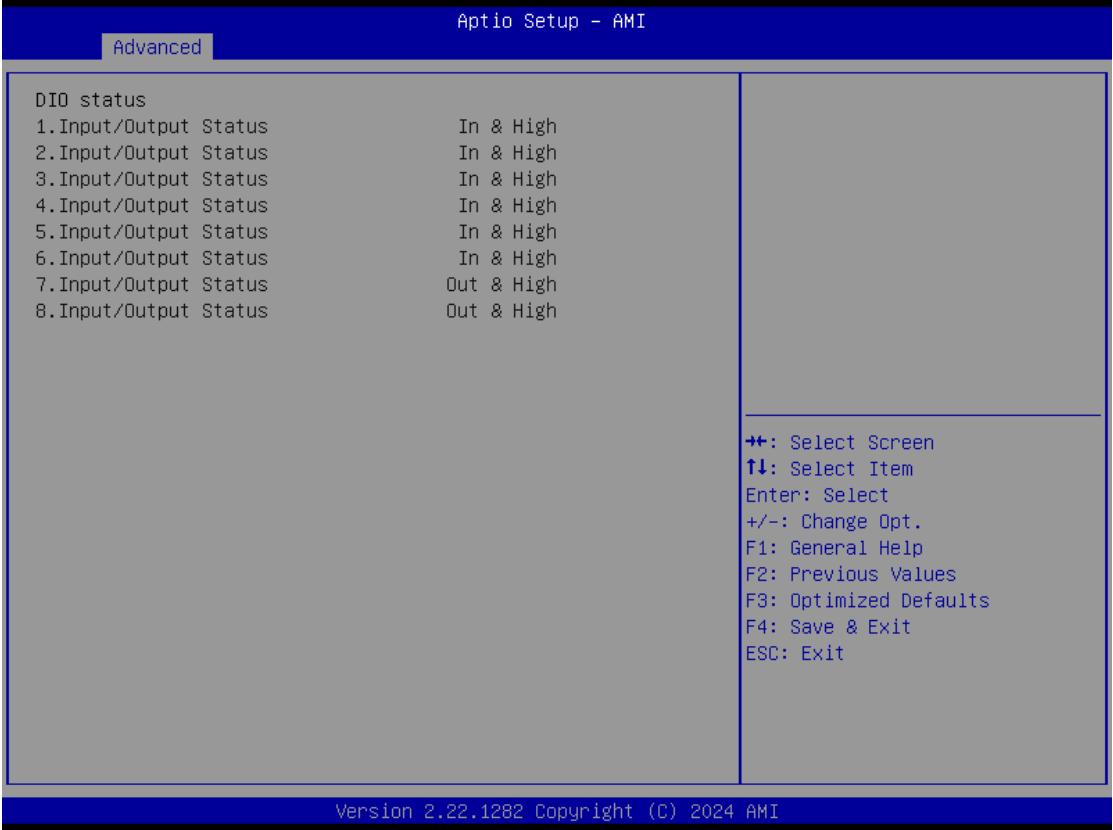

Once it is enabled, you can load manufacture default and access to the DIO status sub screen to set output or input, see image below.


3.4 Chipset Menu

System Agent (SA) Configuration

This screen shows the memory information.


PCH-IO Configuration

You can use this screen to select options for the LVDS Configuration.

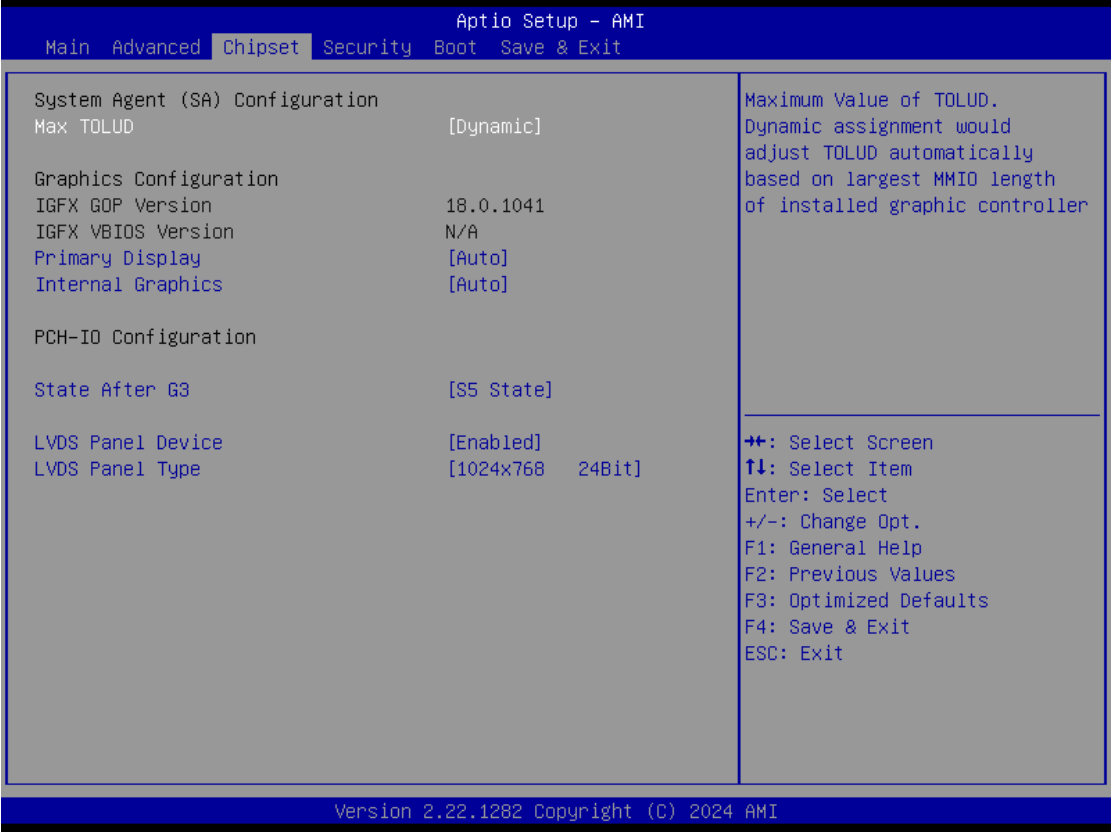

3.5 Security Menu

The security menu allows users to change the security settings for the system.

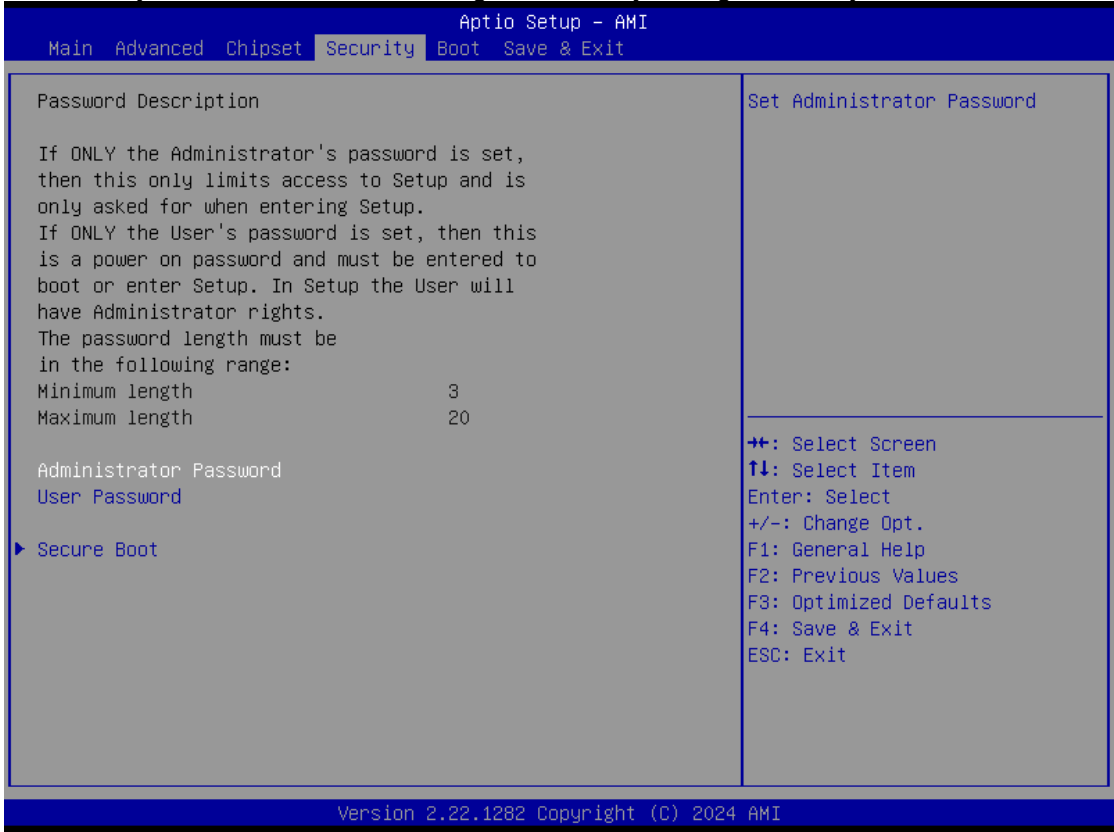

- Administrator Password
This item indicates whether an administrator password has been set (installed or uninstalled).
- User Password
This item indicates whether a user password has been set (installed or uninstalled).

● Secure Boot



Secure Boot feature is Active if Secure Boot is Enabled, Platform Key (PK) is enrolled, and the System is in User mode. The mode change requires platform reset.

Secure Boot Mode

Secure Boot mode options: Standard or Custom. In Custom mode, Secure Boot Policy variables can be configured by a physically present user without full authentication.

Restore Factory Keys


Force the system into User Mode. Install factory default Secure Boot key databases.

Key Management

Enables expert users to modify Secure Boot Policy variables without full authentication.

3.6 Boot Menu

The Boot menu allows users to change boot options of the system. You can select any of the items in the left frame of the screen to go to the sub menus:

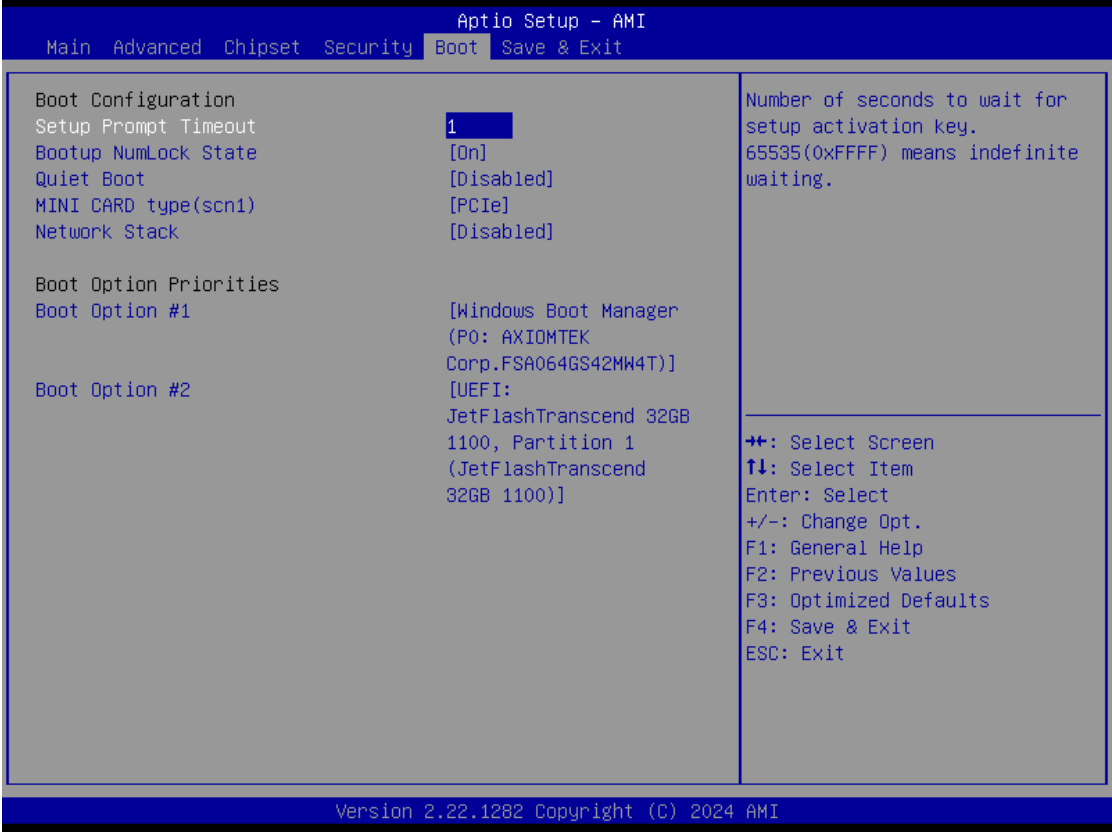

Setup Prompt Timeout

Set the Timeout for wait press key to enter Setup Menu

Bootup NumLock State

Use this item to select the power-on state for the NumLock. The default setting is on.

Quiet Boot

Use this item to enable or disable the Quite Boot state. The default setting is disable.

MINI CARD type (SCN1)

Set PCI-Express Mini Card (SCN3) to work as PCIe or mSATA. The default is PCIe.

Network Stack


Use this item to enable or disable the PXE boot Execution Environment. The default setting is disable.

Boot Option Priorities

Specifies the overall boot order from the available devices.

3.7 Save & Exit Menu

The Save & Exit menu allows users to load your system configuration with optimal or fail-safe default values.

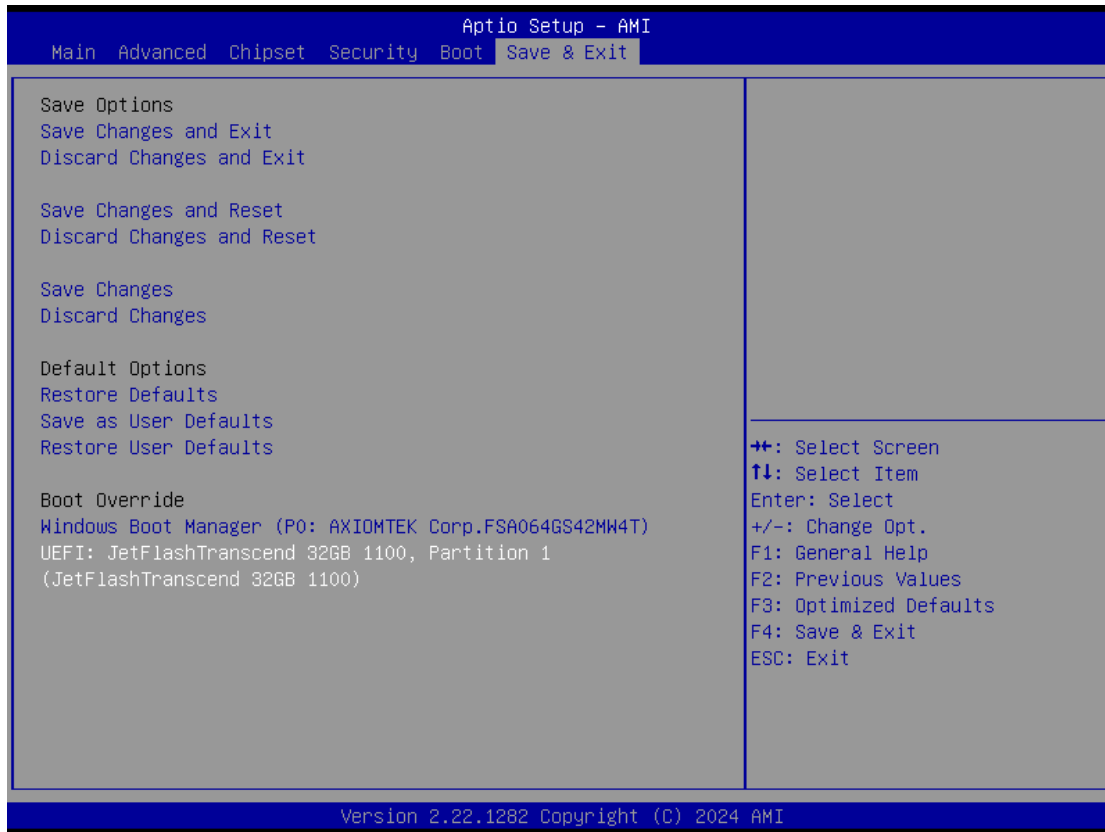

Save Changes and Exit

When you have completed the system configuration changes, select this option to leave Setup and return to Main Menu. Select Save Changes and Exit from the Save & Exit menu and press <Enter>. Select Yes to save changes and exit.

Discard Changes and Exit

Select this option to quit Setup without making any permanent changes to the system configuration and return to Main Menu. Select Discard Changes and Exit from the Save & Exit menu and press <Enter>. Select Yes to discard changes and exit.

Save Changes and Reset

When you have completed the system configuration changes, select this option to leave Set up and reboot the computer so the new system configuration parameters can take effect. Select Save Changes and Reset from the Save & Exit menu and press <Enter>. Select Yes to save changes and reset.

Discard Changes and Reset

Select this option to quit Setup without making any permanent changes to the system configuration and reboot the computer. Select Discard Changes and Reset from the Save & Exit menu and press <Enter>. Select Yes to discard changes and reset.

Save Changes

When you have completed the system configuration changes, select this option to save changes. Select Save Changes from the Save & Exit menu and press <Enter>. Select Yes to save changes.

Discard Changes

Select this option to quit Setup without making any permanent changes to the system configuration. Select Discard Changes from the Save & Exit menu and press <Enter>. Select Yes to discard changes.

Restore Defaults

It automatically sets all Setup options to a complete set of default settings when you select this option. Select Restore Defaults from the Save & Exit menu and press <Enter>.

Save as User Defaults

Select this option to save system configuration changes done so far as User Defaults. Select Save as User Defaults from the Save & Exit menu and press <Enter>.

Restore User Defaults

It automatically sets all Setup options to a complete set of User Defaults when you select this option. Select Restore User Defaults from the Save & Exit menu and press <Enter>.

Boot Override

Select a drive to immediately boot that device regardless of the current boot order

Appendix A

Watchdog Timer

A.1 About Watchdog Timer

After the system stops working for a while, it can be auto reset by the watchdog timer. The integrated watchdog timer can be set up in the system reset mode by program.

A.2 How to Use Watchdog Timer

```
#include <stdio.h>
#include <conio.h>
#include <stdlib.h>
#include <dos.h>

#define AXIOM_WDT_TIMER          0xFA10
#define AXIOM_WDT_TRIGGER       0xFA12

void main()
{
    unsigned long int    DefaultTimer = 0xFFFF; // 65535 Seconds
    unsigned long int    CurrentWdtTimer = 0;

    clrscr();

    outportw(AXIOM_WDT_TIMER, DefaultTimer); // Set WDT Timer, maximum is
65535 Seconds
    printf("Set WDT Timer to: %ld Seconds\n", DefaultTimer);

    outportb(AXIOM_WDT_TRIGGER, 0x01); // 0x01: Enabled WDT, 0x00: Disabled
WDT
    printf("Enabled WDT Timer\n");

    while(1)
    {
        clrscr();
        CurrentWdtTimer = inportw(AXIOM_WDT_TIMER); // Get current WDT
Timer


        printf("Set WDT Timer to: %ld Seconds\n", DefaultTimer);
        printf("Current WDT Timer: %ld Seconds\n", CurrentWdtTimer);
        delay(1000);
    }
}
```

Appendix B


WINDOWS POWER BUTTON SETTING


Please enter the power button setting through the PC console, and then follow the steps below to complete the setting.

Step-1

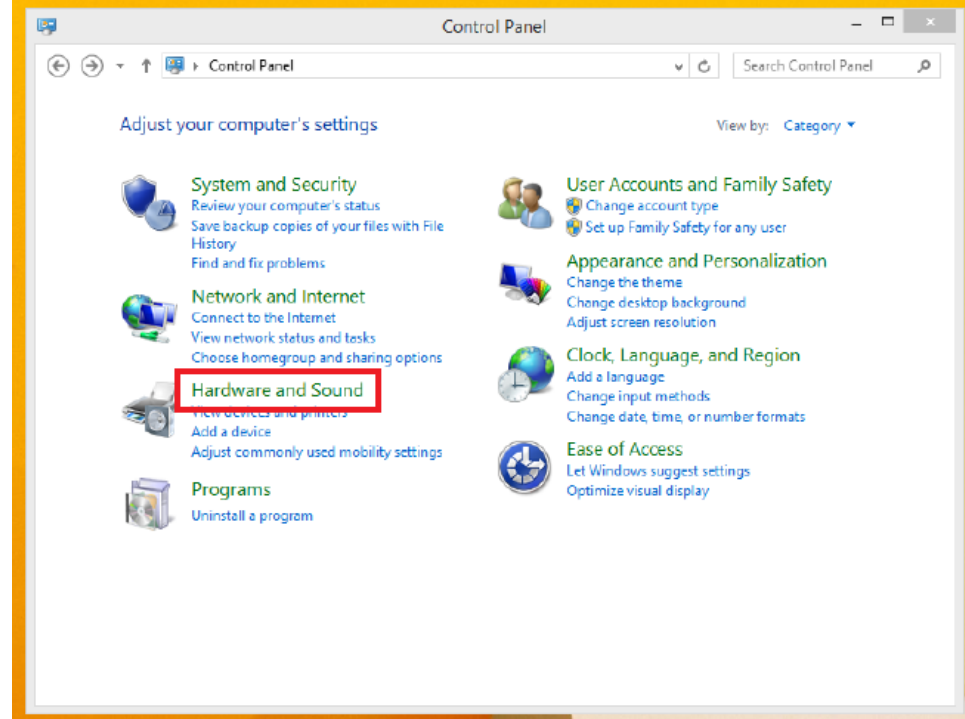


Step-2

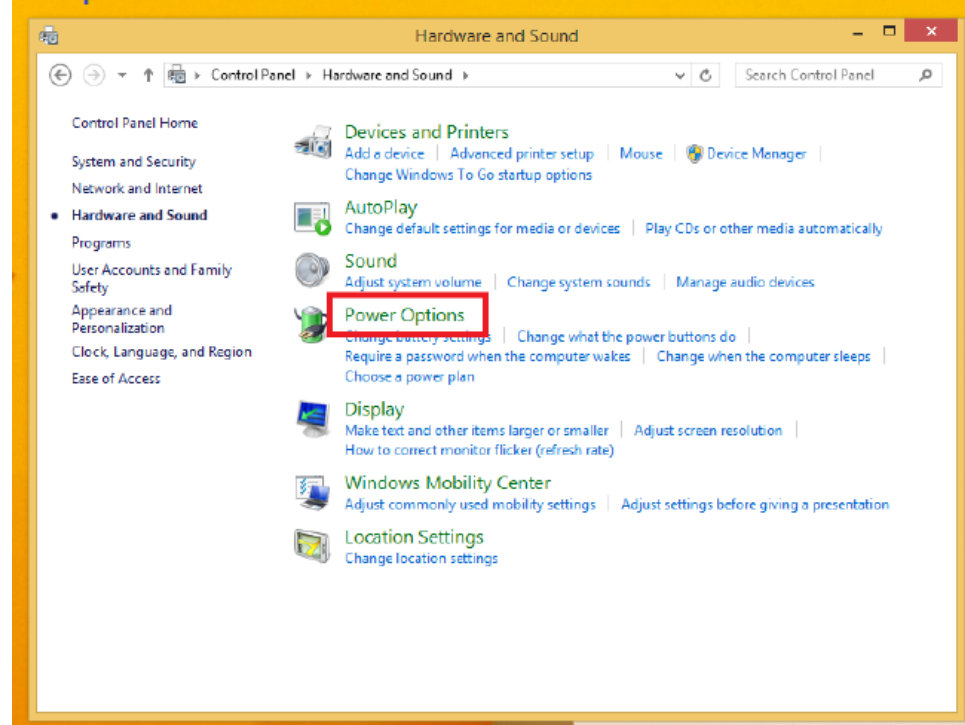


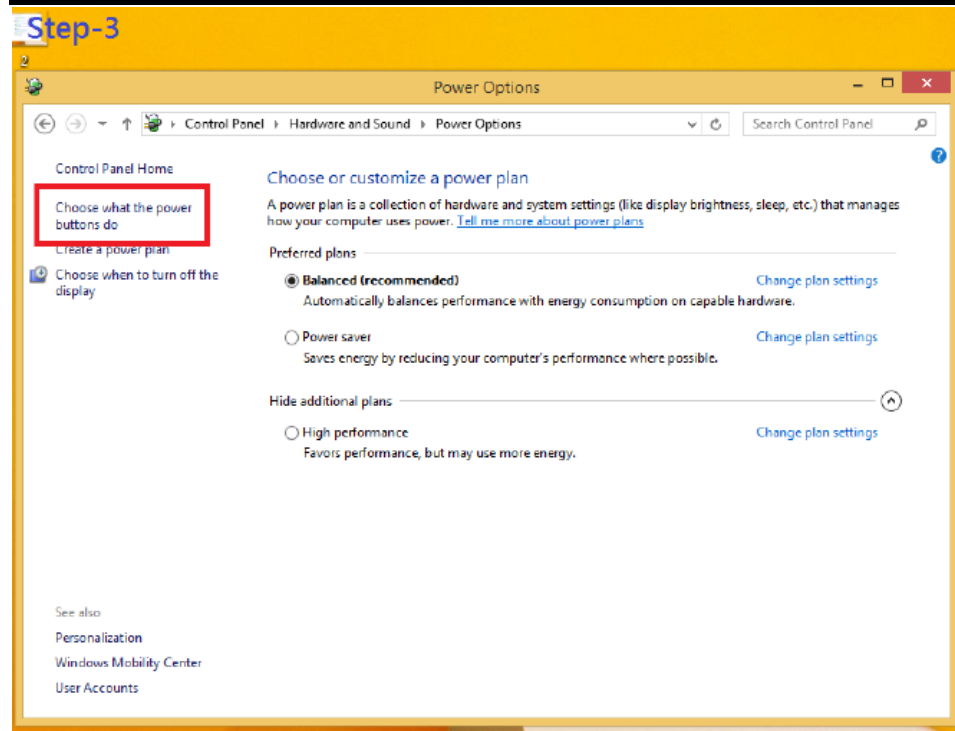

When IGN function has been used, the power button's setting must be switched to "Shut down" as below. Then the system can be shut down normally, after IGN has been turned off.

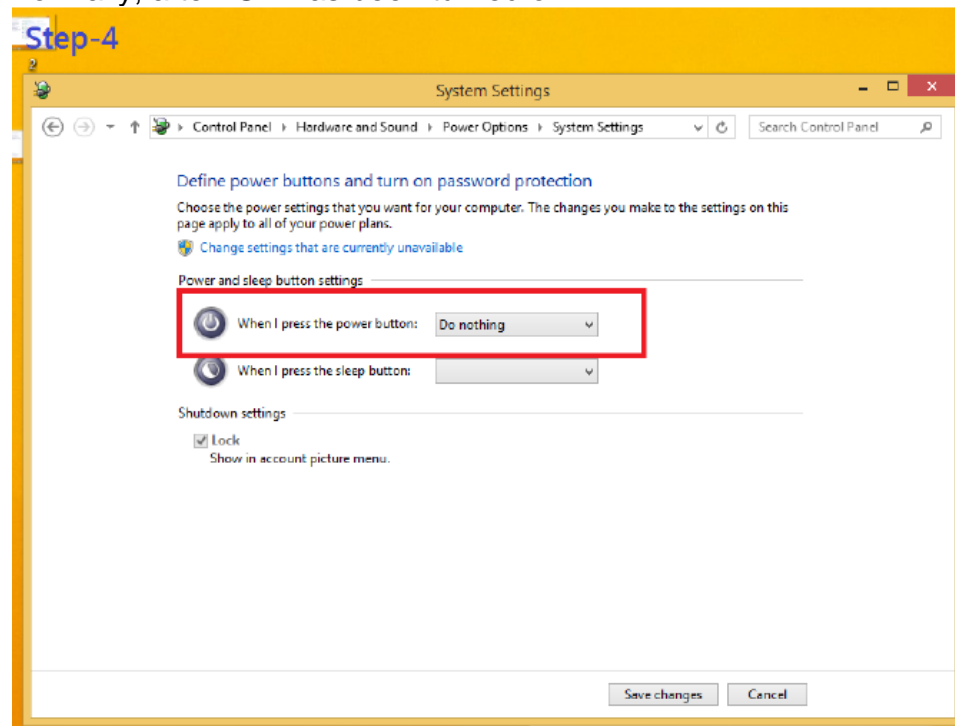

Step-5

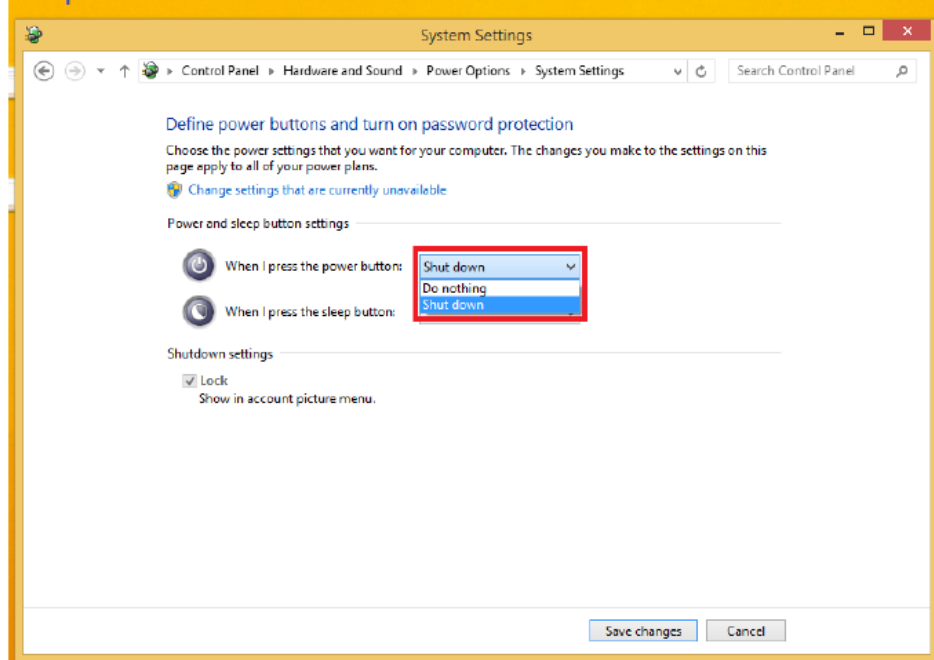

Step-6

